


REV	REVISION	DATE	ECN	NAME	CHKD
B-1	RELEASE TO PRODUCTION	01/05/24	PXEC0481	KMD	JRD
F-1	ADDED USB DRIVE TO HMI	07/21/25	PXEC0668	JRD	STK
G-1	PLEX ISOLATION UPDATES	06/18/25	PXEC0639	WMM	SEK

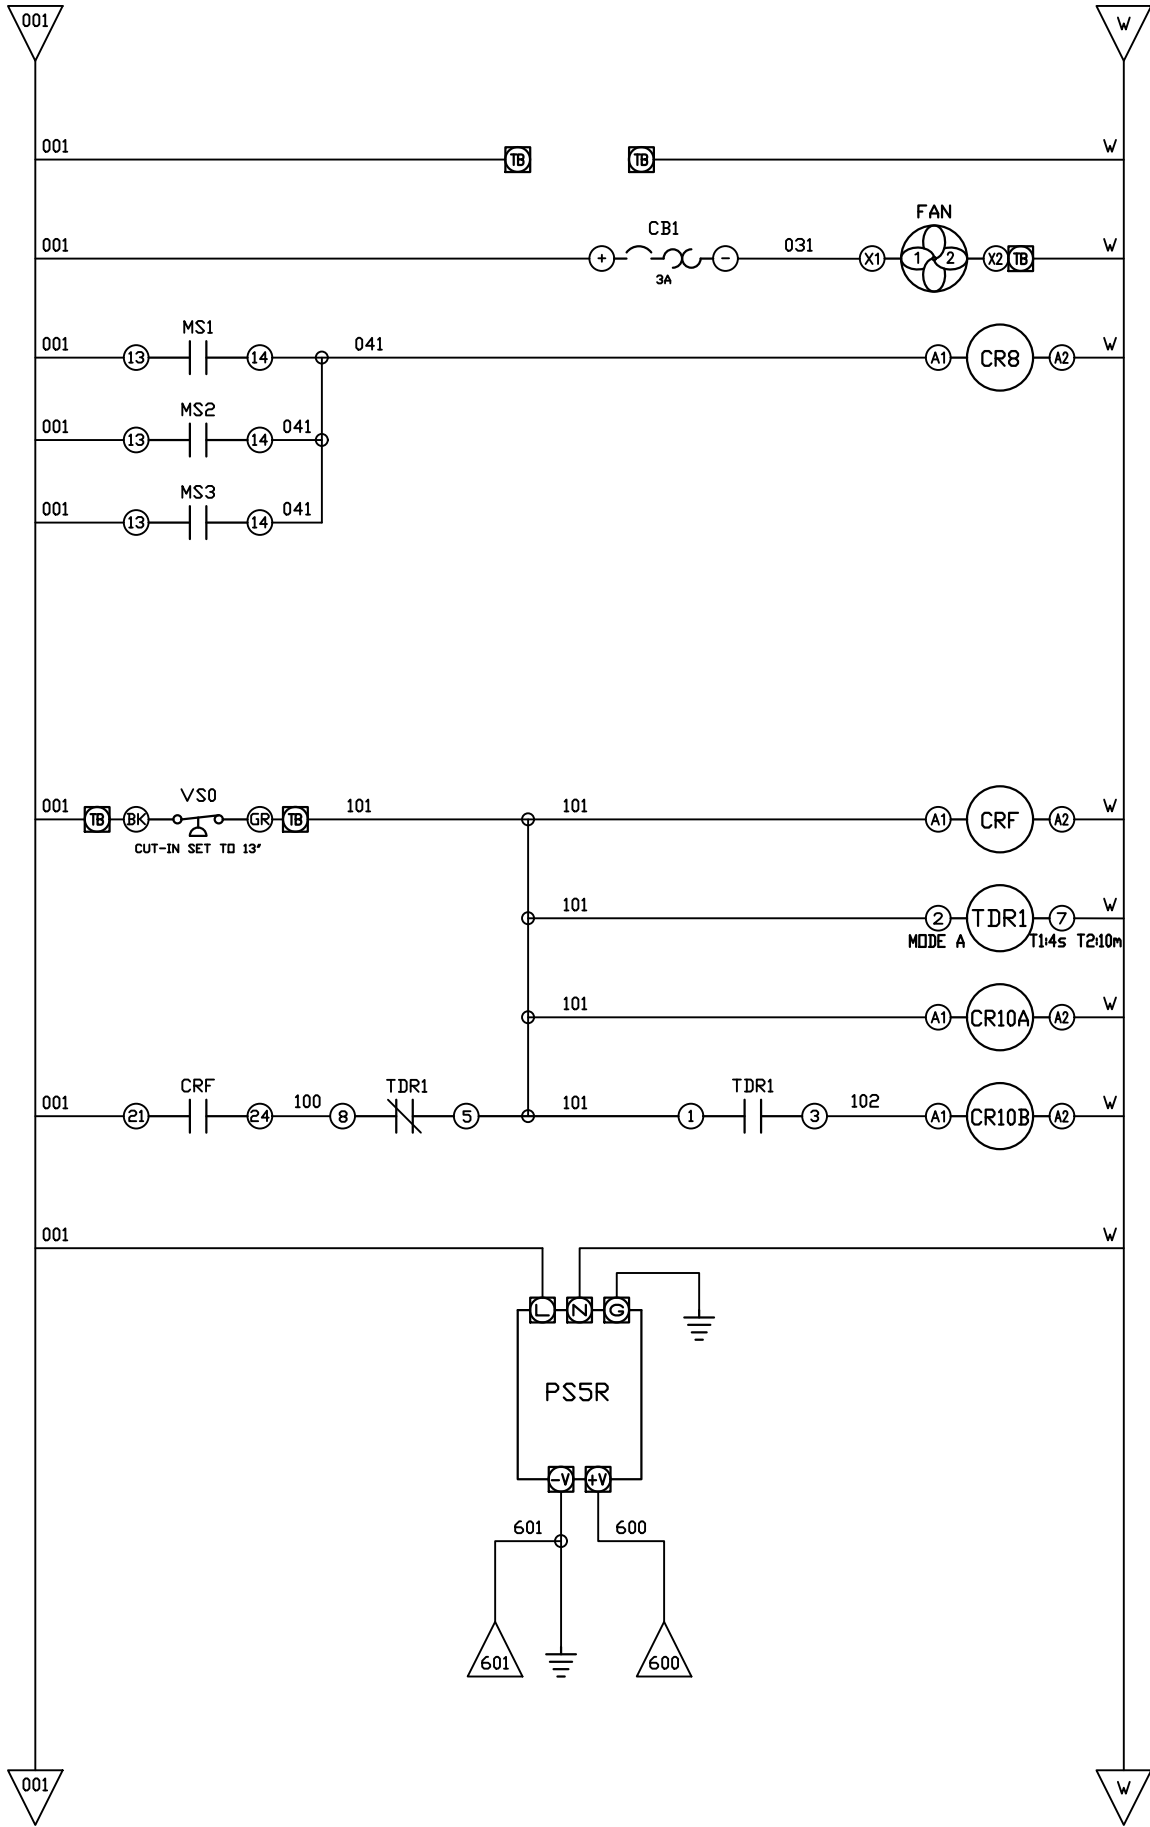

02
120VAC
DEVICE POWER

03
ENCL FAN
POWER

04
3-PHASE FAN
POWER
CR8 44 48

10
LOW VACUUM BACKUP
HARD WIRE BACKUP
CRF 10 63

BACKUP DELAY START
& MINIMUM RUN TIMER
TDR1 10 10

PLEX ON
AFTER 0-SEC
CR10A 111 121

PLEX ON
AFTER 4-SEC
CR10B 131

60
24 VOLT DC
POWER SUPPLY
30W PS5R

OPTIONAL:

POWEREX™

CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of
Marnon Specialty Products and is subject to
return on demand. Its contents are confidential
and must not be copied or submitted to outside
parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
KMD	JRD	KMD
01/05/24	01/05/24	01/05/24


PANEL TYPE
VACUUM TRIPLEX ENCL. MASTER
HMI, NFPA

DWG. TYPE
WIRING

DWG. NO.
PBMI-VNE369

SHEET	SIZE
W-2	B

REV	REVISION	DATE	ECN	NAME	CHKD
B-1	RELEASE TO PRODUCTION	01/05/24	PXEC0481	KMD	JRD
F-1	ADDED USB DRIVE TO HMI	07/21/25	PXEC0668	JRD	STK
G-1	PLEX ISOLATION UPDATES	06/18/25	PXEC0639	WMM	SEK

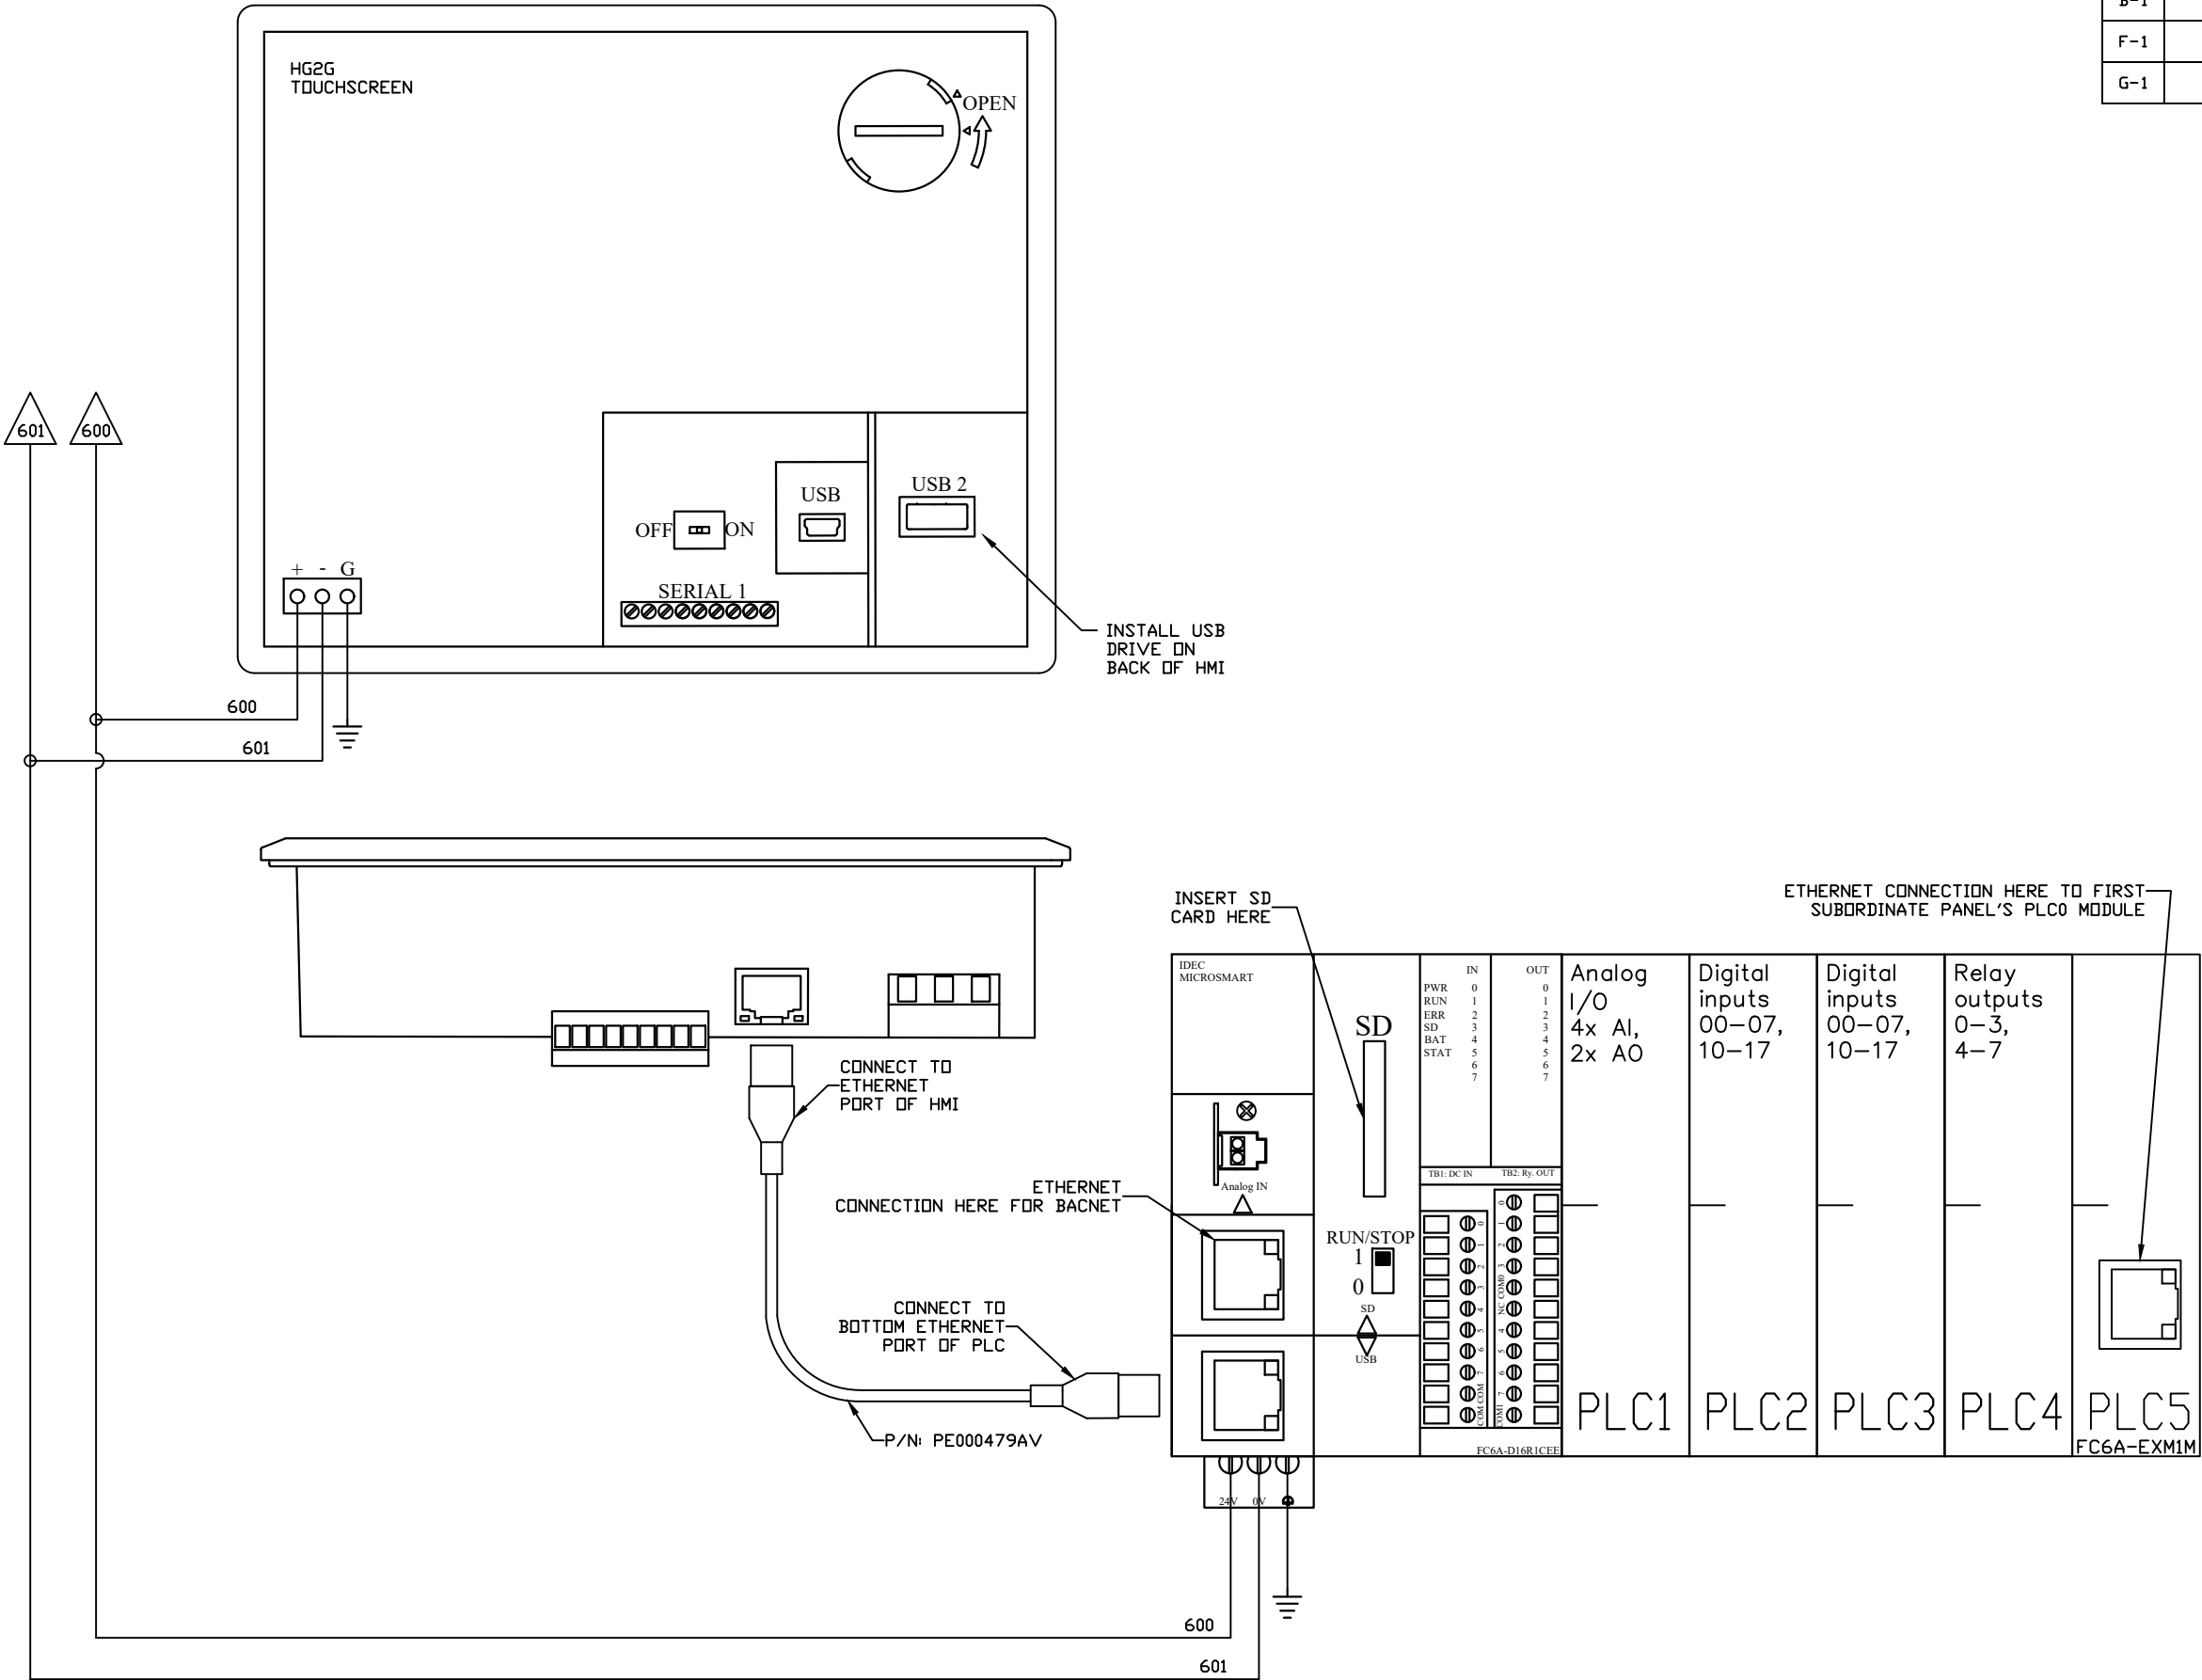

OPTIONAL:

POWEREX™

CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of
Mamnon Specialty Products and is subject to
return on demand. Its contents are confidential
and must not be copied or submitted to outside
parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
KMD	JRD	KMD
01/05/24	01/05/24	01/05/24

PANEL TYPE

VACUUM TRIPLEX ENCL. MASTER
HMI, NFPA

DWG. TYPE WIRING



DWG. NO.

PBMI-VNE369

SHEET	SIZE
W-5	B

PBMI-VNES69

REV	REVISION	DATE	ECN	NAME	CHKD
B-1	RELEASE TO PRODUCTION	01/05/24	PXEC0481	KMD	JRD
F-1	ADDED USB DRIVE TO HMI	07/21/25	PXEC0668	JRD	STK
G-1	PLEX ISOLATION UPDATES	06/18/25	PXEC0639	WMM	SEK

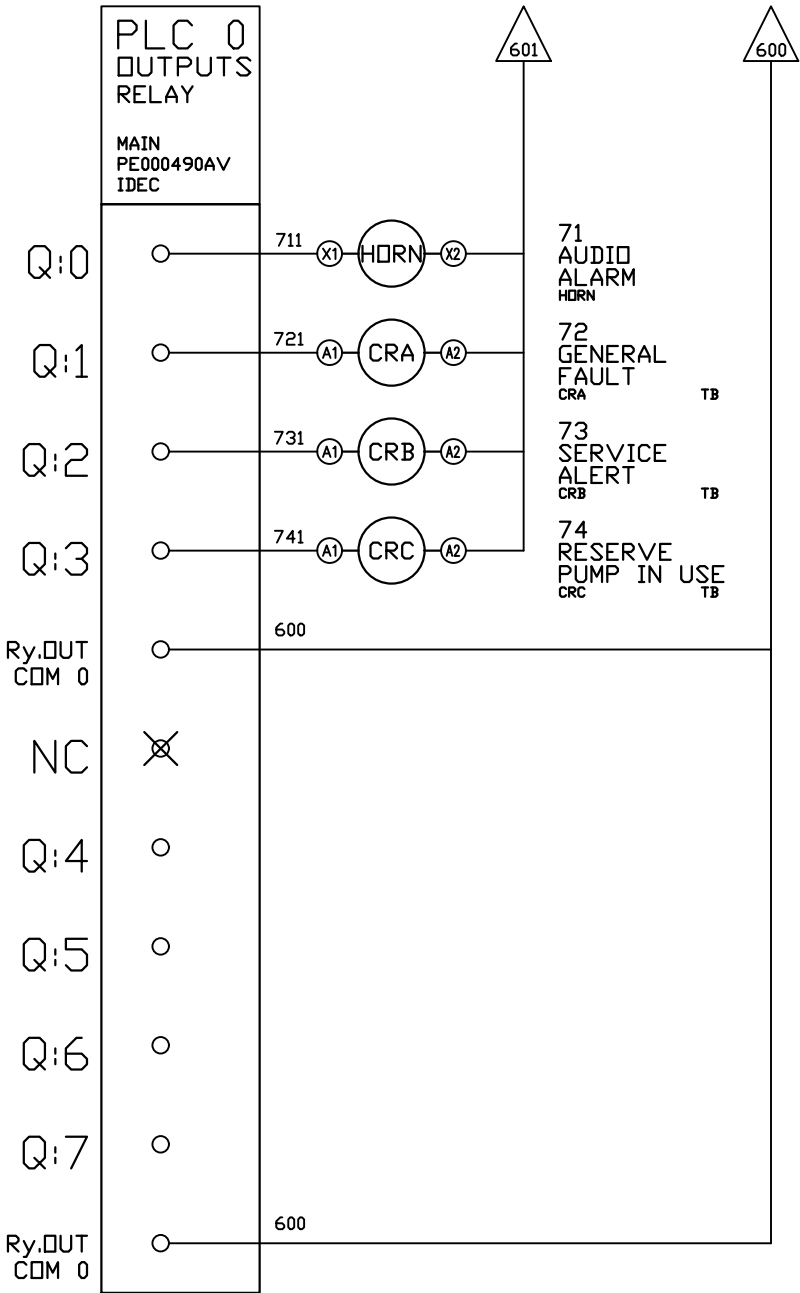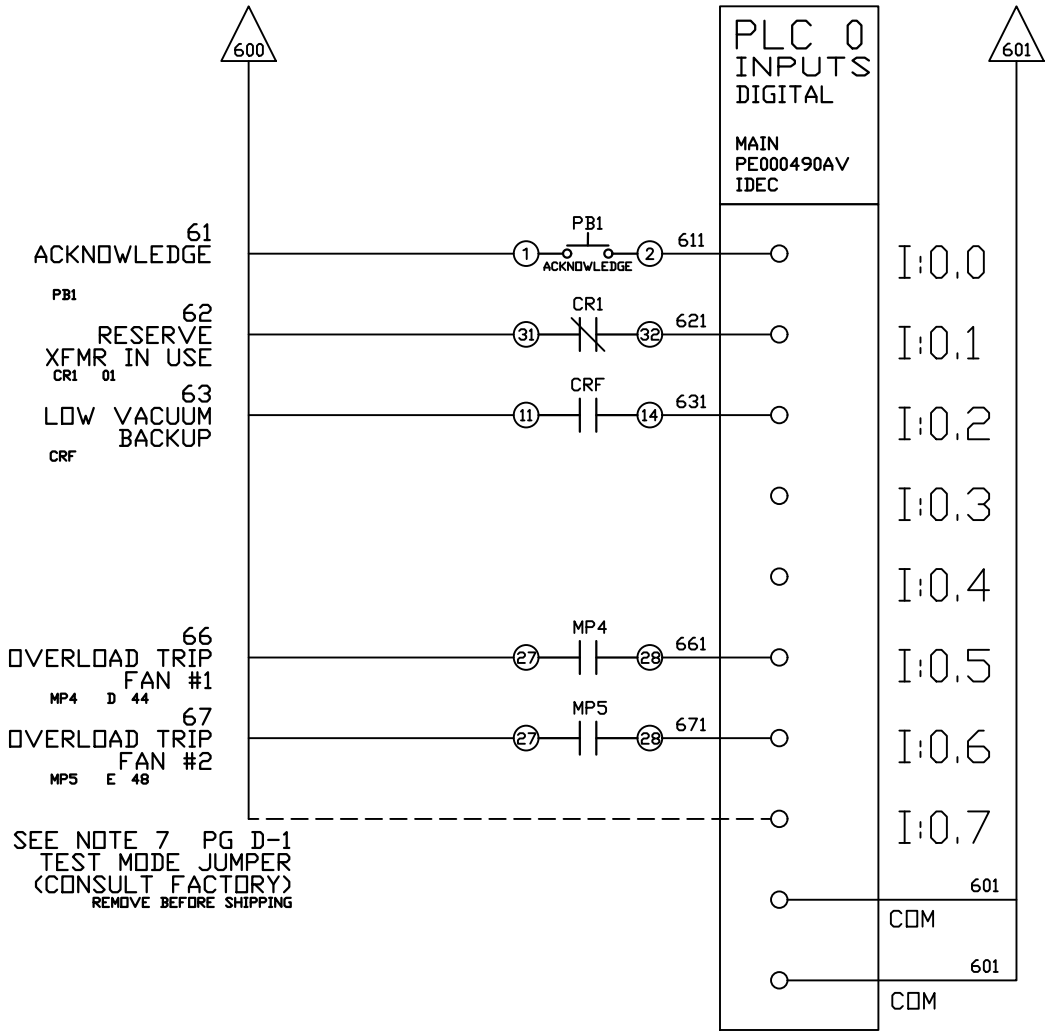

OPTIONAL:

POWEREX™

CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of
Marion Specialty Products and is subject to
return on demand. Its contents are confidential
and must not be copied or submitted to outside
parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
KMD	JRD	KMD
01/05/24	01/05/24	01/05/24

PANEL TYPE

VACUUM TRIPLEX ENCL. MASTER
HMI, NFPA



DWG. TYPE WIRING

DWG. NO.

PBMI-VNE369

SHEET	SIZE
W-6	B

REV	REVISION	DATE	ECN	NAME	CHKD
B-1	RELEASE TO PRODUCTION	01/05/24	PXEC0481	KMD	JRD
F-1	ADDED USB DRIVE TO HMI	07/21/25	PXEC0668	JRD	STK
G-1	PLEX ISOLATION UPDATES	06/18/25	PXEC0639	WMM	SEK

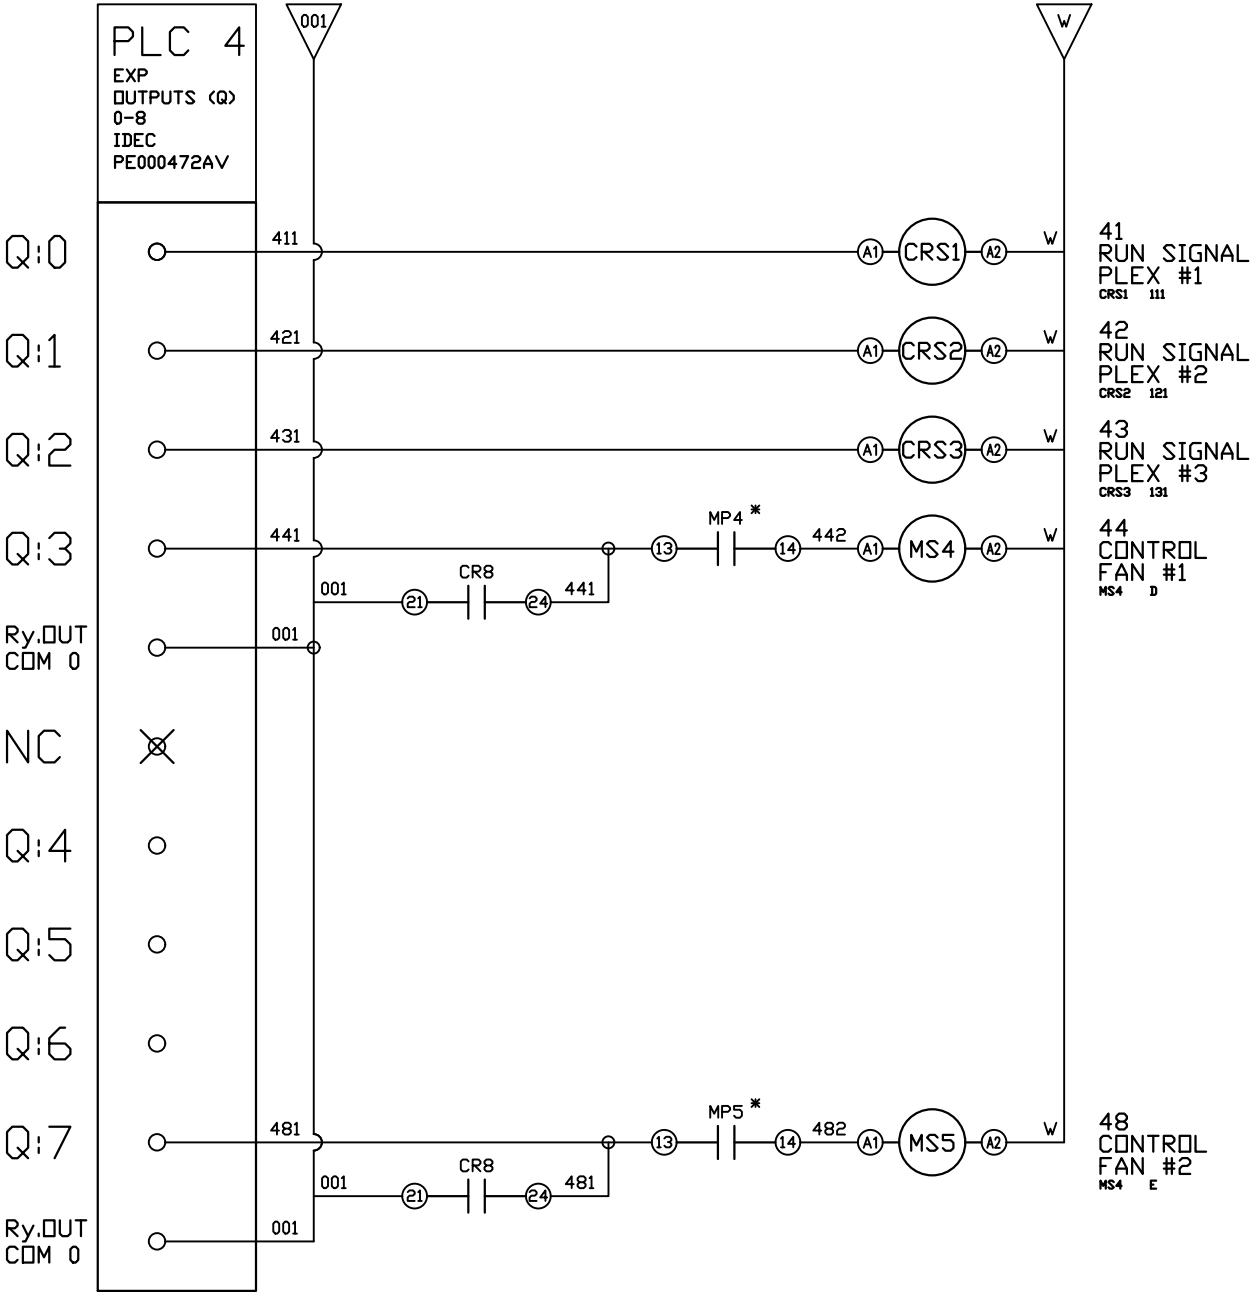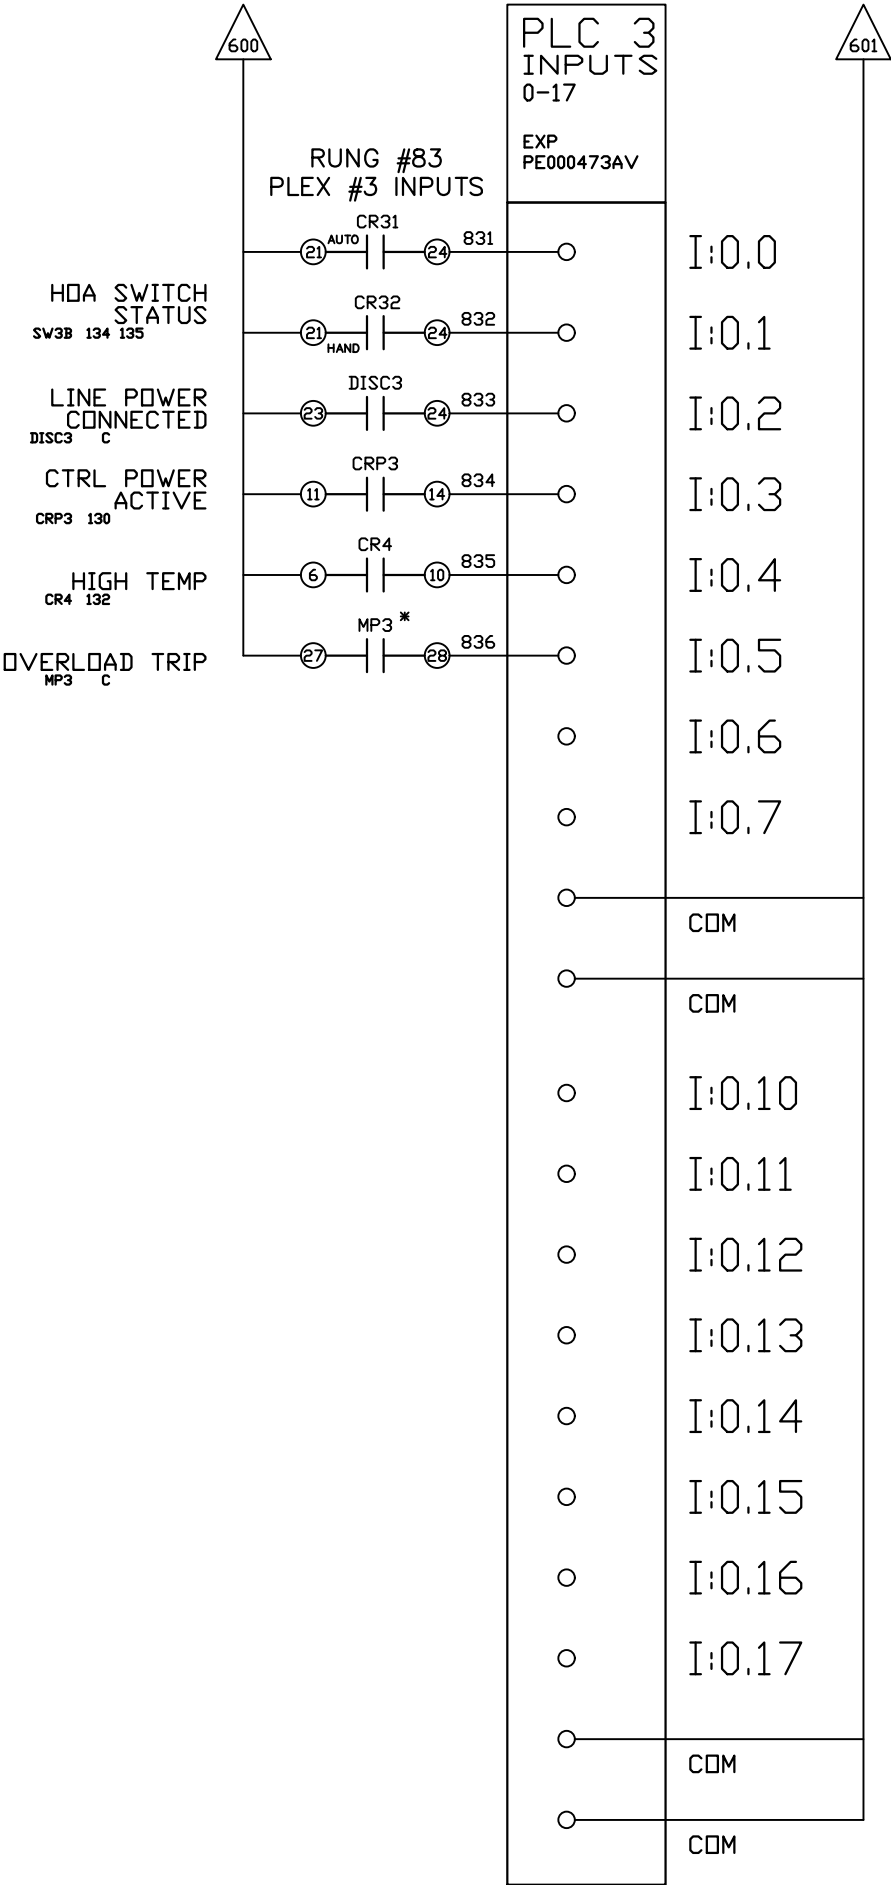

* FOR GV4 MOTOR PROTECTORS USE PINS
#1 AND #4 ON AUX CONTACT IN "OF1" SLOT

OPTIONAL:

POWEREX™

CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of
Marnon Specialty Products and is subject to
return on demand. Its contents are confidential
and must not be copied or submitted to outside
parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
KMD	JRD	KMD
01/05/24	01/05/24	01/05/24

PANEL TYPE

VACUUM TRIPLEX ENCL. MASTER
HMI, NFPA

DWG. TYPE WIRING


DWG. NO.

PBMI-VNE369

SHEET	SIZE
W-8	B

PBMI-VNES69



UPPER TERMINAL BLOCKS

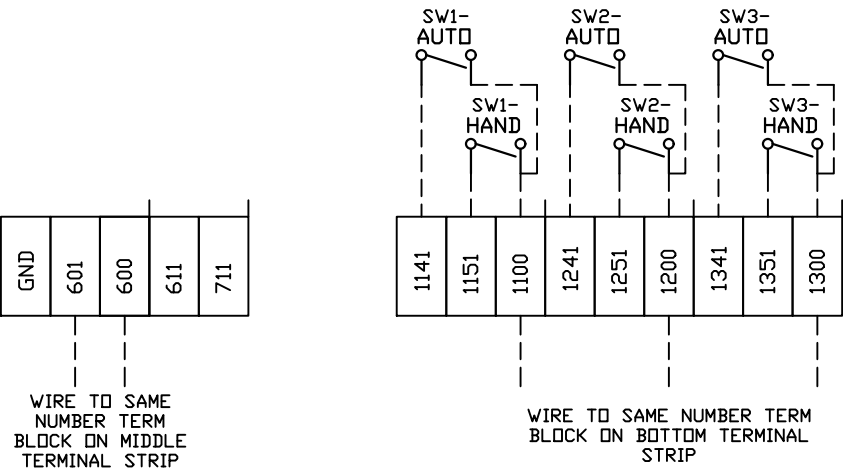


FIELD WIRING NOTES:

- PANEL GROUND MUST BE CONNECTED TO EARTH GROUND
- TRANSFORMER IS SIZED FOR LOADS SHOWN ON DRAWING ONLY.
- FIELD WIRING INDICATED BY -----, WIRE TO BE COPPER RATED AT 75° C.
- ALL ALARM DRY CONTACTS ARE CLOSED FOR NORMAL OPERATION AND OPEN IN ALARM.
- DRY CONTACT RATING: 30V DC/2A (resistive load, inductive load L/R = 7 ms)
- USE CAT-5 CABLE W/RJ45 CONNECTOR FOR ETHERNET CONNECTION TO COMMUNICATION NETWORK OR BAS SYSTEM




MIDDLE TERMINAL BLOCKS

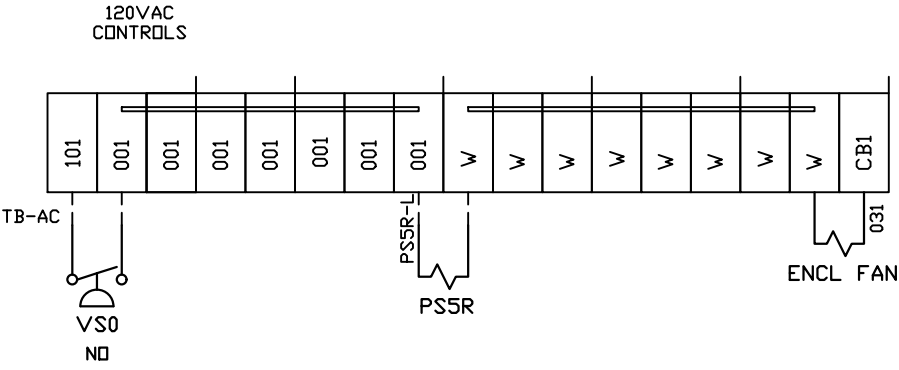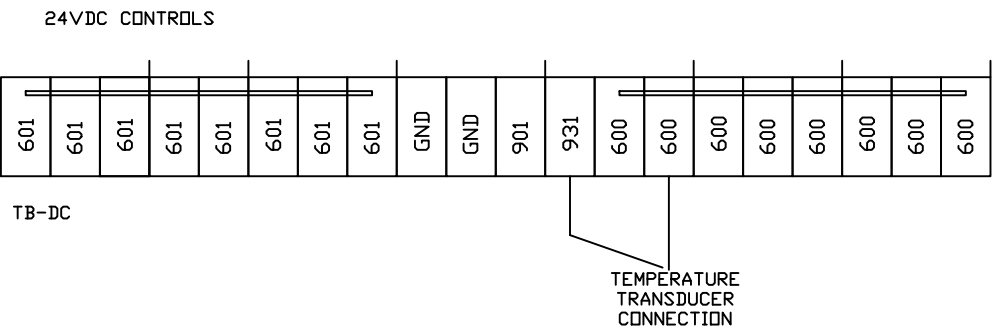

LOWER TERMINAL BLOCKS

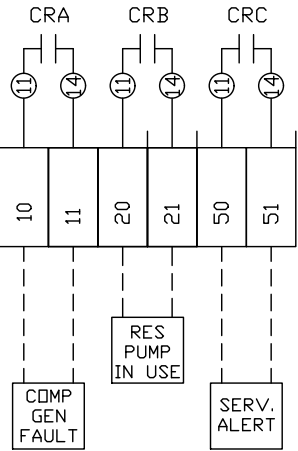

DRY CONTACTS FOR CUSTOMER REMOTE ALARM CONNECTION

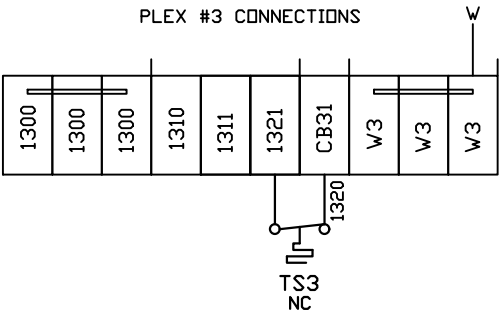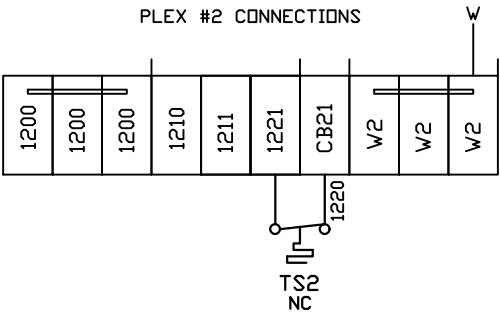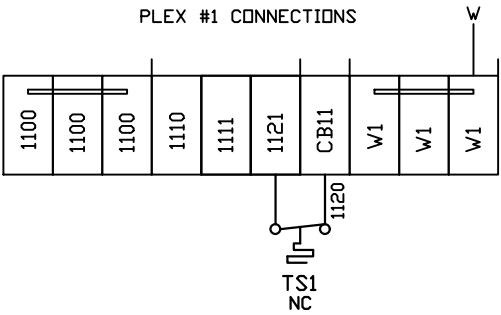

OPTIONAL:

POWEREX

CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of Marmon Specialty Products and is subject to return on demand. Its contents are confidential and must not be copied or submitted to outside parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
KMD	JRD	KMD
01/05/24	01/05/24	01/05/24


PANEL TYPE
VACUUM TRIPLEX ENCL. MASTER HMI, NFPA

DWG. TYPE WIRING

DWG. NO. PBMI-VNE369


SHEET	SIZE
W-9	B

REV	REVISION	DATE	ECN	NAME	CHKD
B-1	RELEASE TO PRODUCTION	01/05/24	PXEC0481	KMD	JRD
F-1	ADDED USB DRIVE TO HMI	07/21/25	PXEC0668	JRD	STK
G-1	PLEX ISOLATION UPDATES	06/18/25	PXEC0639	WMM	SEK

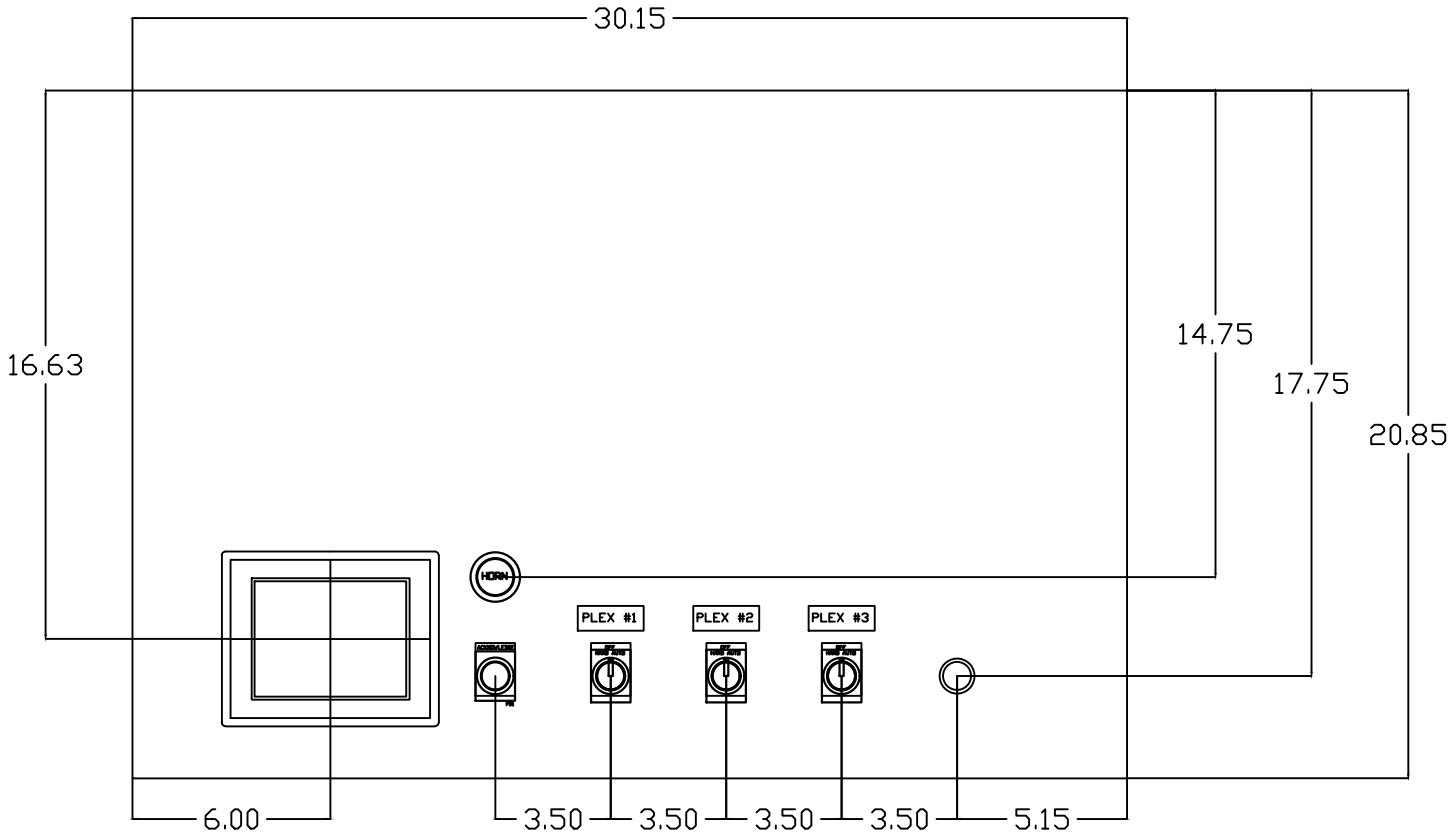

INSTRUMENT PANEL ON FRONT OF ENCLOSURE

RIGHT SIDE OF ENCLOSURE

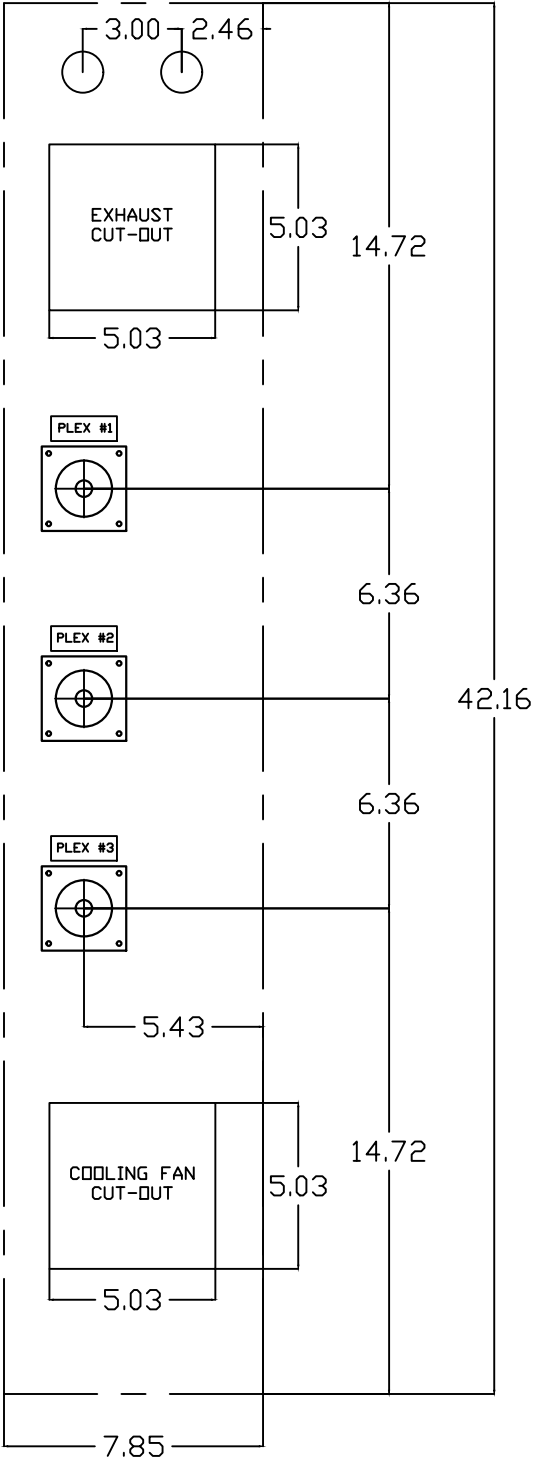

OPTIONAL:

POWEREX™

CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of
Mamnon Specialty Products and is subject to
return on demand. Its contents are confidential
and must not be copied or submitted to outside
parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
KMD	JRD	KMD
01/05/24	01/05/24	01/05/24


PANEL TYPE
VACUUM TRIPLEX ENCL. MASTER
HMI, NFPA

DWG. TYPE LAYOUT

DWG. NO.
PBMI-VNE369

SHEET	SIZE
L-1	B

REV	REVISION	DATE	ECN	NAME	CHKD
B-1	RELEASE TO PRODUCTION	01/05/24	PXEC0481	KMD	JRD
F-1	ADDED USB DRIVE TO HMI	07/21/25	PXEC0668	JRD	STK
G-1	PLEX ISOLATION UPDATES	06/18/25	PXEC0639	WMM	SEK

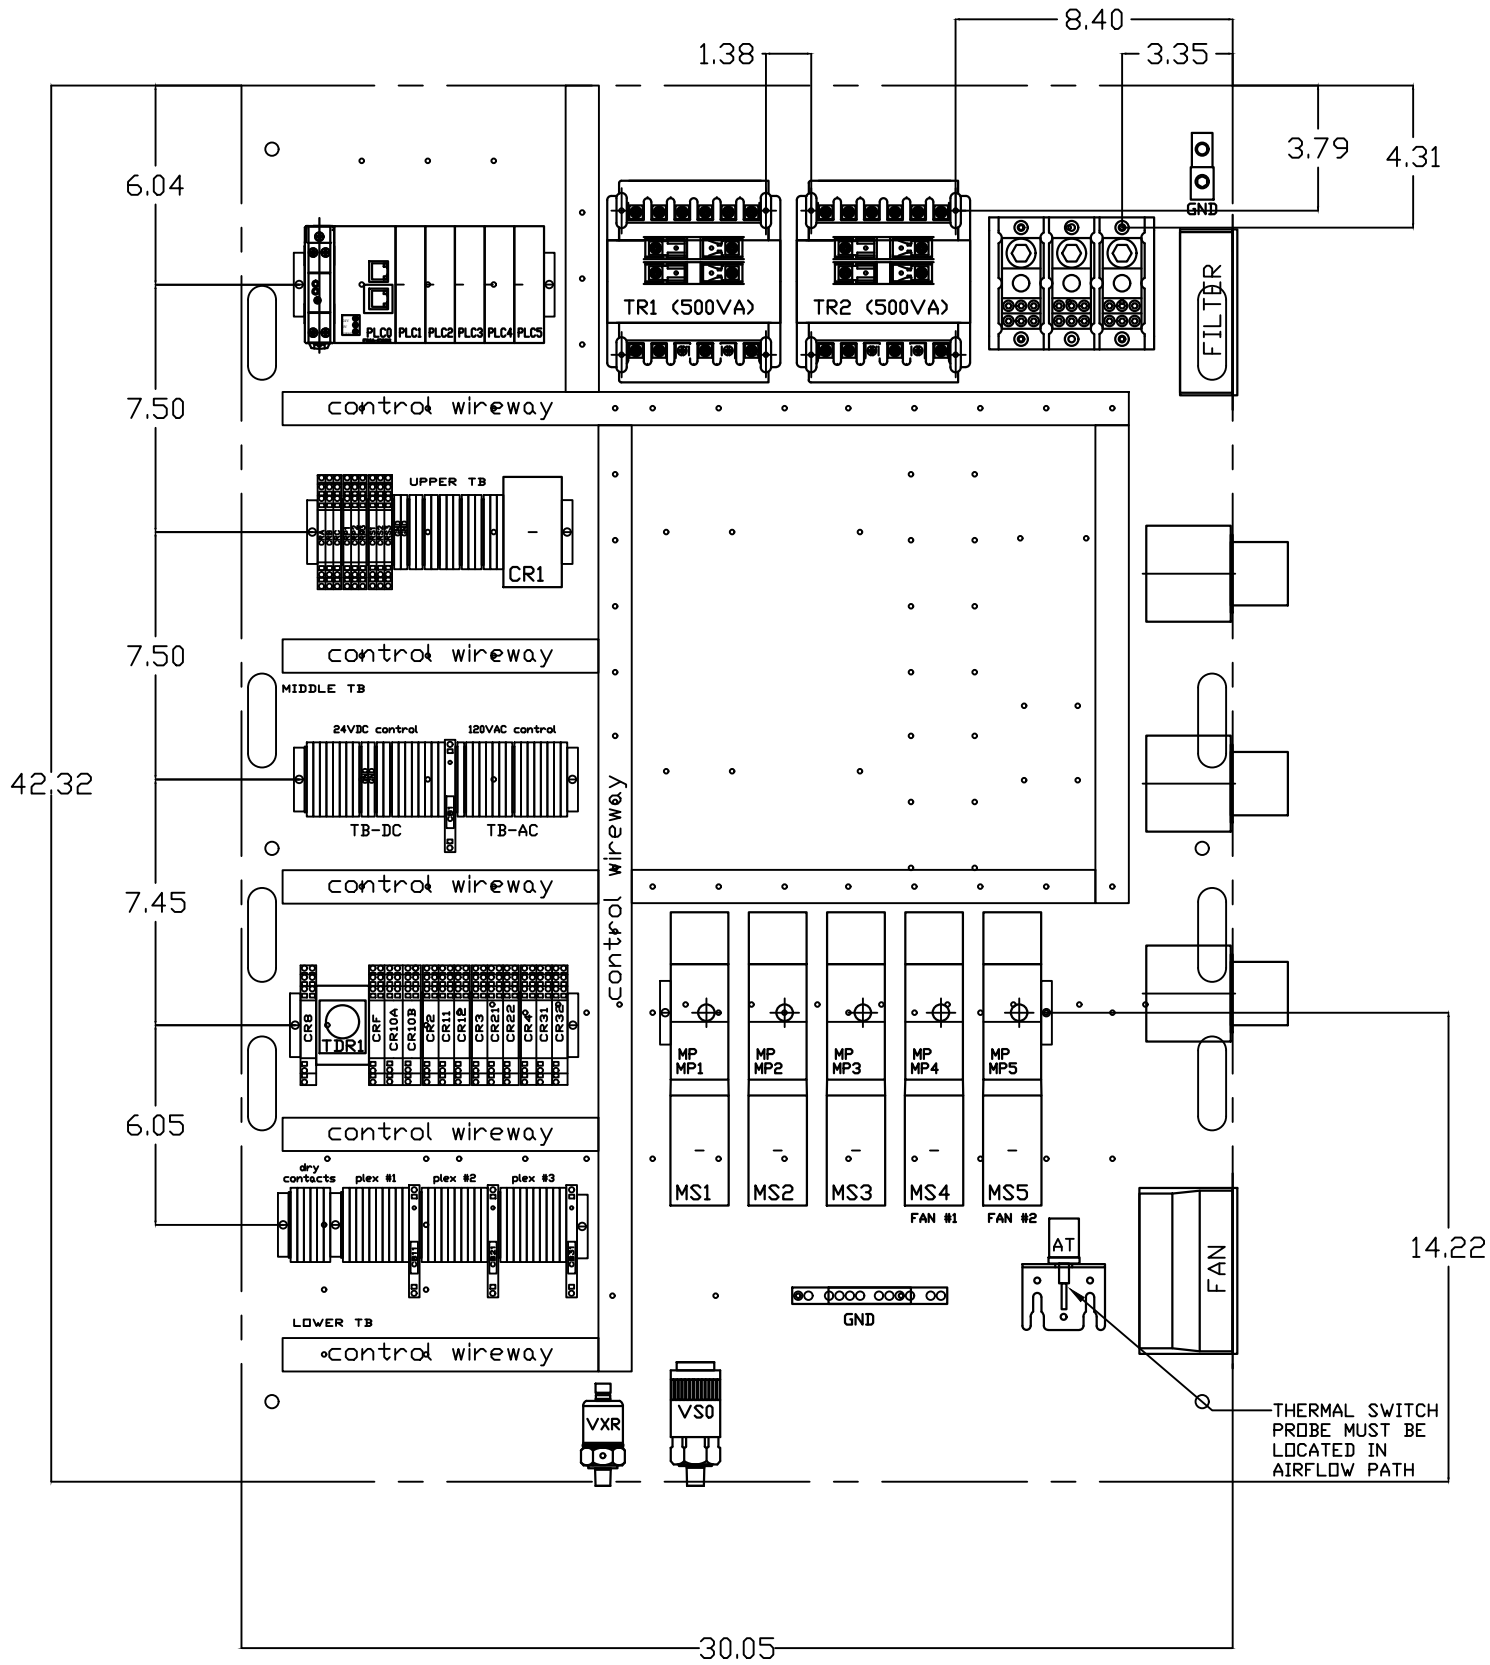

OPTIONAL:

POWEREX™

CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of
Marion Specialty Products and is subject to
return on demand. Its contents are confidential
and must not be copied or submitted to outside
parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
KMD	JRD	KMD
01/05/24	01/05/24	01/05/24

PANEL TYPE
VACUUM TRIPLEX ENCL. MASTER
HMI, NFPA

DWG. TYPE LAYOUT

DWG. NO.
PBMI-VNE369

SHEET	SIZE
L-2	B

TABLE 1 – OIL–LUBRICATED

PANEL DATA 3ø – 50/60 Hz 500VA CONTROL CIRCUIT								
LOAD SPECIFICATIONS						(B) BRANCH CIRCUIT PROTECTION – PROVIDED BY INSTALLER		
PANEL PART NUMBER	MOTOR SIZE EACH	POWER (V/Ph)	PUMP MOTOR LOAD EACH (FLA)	FAN MOTOR LOAD EACH (FLA)	PANEL LOAD TOTAL (FLA)	NONTIME DELAY FUSE	TIME-DELAY FUSE	INVERSE-TIME CIRCUIT BREAKER
PBMIVNE36942AB	5	208V/3ø	15.0	0.6	48.7	80A	60A	80A
PBMIVNE36952AB	5	208V/3ø	14.8	0.6	48.1	80A	60A	80A
PBMIVNE36972AB	7.5	208V/3ø	26.2	0.6	82.3	150A	110A	125A
PBMIVNE36943AB	5	230V/3ø	13.2	0.54	43.2	70A	60A	70A
PBMIVNE36953AB	5	230V/3ø	12.9	0.54	42.3	70A	60A	70A
PBMIVNE36973AB	7.5	230V/3ø	20.9	0.54	66.3	110A	90A	100A
PBMIVNE36944AB	5	460V/3ø	6.6	0.33	22.5	40A	30A	35A
PBMIVNE36954AB	5	460V/3ø	6.45	0.33	22.0	35A	30A	35A
PBMIVNE36974AB	7.5	460V/3ø	10.5	0.33	34.2	60A	45A	50A
NOTE– ADJUST OVERCURRENT PROTECTION DEVICE NOT TO EXCEED 115% OF MOTOR NAMEPLATE FLA VALUE								

NOTES:

1. RECOMMENDED TIGHTENING TORQUES FOR WIRE TERMINALS:
208-575 VOLT POWER 35 POUND INCHES
120 VOLT POWER AND CONTROL 15 POUND INCHES
2. PANEL GROUND MUST BE CONNECTED TO EARTH GROUND
3. INSTALLER TO PROVIDE MAIN DISCONNECTING DEVICE FOR THIS ELECTRICAL ASSEMBLY. SHORT CIRCUIT PROTECTION IS RECOMMENDED, SEE TABLE 1. IF PROVIDING PANEL SHORT CIRCUIT PROTECTION USING CLASS J TIME DELAY FUSES, PANEL SCCR IS 65KA. OTHERWISE, PANEL SCCR IS 5KA.
4. ALL WIRES MUST BE LABELED ON BOTH ENDS
5. TRANSFORMER IS SIZED FOR LOADS SHOWN ON DRAWING ONLY. DO NOT CONNECT ANY OTHER DEVICES
6. △ -INDICATES A DRAWING WIRE CONNECTION TO ANOTHER PAGE.
7. SERVICE DISCONNECT USAGE - turn HOA switch to OFF position. Turn disconnect OF SAME UNIT to OFF position. Associated PLEX will be isolated for maintenance purposes. After completing maintenance, turn disconnect to ON position and return HOA switch to AUTO. This will return PLEX to normal operation.

CONTROL TRANSFORMERS - 500VA						
REPLACEMENT	208	230	460	575	WIRE TYPE TABLE	
FUSE TYPE	VOLT	VOLT	380 VOLT	VOLT		
FU1,2A FU1,2B	FNQR	6A	5A	5A		4A
FU3A,B	FNM	7A	7A	7A		7A
SEE XFMR FOR CONNECTIONS						

VOLTAGE	WIRE NUMBERS	GAUGE	COLOR
120VAC	001-599,1100+	16-18AWG	RED/BLK
0VAC	W	16-18AWG	WHT/BLK
24VDC	600-1099	16-18AWG	PURPLE
0VDC	601	16-18AWG	PURPLE
GND	-	VARIES	GREEN
CUSTOMER SUPPLY	01-99	16-18AWG	YELLOW

SEQUENCE OF OPERATIONS

During normal operation the PBMI controller will signal the Lead pump to run when vacuum drops to lead cut-in set-point and run for a 10-minute minimum period before stopping when the vacuum reaches the lead cut-out set-point. Lead alternation to the next pump, will occur every 30-minutes. If demand cannot be satisfied by the lead pump, the lag pump(s) will start and stop based upon the lag cut-in and cut-out set-points. The HOA switch’s place the pump in the following modes: Hand-turns pump on to run continuous. Off-disables pump from running. Auto-places pump in the “ready mode” and will start and stop based on sequence described above.

Expandable systems include all control devices, operators, and programming for the maximum number of pumps (or plex) required. To expand the system: navigate to the “service screen” and enter the number of pumps.

Additional information and descriptions can be accessed through the HMI “service info” screen by pressing Sequence of Operations button.

REV	REVISION	DATE	ECN	NAME	CHKD
B-1	RELEASE TO PRODUCTION	01/05/24	PXEC0481	KMD	JRD
F-1	ADDED USB DRIVE TO HMI	07/21/25	PXEC0668	JRD	STK
G-1	PLEX ISOLATION UPDATES	06/18/25	PXEC0639	WMM	SEK

OPTIONAL:



CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of
Marion Specialty Products and is subject to
return on demand. Its contents are confidential
and must not be copied or submitted to outside
parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
KMD	JRD	KMD
01/05/24	01/05/24	01/05/24

PANEL TYPE

VACUUM TRIPLEX ENCL. MASTER
HMI, NFPA

DWG. TYPE DATA

DWG. NO.

PBMI–VNE369

SHEET	SIZE
D–1	B

PBMI–VNES69

TABLE 1 – CLAW

PANEL DATA 3ø – 50/60 Hz 500VA CONTROL CIRCUIT								
LOAD SPECIFICATIONS						(B) BRANCH CIRCUIT PROTECTION – PROVIDED BY INSTALLER		
PANEL PART NUMBER	MOTOR SIZE EACH	POWER (V/PH)	PUMP MOTOR LOAD EACH (FLA)	FAN MOTOR LOAD EACH (FLA)	PANEL LOAD TOTAL (FLA)	NONTIME DELAY FUSE	TIME-DELAY FUSE	INVERSE-TIME CIRCUIT BREAKER
PBMIVNE36922CB	2	208V/3ø	5.6	0.6	20.5	35A	25A	30A
PBMIVNE36932CB	3	208V/3ø	8.6	0.6	29.5	50A	40A	45A
PBMIVNE36942CB	4	208V/3ø	10.4	0.6	34.9	60A	45A	60A
PBMIVNE36952CB	5	208V/3ø	13.0	0.6	42.7	70A	60A	70A
PBMIVNE36962CB	6.4	208V/3ø	16.4	0.6	52.9	90A	70A	80A
PBMIVNE36972CB	7.5	208V/3ø	21.4	0.6	67.9	125A	90A	100A
PBMIVNE36923CB	2	230V/3ø	5.6	0.54	20.4	35A	25A	30A
PBMIVNE36933CB	3	230V/3ø	8.4	0.54	29.4	50A	40A	45A
PBMIVNE36943CB	4	230V/3ø	9.2	0.54	31.2	50A	40A	45A
PBMIVNE36953CB	5	230V/3ø	11.4	0.54	37.8	70A	50A	60A
PBMIVNE36963CB	6.4	230V/3ø	15.2	0.54	49.2	80A	70A	80A
PBMIVNE36973CB	7.5	230V/3ø	17.2	0.54	55.2	90A	70A	90A
PBMIVNE36924CB	2	460V/3ø	2.8	0.33	11.6	20A	15A	20A
PBMIVNE36934CB	3	460V/3ø	4.2	0.33	16.1	25A	20A	25A
PBMIVNE36944CB	4	460V/3ø	4.6	0.33	16.5	30A	20A	25A
PBMIVNE36954CB	5	460V/3ø	5.7	0.33	19.8	35A	25A	30A
PBMIVNE36964CB	6.4	460V/3ø	7.6	0.33	25.5	45A	35A	40A
PBMIVNE36974CB	7.5	460V/3ø	8.6	0.33	28.5	50A	35A	45A
NOTE– ADJUST OVERCURRENT PROTECTION DEVICE NOT TO EXCEED 115% OF MOTOR NAMEPLATE FLA VALUE								

NOTES:

1. RECOMMENDED TIGHTENING TORQUES FOR WIRE TERMINALS:
208-575 VOLT POWER 35 POUND INCHES
120 VOLT POWER AND CONTROL 15 POUND INCHES
2. PANEL GROUND MUST BE CONNECTED TO EARTH GROUND
3. INSTALLER TO PROVIDE MAIN DISCONNECTING DEVICE FOR THIS ELECTRICAL ASSEMBLY. SHORT CIRCUIT PROTECTION IS RECOMMENDED, SEE TABLE 1. IF PROVIDING PANEL SHORT CIRCUIT PROTECTION USING CLASS J TIME DELAY FUSES, PANEL SCCR IS 65KA. OTHERWISE, PANEL SCCR IS 5KA.
4. ALL WIRES MUST BE LABELED ON BOTH ENDS
5. TRANSFORMER IS SIZED FOR LOADS SHOWN ON DRAWING ONLY. DO NOT CONNECT ANY OTHER DEVICES
6. △ -INDICATES A DRAWING WIRE CONNECTION TO ANOTHER PAGE.
7. SERVICE DISCONNECT USAGE - turn HOA switch to OFF position. Turn disconnect OF SAME UNIT to OFF position. Associated PLEX will be isolated for maintenance purposes. After completing maintenance, turn disconnect to ON position and return HOA switch to AUTO. This will return PLEX to normal operation.

CONTROL TRANSFORMERS - 500VA						WIRE TYPE TABLE			
REPLACEMENT		208	230	460 380	575				
FUSE TYPE		VOLT	VOLT	VOLT	VOLT	VOLTAGE	WIRE NUMBERS	GAUGE	COLOR
FU1,2A FU1,2B	FNQR	6A	5A	5A	4A	120VAC 0VAC 24VDC 0VDC GND CUSTOMER SUPPLY	001-599,1100+ W 600-1099 601 - 01-99	16-18AWG 16-18AWG 16-18AWG 16-18AWG VARIES 16-18AWG	RED/BLK WHT/BLK PURPLE PURPLE GREEN YELLOW
SEE XFMR FOR CONNECTIONS									

SEQUENCE OF OPERATIONS

During normal operation the PBMI controller will signal the Lead pump to run when vacuum drops to lead cut-in set-point and run for a 10-minute minimum period before stopping when the vacuum reaches the lead cut-out set-point. Lead alternation to the next pump, will occur every 30-minutes. If demand cannot be satisfied by the lead pump, the lag pump(s) will start and stop based upon the lag cut-in and cut-out set-points. The HOA switch’s place the pump in the following modes: Hand-turns pump on to run continuous. Off-disables pump from running. Auto-places pump in the “ready mode” and will start and stop based on sequence described above.

Expandable systems include all control devices, operators, and programming for the maximum number of pumps (or plex) required. To expand the system: navigate to the “service screen” and enter the number of pumps.

Additional information and descriptions can be accessed through the HMI “service info” screen by pressing Sequence of Operations button.

REV	REVISION	DATE	ECN	NAME	CHKD
B-1	RELEASE TO PRODUCTION	01/05/24	PXEC0481	KMD	JRD
F-1	ADDED USB DRIVE TO HMI	07/21/25	PXEC0668	JRD	STK
G-1	PLEX ISOLATION UPDATES	06/18/25	PXEC0639	WMM	SEK

OPTIONAL:



CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of
Marion Specialty Products and is subject to
return on demand. Its contents are confidential
and must not be copied or submitted to outside
parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
KMD	JRD	KMD
01/05/24	01/05/24	01/05/24

PANEL TYPE

VACUUM TRIPLEX ENCL. MASTER
HMI, NFPA

DWG. TYPE DATA

DWG. NO.

PBMI-VNE369

SHEET	SIZE
D-1	B

PBMI-VNES69