

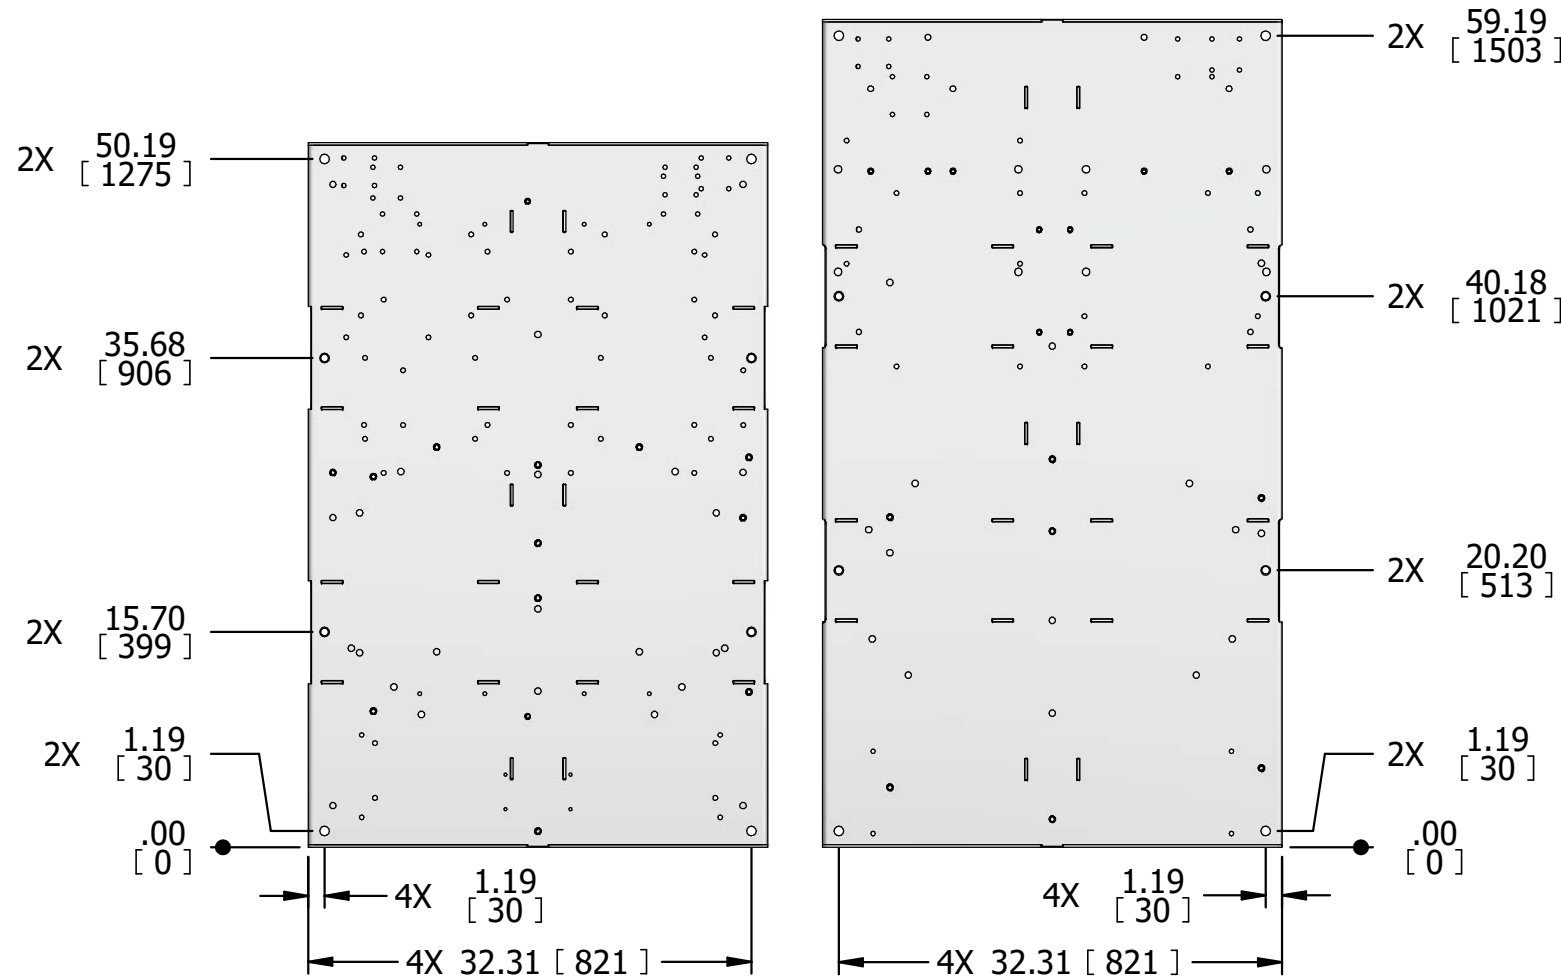


IOPQ1006xP5
10 HP INST AIR OILLESS QUADPLEX 240G




REVISION NOTES		
DESCRIPTION	ECN	PR/NOR
PRODUCTION RELEASE	PXEC0521	N/A

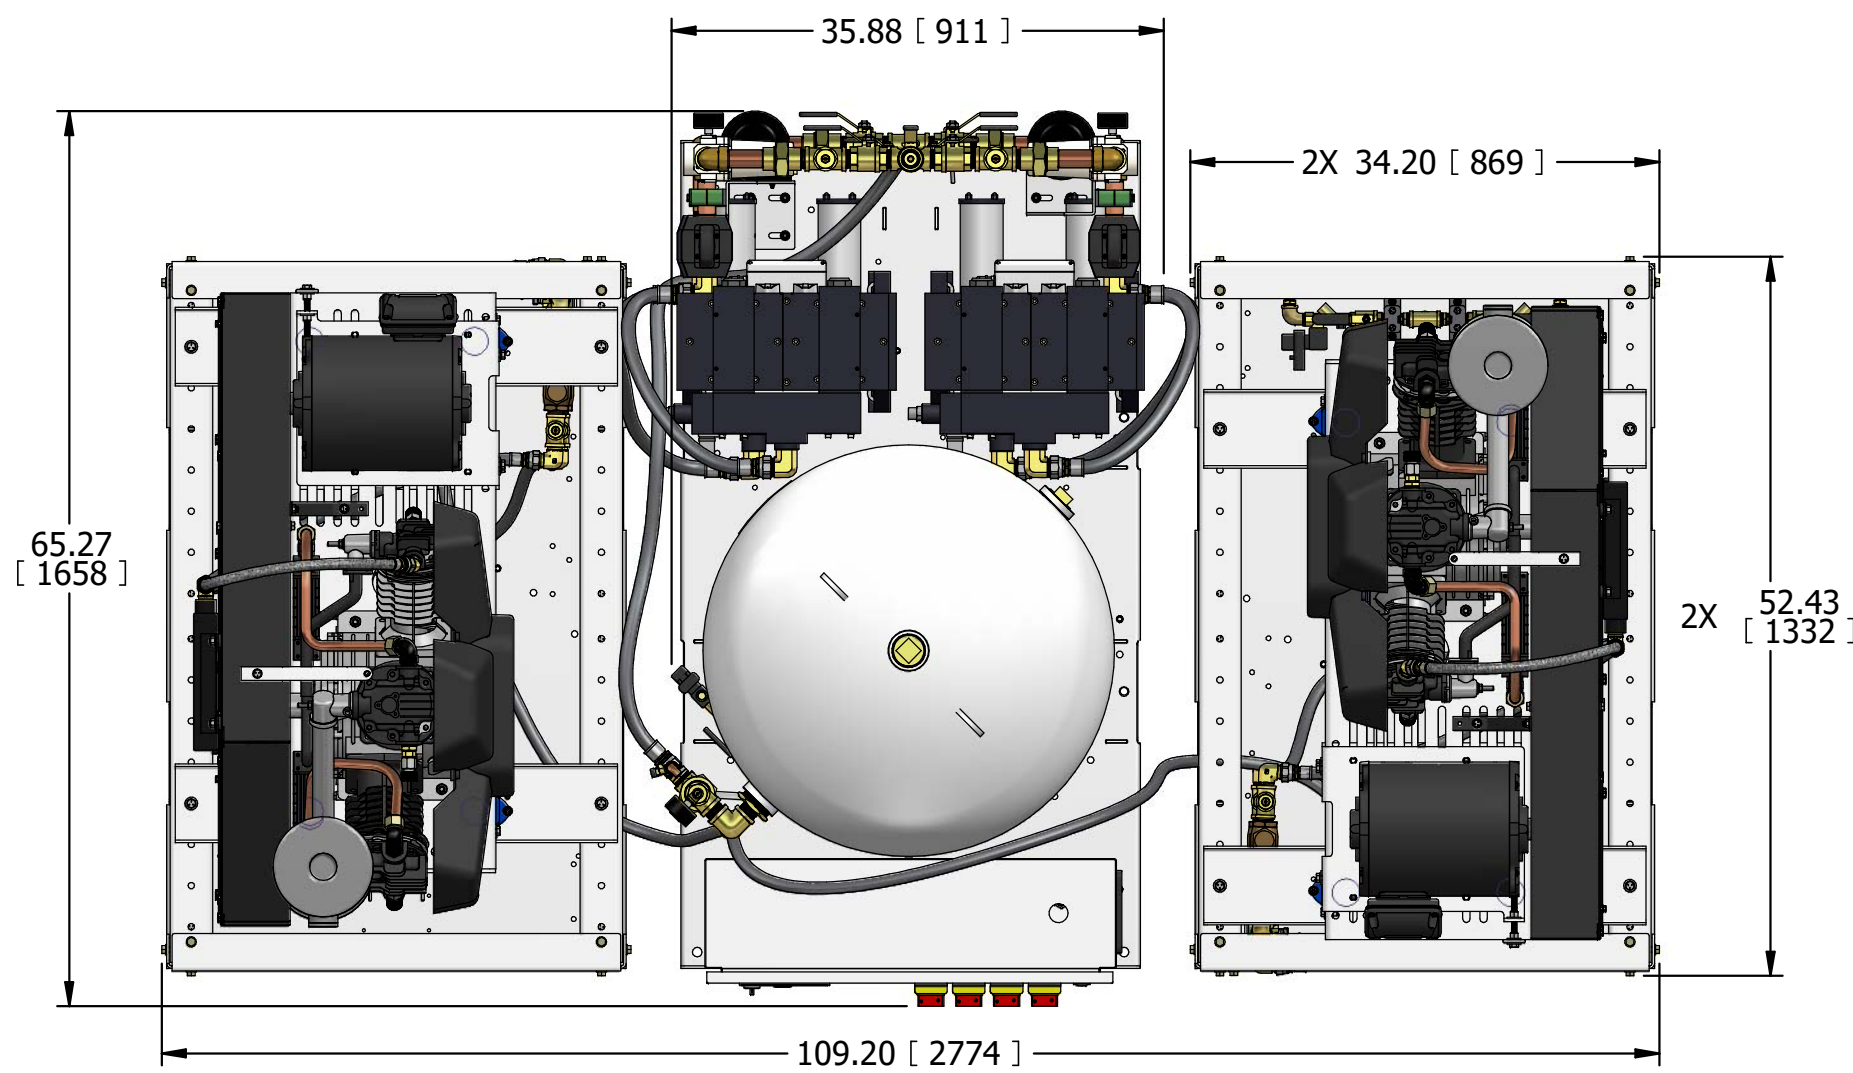

FLOOR MOUNTING HOLES
(Orificios de Montaje)
PER PLATFORM
(Por Plataforma)

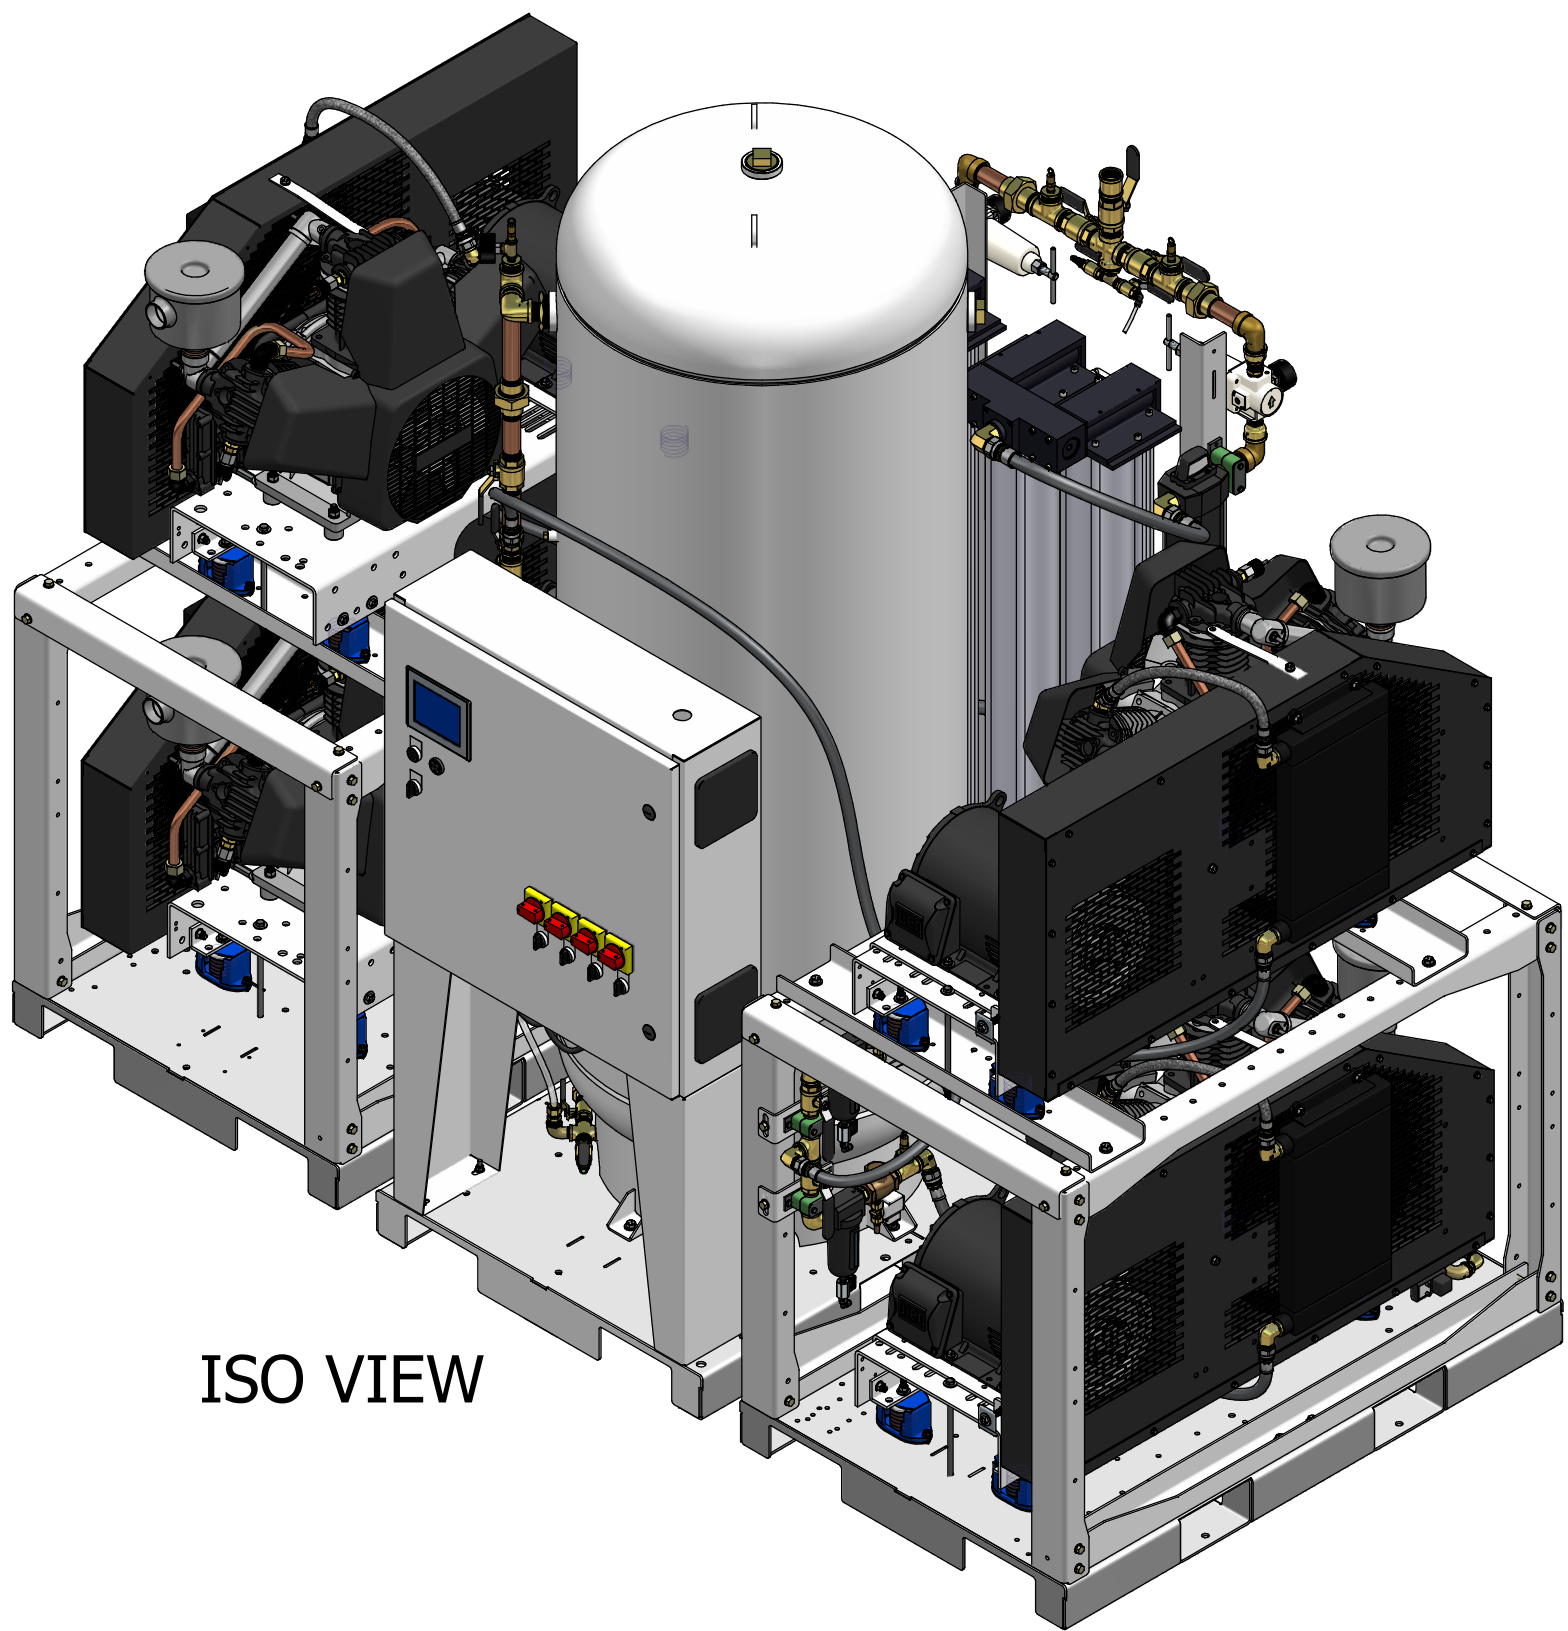

ISO VIEW

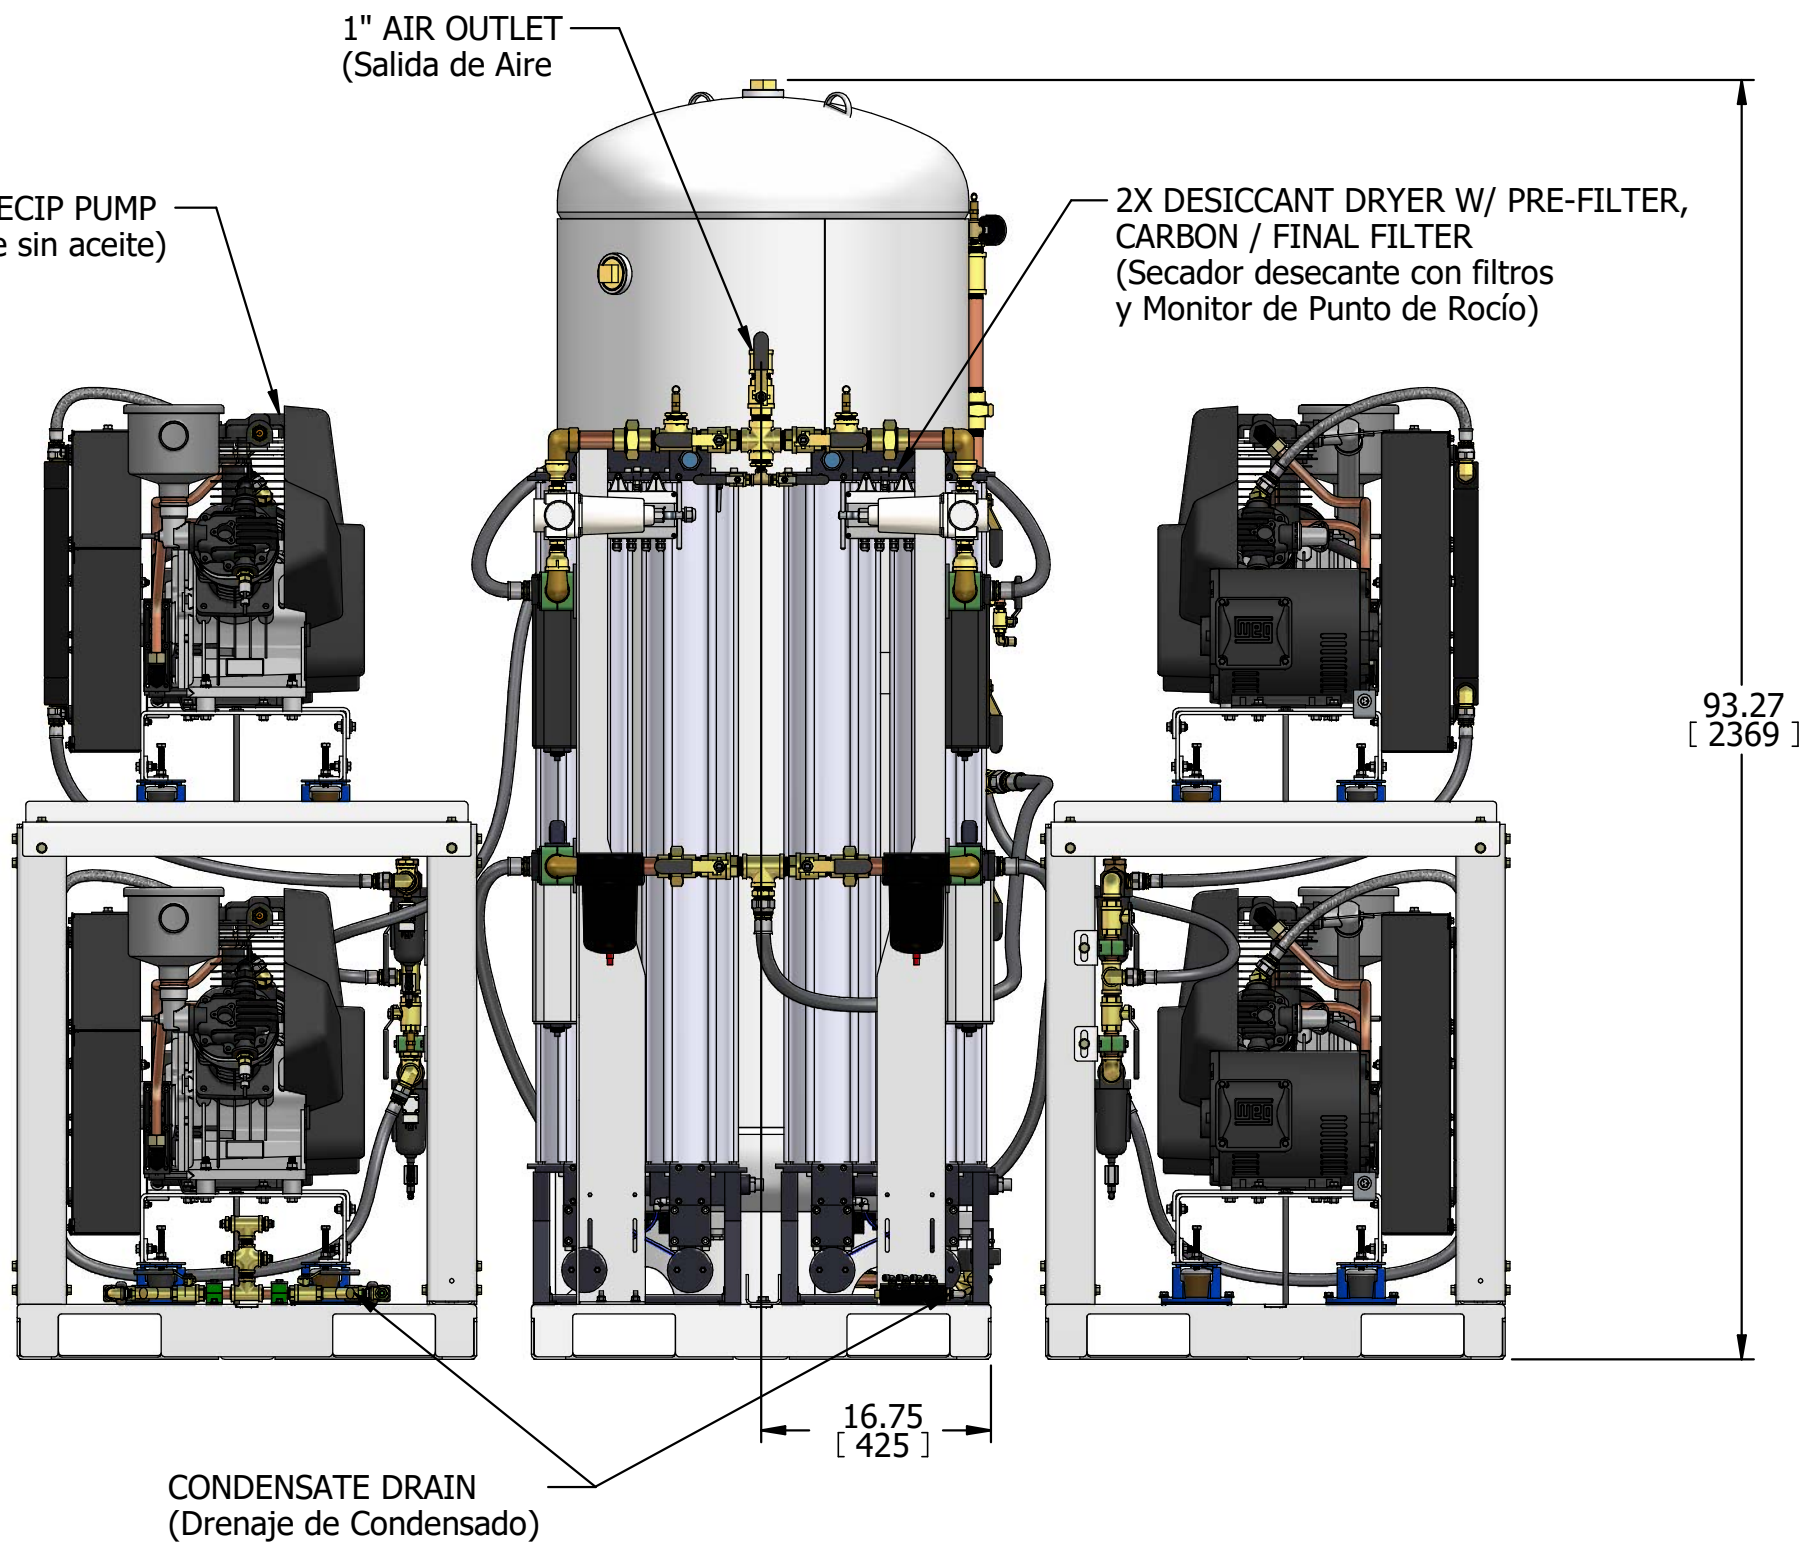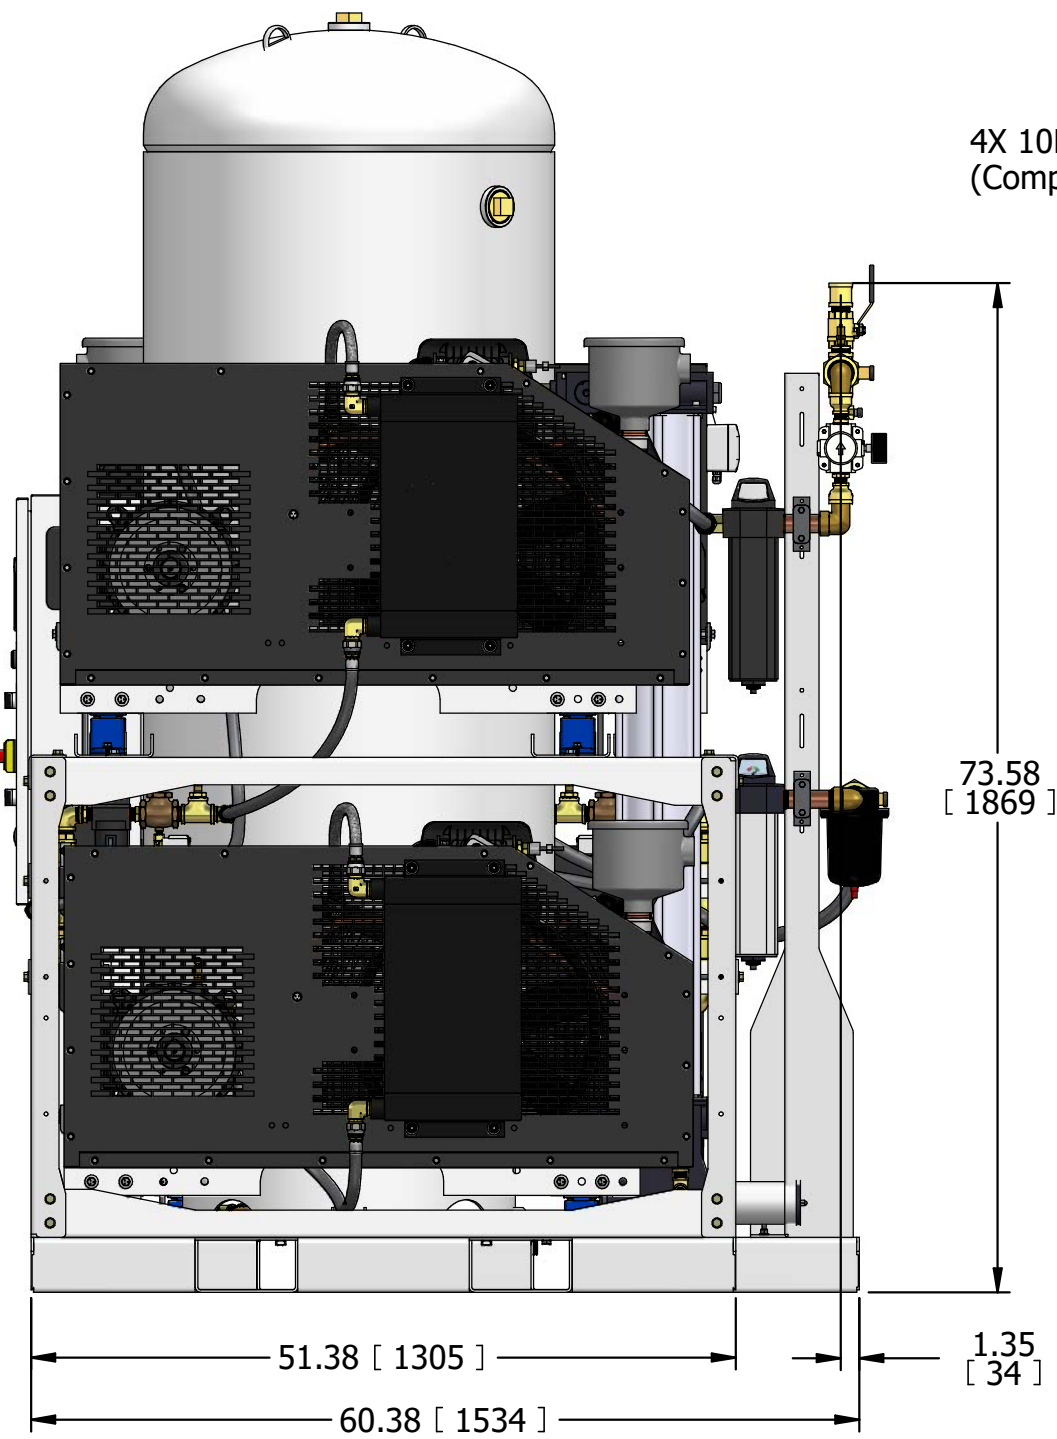
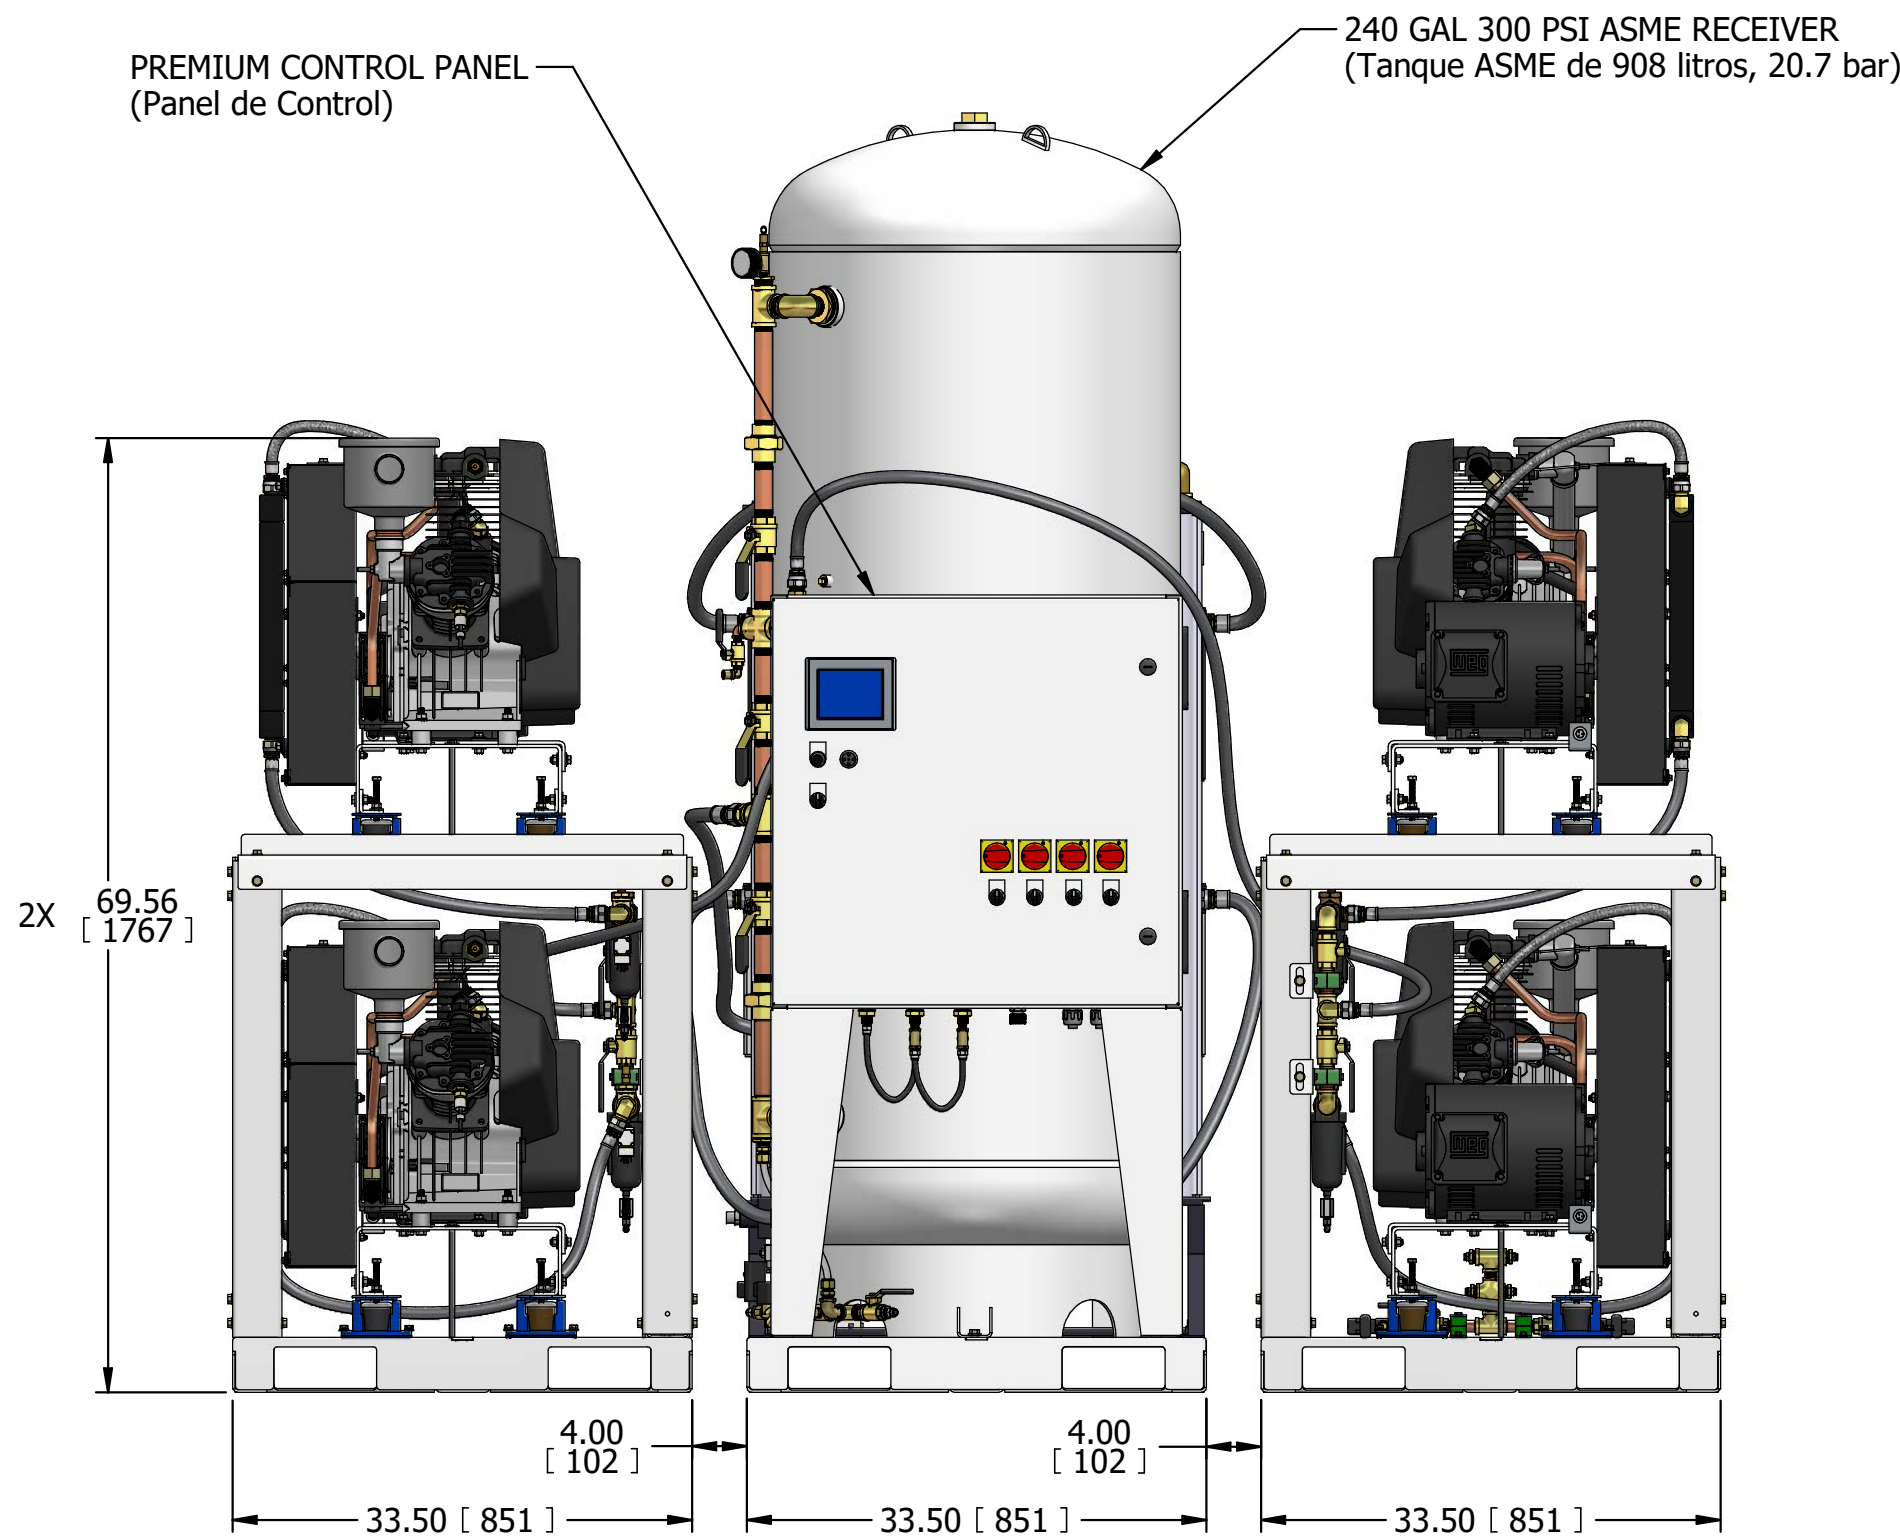


- NOTES:
1. APPROXIMATE WEIGHT: 4081 LB
 2. A MINIMUM OF 24" CLEARANCE IS RECOMMENDED AROUND THE ENTIRE UNIT. CLEARANCE FOR CONTROL PANEL SHALL BE IN ACCORDANCE WITH OSHA/NEC REQUIREMENTS.
 3. SYSTEM DESIGNED IN COMPLIANCE WITH U.S. NFPA '99, LATEST EDITION.
1. PESO APROXIMADO: 1851 kg
2. RECOMENDAMOS QUE EL ESPACIO LIBRE ALREDEDOR DEL SISTEMA DEBE SER COMO MÍNIMO 24" (600 mm). EL ESPACIO LIBRE PARA EL TABLERO DE CONTROL DEBERÁ ESTAR DE ACUERDO CON LOS REQUERIMIENTOS DE SEGURIDAD DE LA OSHA/NEC.
3. EL SISTEMA ESTÁ DISEÑADO DE ACUERDO CON LA ÚLTIMA EDICIÓN DE LA NFPA 99.



SYMBOL LEGEND		DRAWINGS TO CONFORM TO CURRENT REVISION OF THE FOLLOWING ANSI STANDARDS: Y14.3 MULTI AND SECTIONAL VIEW DWGS Y14.5 DIMENSIONING AND TOLERANCING		
TOLERANCES, UNLESS OTHERWISE SPECIFIED 0.XX ± .05 0.XXX ± .005 ± .1	SOLID EDGE	DO NOT SCALE DRAWING FOR DIMENSIONS		
	DRAWING			
	INCH [mm]	SHEET 1 OF 2	SCALE	1:14
CONFIDENTIAL DISCLOSURE This drawing is the property of POWEREX or the SCOTT FEIZER COMPANY and is subject to return on demand. Its contents are confidential and must not be copied or submitted to outside parties for use or examination.		AUTHOR	REVISION DATE	APPROVALS ON FILE IN PLM
ITEM NO: 746346		kbeckett	8/22/2023	
MATERIAL: SEE PART DRAWINGS		POWEREX 150 PRODUCTION DRIVE, HARRISON OH 45030 (888) 769-7979		
DESCRIPTION 10 HP INST AIR OILLESS QUADPLEX 240G	DRAWING NUMBER IOPQ1006xP5	REVISION A	SIZE D	

IOPQ1006xP5
10 HP INST AIR OILLESS QUADPLEX 240G

REVISION NOTES		
DESCRIPTION	ECN	PR/NOR
PRODUCTION RELEASE	PXEC0521	N/A

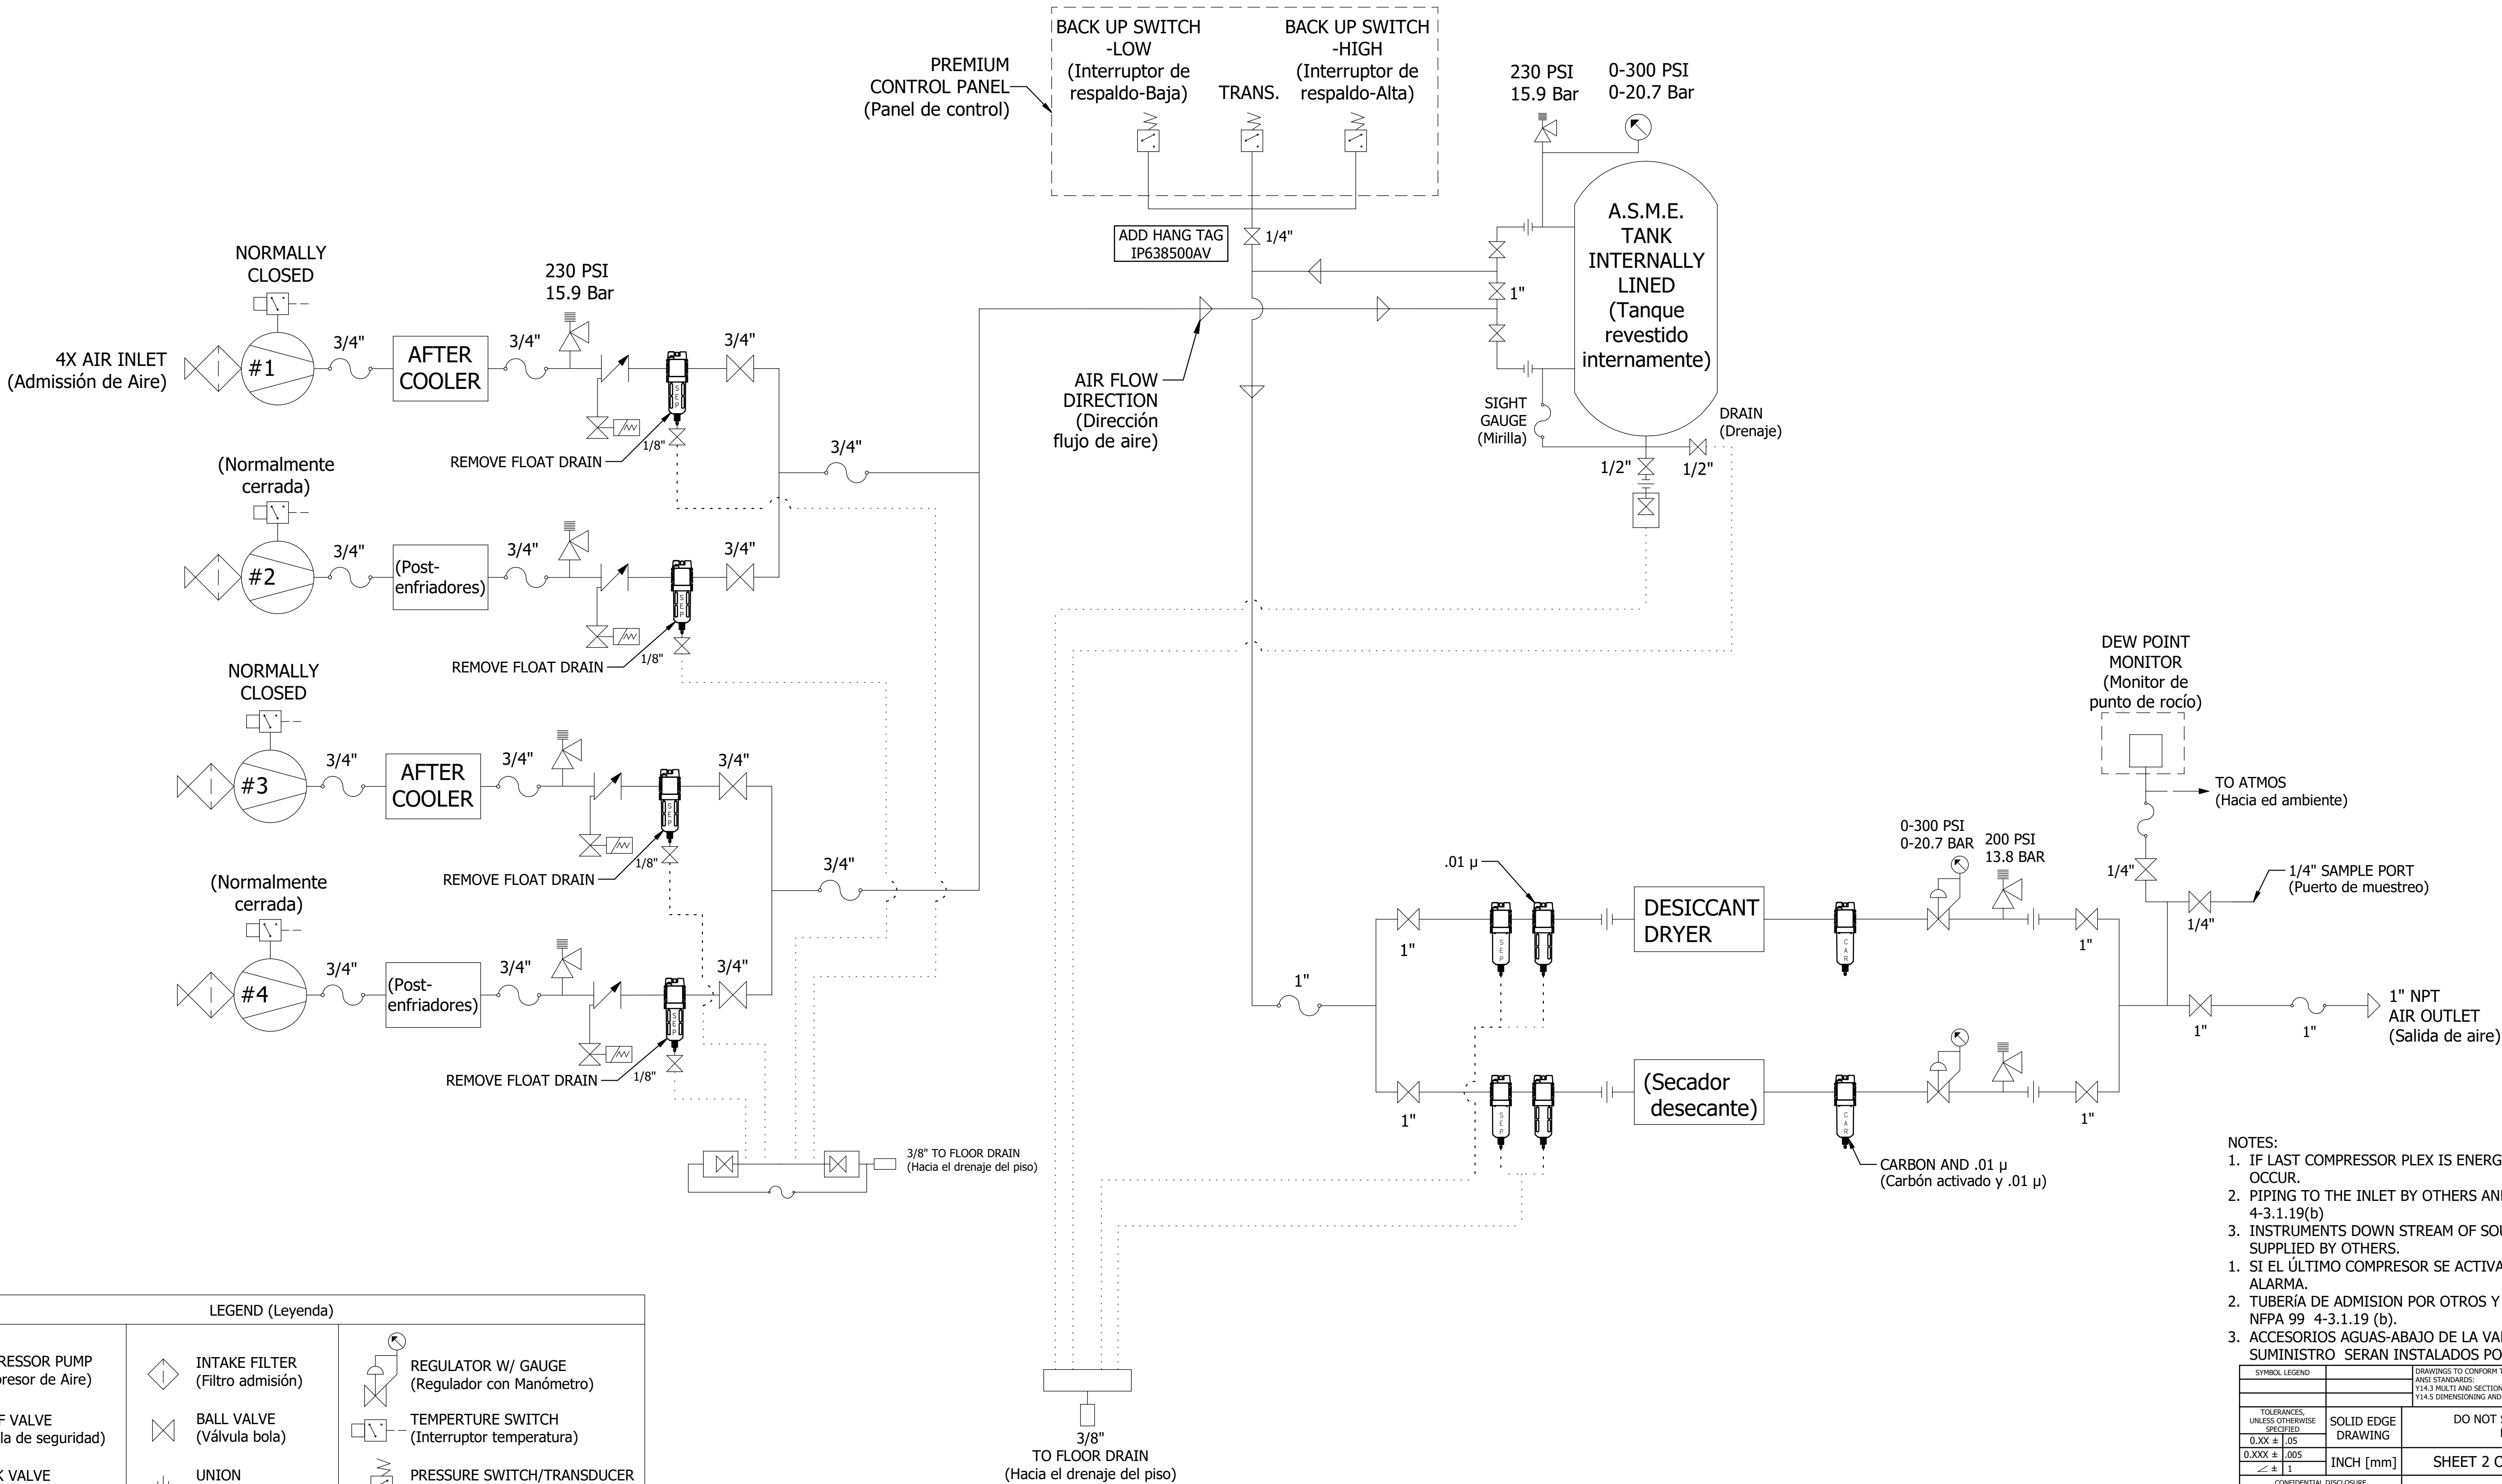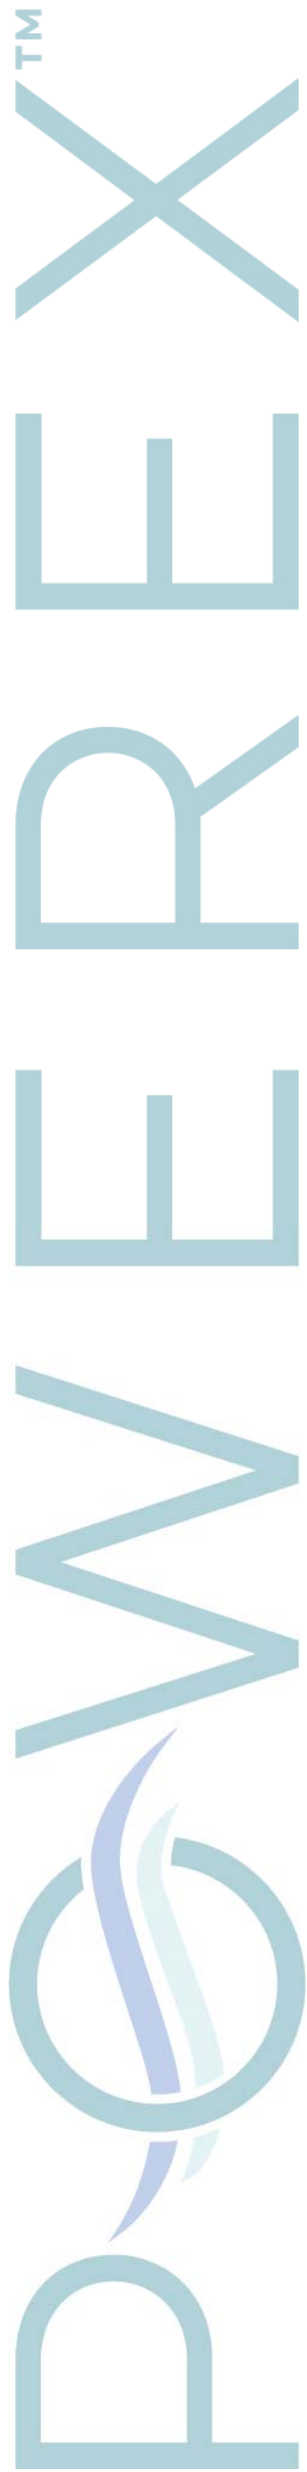

- NOTES:
1. IF LAST COMPRESSOR PLEX IS ENERGIZED ALARM WILL OCCUR.
 2. PIPING TO THE INLET BY OTHERS AND TO BE PER NFPA99 4-3.1.19(b)
 3. INSTRUMENTS DOWN STREAM OF SOURCE VALVE TO BE SUPPLIED BY OTHERS.
1. SI EL ÚLTIMO COMPRESOR SE ACTIVA, SE PRODUCIRÁ UNA ALARMA.
2. TUBERÍA DE ADMISION POR OTROS Y CUMPLIR CON LA NFPA 99 4-3.1.19 (b).
3. ACCESORIOS AGUAS-ABAJO DE LA VALVULA DE CORTE DE SUMINISTRO SERAN INSTALADOS POR OTROS.

LEGEND (Leyenda)					
	COMPRESSOR PUMP (Compresor de Aire)		INTAKE FILTER (Filtro admisión)		REGULATOR W/ GAUGE (Regulador con Manómetro)
	RELIEF VALVE (Válvula de seguridad)		BALL VALVE (Válvula bola)		TEMPERTURE SWITCH (Interruptor temperatura)
	CHECK VALVE (Válvula Cheque)		UNION (Unión)		PRESSURE SWITCH/TRANSDUCER (Interruptor/Transductor presión)
	FLEX HOSE (Manguera flexible)		GAUGE (Manómetro)		FILTER/SEPARATOR (Filtro/Separador)
	AIR LINE (Tubería de Aire)		CONDENSATE LINE (Línea de condensado)		ELECTRIC AUTO DRAIN (Electroválvula de Drenaje)
	UNLOADER SOLENOID (Solenoido Descargador)				

SYMBOL LEGEND		DRAWINGS TO CONFORM TO CURRENT REVISION OF THE FOLLOWING ANSI STANDARDS: Y14.3 MULTI AND SECTIONAL VIEW DWGS Y14.5 DIMENSIONING AND TOLERANCING		
TOLERANCES, UNLESS OTHERWISE SPECIFIED		DO NOT SCALE DRAWING FOR DIMENSIONS		
0.XX ± .05		SHEET 2 OF 2		
0.XXX ± .005				
± .1				
SOLID EDGE DRAWING		SCALE 1:1		
INCH [mm]				
CONFIDENTIAL DISCLOSURE This drawing is the property of POWEREX of the SCOTT FEZER COMPANY and is subject to return on demand. Its contents are confidential and must not be copied or submitted to outside parties for use or examination.		AUTHOR kbeckett		REVISION DATE 8/22/2023
APPROVALS ON FILE IN PLM				
ITEM ID: 746346		 150 PRODUCTION DRIVE, HARRISON OH 45030 (888) 776-7979		
MATERIAL: SEE PART DRAWINGS				
DESCRIPTION 10 HP INST AIR OILLESS QUADPLEX 240G				
		DRAWING NUMBER IOPQ1006xP5		REVISION A
				SIZE D