




Oil-less Basemount Air Compressor Operating & Maintenance Manual

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.

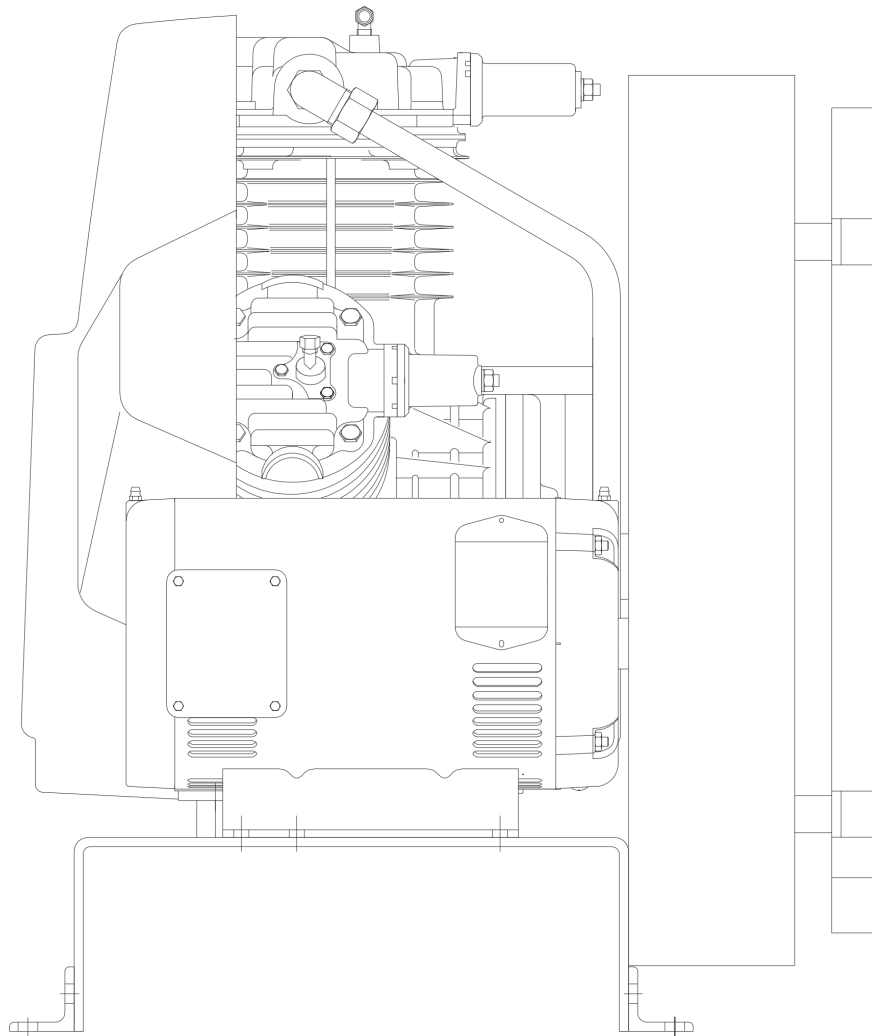

Performance Specifications

Model	HP	Phase	SCFM			RPM @ 100 PSIG	RPM @ 200 PSIG	Voltage	Dimensions (in)		
			@ 200 PSIG*	@ 100 PSIG*	@ 50 PSIG*				L	W	H
OBS0107	1	3	-	3.6	3.4	620	-	208 / 230 / 460	21	16	20
OBS0157	1.5	3	-	5.3	5.0	980	-	208 / 230 / 460	21	16	20
OBS0207	2	3	-	6.7	6.5	680	-	208 / 230 / 460	32	19	23
OBS0307	3	3	-	11.1	10.1	970	-	208 / 230 / 460	32	19	23
OBS0507	5	3	-	17.1	16.5	800	-	208 / 230 / 460	36	22	27
OBS0707	7.5	3	19.1	-	-	-	940	208 / 230 / 460	36	22	27
OBS0757	7.5	3	-	28.4	26.1	870	-	208 / 230 / 460	46	24	28
OBS1007	10	3	26	37.2	35.0	1070	850	208 / 230 / 460	26	24	28
OBS1507	15	3	34.3	46.4	45.2	1140	895	208 / 230 / 460	48	27	28

NOTE: For system electrical information (including motor FLA ratings), see the wiring diagram shipped with the unit.

Description

The Powerex oilless reciprocating air compressor has advanced compressor technology through the development of a completely oilless unit. The Powerex reciprocating compressor is available in single and two stage models. Continuously lubricated, sealed bearings provide oil-free compressed air and long compressor life. The on board fan, finned flywheel and temperature reducing composite piston create lower operating temperatures.

Dry Type Inlet Filter

Air is passed through a 5 micron inlet filter with 99% removal efficiency standard. Change every 2,500 hours or more often in dirty locations.

Piston Rings and Cylinders

The Powerex oilless reciprocating compressor pistons are made of a high-strength, self-lubricating composite using the most advanced technology available. These heat reducing pistons eliminate the effect of excessive grease leakage at the wrist pin bearing. PTFE rings reduce wear and provide self-lubrication. Piston and piston rings should be replaced every 10,000 hours of operation.

Safety Guidelines

This manual contains information that is very important to know and understand. This information is provided for SAFETY and to PREVENT EQUIPMENT PROBLEMS. To help recognize this information, observe the following symbols.

⚠ DANGER Danger indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.

⚠ WARNING Warning indicates a potentially hazardous situation which, if not avoided, COULD result in death or serious injury.

⚠ CAUTION Caution indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury.

NOTICE Notice indicates important information, that if not followed, may cause damage to equipment.

NOTE: Note indicates information that requires special attention.

⚠ DANGER

Breathable Air Warning

This compressor/pump is NOT equipped and should NOT be used "as is" to supply breathing quality air. For any application of air for human consumption, you must fit the air compressor/pump with suitable in-line safety and alarm equipment. This additional equipment is necessary to properly filter and purify the air to meet minimal specifications for Grade D breathing as described in Compressed Gas Association Commodity Specification G 7.1 - 1966, OSHA 29 CFR 1910. 134, ANSI and/or Canadian Standards Associations (CSA).

DISCLAIMER OF WARRANTIES

IN THE EVENT THE COMPRESSOR IS USED FOR THE PURPOSE OF BREATHING AIR APPLICATION AND PROPER IN-LINE SAFETY AND ALARM EQUIPMENT IS NOT SIMULTANEOUSLY USED, EXISTING WARRANTIES ARE VOIDED, AND POWEREX DISCLAIMS ANY LIABILITY WHATSOEVER FOR ANY LOSS, PERSONAL INJURY OR DAMAGE.

Unpacking

After unpacking the unit, inspect carefully for any damage that may have occurred during transit. Make sure to tighten fittings, bolts, etc., before putting unit into service.

⚠ WARNING Do not operate unit if damaged during shipping, handling or use. Damage may result in bursting and cause injury or property damage.

General Safety Information

California Proposition 65

⚠ WARNING This product or its power cord may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling..

General Safety

The following safety precautions must be observed at all times:

1. Read all manuals included with this product carefully. Be thoroughly familiar with the controls and the proper use of the equipment.
2. Follow all local electrical and safety codes, as well as in the United States, the National Electrical

Codes (NEC) and Occupational Safety and Health Act (OSHA).

3. Only persons well acquainted with these rules of safe operation should be allowed to use the equipment.
4. Keep visitors away and NEVER allow children in the work area.
5. Wear safety glasses and use hearing protection when operating the unit.
6. Do not stand on or use the unit as a handhold.
7. Before each use, inspect compressed air system and electrical components for signs of damage, deterioration, weakness or leakage.

Installation

⚠ WARNING Disconnect, tag and lock out power source then release all pressure from the system before attempting to install, service, relocate or perform any maintenance.

⚠ CAUTION Do not lift or move unit without appropriately rated equipment. Be sure the unit is securely attached to lifting device used. Do not lift unit by holding onto tubes or coolers. Do not use unit to lift other attached equipment.

In existing air systems, contamination may be downstream of the dryer system. If necessary, clean air lines prior to installation and use of the dryer system to ensure proper operation.

Installation Site

1. The compressor must be located in a clean, well lit and well ventilated area.
2. The area should be free of excessive dust, toxic or flammable gases, moisture, water, and direct sunlight.
3. Never install the compressor where the ambient temperature is higher than 104° F or where humidity is high.
4. Clearance must allow for safe, effective inspection and maintenance.
5. If necessary, use metal shims or leveling pads to level the compressor. Never use wood to shim the compressor.

Ventilation

1. If the oilless compressor is located in a totally enclosed room, an exhaust fan with access to outside air must be installed.
2. Never restrict the cooling fan exhaust air.
3. Never locate the compressor where hot exhaust air from other heat generating units may be pulled into the unit..

Minimum Clearances	
Above	24 in
Drive Belt side	24 in
Other sides	24 in

Wiring

⚠ WARNING All wiring and electrical connections must be performed by a qualified electrician. Installations must be in accordance with local and national codes.

⚠ CAUTION Overheating, short circuiting, and fire damage will result from inadequate wiring.

Wiring must be installed in accordance with National Electrical Code and local codes and standards that have been set up covering electrical apparatus and wiring. These should be consulted and local ordinances observed. Use solderless terminals to connect the electric power source. Be certain that adequate wire sizes are used, and that:

1. Service is of adequate ampere rating.
2. The supply line has the same electrical characteristics (voltage (V), phases, and frequency (Hz)) as the device.
3. 12 inch flex conduit is provided to the control box to allow for motion during operation.
4. Applicable main power disconnect and short circuit protection is installed. Sizing information can be found on the wiring diagram provided with the unit.
5. Panel ground is connected to earth ground.

All OBS compressors which are shipped with a starter will have a control panel whose wiring diagram matches what is shown on page 6. The transformer supplied with the control panel is only sized to power the devices shown on the wiring diagram. Do not connect other devices.

possible blockage point in the system, i.e. shutoff valve.

3. Avoid connecting the safety valve with any tubing or piping.
4. Manually operate the safety valve every six months to avoid sticking or freezing.

Operation

Powerex 1-5 HP oilless compressors operate at a maximum pressure of 145 PSIG. 7.5-15 HP compressors operate at a maximum pressure of 200 PSIG. Refer to the table on page 3 for engineering specifications of the oil-less reciprocating pumps. Two stage compressors are equipped for continuous duty.

Compressor RPM's are established by Powerex based on horsepower and operating pressure.

Before Start Up

1. Make sure all safety warnings, labels and instructions have been read and understood before continuing.
2. Remove any shipping materials, brackets, etc.
3. Confirm that the electric power source and ground have been firmly connected.
4. Be sure all pressure connections are tight.
5. Check to be certain all safety relief valves, etc., are correctly installed.
6. Check that all fuses, circuit breakers, etc., are the proper size.
7. Make sure the inlet filter is properly installed.
8. Confirm that the drain valve is closed.
9. Visually check the rotation of the compressor pump. If the rotation is incorrect, have a qualified electrician correct the motor wiring.

Start Up and Operation

1. Follow all the procedures under "Before Start-Up" before attempting operation of the compressor.
2. Switch the electric source breaker on.
3. Open the tank discharge valve completely.
4. Check that the compressor operates without excessive vibration, unusual noises or leaks.
5. Close the discharge valve completely.

6. Check the discharge pressure. Also make sure the air pressure rises to the designated pressure setting by checking the discharge pressure gauge.
7. Check the operation of the pressure switch or the pilot valve for continuous run units by opening the stop valve and confirming the compressor starts or reloads as pressure drops.

NOTICE

Two stage units are equipped with head unloaders for continuous operation.

8. Check all fasteners at frequent intervals for proper tightness.

⚠ WARNING

Electrical equipment and controls can cause electrical arcs that will ignite a flammable gas or vapor. Never operate or repair in or near a flammable gas or vapor. Never store flammable liquids or gases in the vicinity of the compressor.

⚠ WARNING

An ASME code safety relief valve with a setting no higher than the tank maximum allowable working pressure MUST be installed in the air lines or in the tank. The ASME safety valve must have sufficient flow and pressure ratings to protect the pressurized components from bursting. The flow rating can be found in the parts manual.

⚠ CAUTION

Do not operate with pressure switch or pilot valves set higher than the tank maximum allowable working pressure.

9. Never attempt to adjust ASME safety valve. Keep safety valve free from paint and other accumulations.

⚠ DANGER


Never attempt to repair or modify a tank! Welding, drilling or any other modification will weaken the tank resulting in damage from rupture or explosion. Always replace worn, cracked or damaged tanks.

NOTICE

Drain liquid from tank daily.

10. Tanks rust from moisture build-up, which weakens the tank. Make sure to drain tank regularly and inspect periodically for unsafe conditions such as rust formation and corrosion.
11. Fast moving air will stir up dust and debris which may be harmful. Release air slowly when draining moisture or depressurizing.

Component Identification

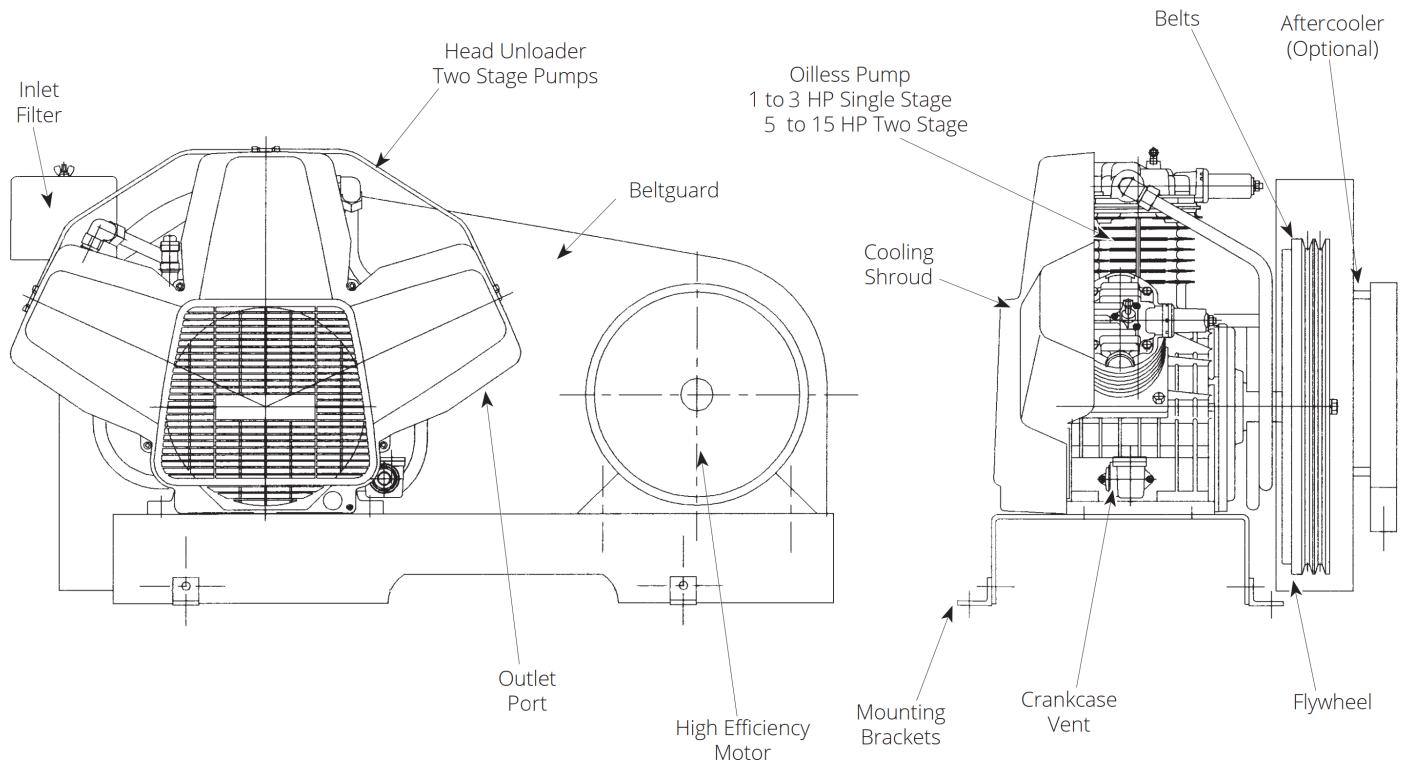

Maintenance Schedule


Item	Action Needed	Operating Hours							Remarks
		Daily	500	2500	5000	10000	15000	20000	
Tank	Drain moisture	o		o					
Inlet air filter	Inspect, replace		o	Δ					Every 2500 hours or less
Blower fan	Clean				o	o	o	o	
Fan duct	Clean				o	o	o	o	
Compressor fins	Clean			o					Every 2500 hours or less
Bearings	Inspect, replace		Note 4	Δ	Δ	Δ	Δ	Δ	Every 2500 hours
Compression rings	Replace		Note 4		Δ			Δ	
Wrist pin bearing	Regrease		Note 4	Δ	Δ	Δ	Δ	Δ	Every 2500 hours
Piston set	Replace		Note 4		Δ			Δ	
V-belt	Inspect, replace		Note 3	o	Δ	Δ	Δ	Δ	
Pressure switch	Confirm operation					o		o	
Magnetic Starter	Inspect					o		o	Replace if contact points are deteriorated
Safety valve	Confirm operation			o					Every 2500 hours or less
Pressure Gauge	Inspect			o					Every 2500 hours or less

o – Inspect


Δ – Replace or perform action

NOTES:

1. Inspect and perform maintenance periodically according to maintenance schedule.
2. The maintenance schedule relates to the normal operating conditions. If the circumstances and load condition are adverse, shorten the cycle time and do maintenance accordingly.
3. The tension of the V-belt should be adjusted during the initial stage and inspected every 1,500 hours afterwards. Proper belt tension for 3/4 to 3 HP units is 2-3 lbs./0.5 inch deflection; for 5 to 20 HP units, 4-6 lbs./0.5 inch deflection.

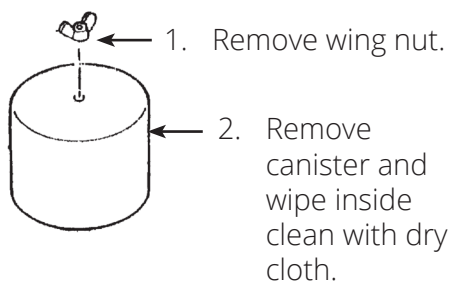


3. Remove and discard filter cartridge.
4. Install new filter cartridge. **Do not attempt to clean and reuse filter cartridge.**

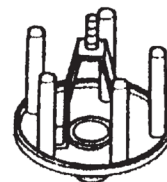

5. Wipe inside clean with dry cloth.

Maintenance

Ring and Piston Set Replacement

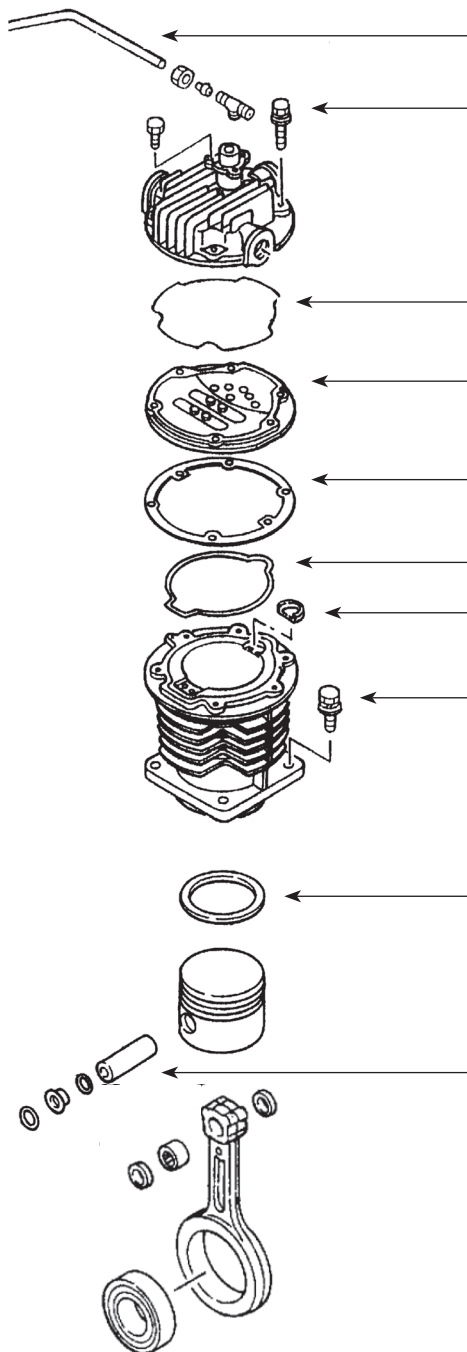

1. Remove unloader line (Two-stage pumps only).
2. Remove cylinder head bolts on each cylinder.
3. Remove and discard form seal. Replace with new form seal.
4. Replace form seal.
5. Remove valve plate and clean with dry cloth.
6. Remove and discard spacer gasket. Replace with the new gasket.
7. Remove and discard cylinder seal. Replace with the new seal.
8. Remove and discard valve wear pad. Replace with new pad.
9. Remove cylinder bolts and cylinder. Note the cylinder orientation. Wipe cylinder with dry cloth.
10. Remove piston ring or rings.
11. Remove wrist pin and piston. Replace with new piston and wrist pin set.
12. Replace ring or rings.
13. Torque cylinder bolts with designated torque (refer to chart below).
14. Install valve set with new seals.
15. Install head and cylinder head bolts. Torque head bolts to 156 in-lb.
16. Reconnect unloader tubing.
17. Unit is ready for full operation. No break-in is required.
18. See pump manual for detailed parts and instructions.

Model	Cylinder Bolt Torque	Head Bolt Torque
OPS011/OPS015/OPS030	156 in. lb.	156 in. lb.
OPT050/OPT075/OPT100/OPT150	295 in. lb.	156 in. lb.


Oil-less Basemount Air Compressor

Operating & Maintenance Manual

POWEREX®


Replacement Parts

Ref. #	Description	Part Number		Qty
		Standard Pressure	185 PSI	
1	Pump			
	1 HP	OPS011		1
	1.5 HP	OPS015		1
	2 - 3 HP	OPS030		1
	5 HP	OPT050		1
	7.5 HP	OPT100	OPT075	1
	10 HP	OPT100		1
	15 HP	OPT150		1
2	Beltguard Bracket			
	1 - 1.5 HP	JP001100AV		1
	2 - 3 HP	SM050800AV		1
	5 HP	JP321600AV		1
	7.5 HP	JP013500AV	SM065005AV	1
	10 - 15 HP	JP013500AV		1
3	Beltguard			
	1 - 1.5 HP	BG012400AV (BG FRONT)		1
		JP001201AV (CHANNEL)		1
	2 - 3 HP	BG318500AV (BG BACK)		1
		BG318600AV (BG FRONT)		1
	5HP	BG311300AV (BG BACK)		1
		BG311400AV (BG FRONT)		1
	7.5 - 10 - 15 HP	BG218400AV (BG BACK)		1
		BG218500AV (BG FRONT)		1
4	Belt			
	1 HP	BT023300AV		1
	1.5 HP	BT009500AV		1
	2 HP	BT011300AV		1
	3 HP	BT008500AV		1
	5 HP	BT022100AV		2
	7.5 HP	BT011200AV	BT011600AV	2
	10 HP	BT009200AV	BT009202AV	2
	15 HP	BT010200AV	BT009201AV	2

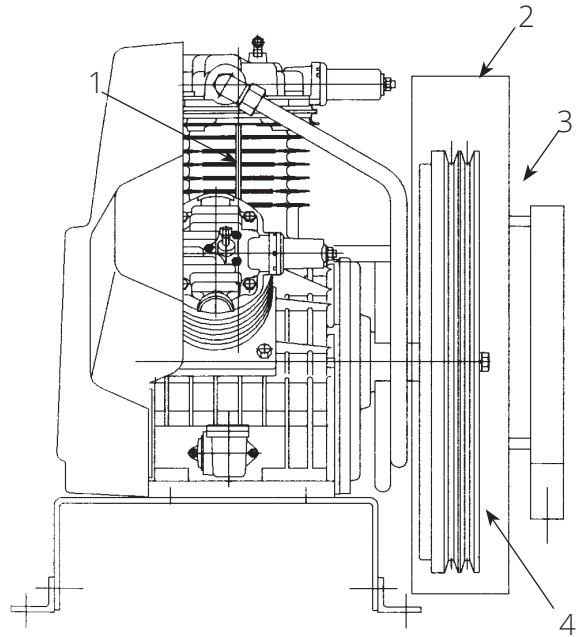

Replacement Parts

Ref. #	Description	Part Number		Qty
		Standard Pressure	185 PSI	
1	Motor Pulley			
	1 HP	PU009725AV		1
	1.5 HP	PU009825AV		1
	2 HP	PU009778AV		1
	3 HP	PU009777AV		1
	5 HP	PU202634AV		1
	7.5 HP	PU009775AV	PU009775AV	1
	10 HP	PU009772AV	PU009775AV	1
	15 HP	PU009756AV	PU009782AV	1
2	Motor			1
	1 HP			1
	230V / 460V	MC301561AV		1
	1.5 HP			1
	230V / 460V	MC304302AV		1
	2 HP			1
	208V	MC304601AV		1
	230V / 460V	MC304501AV		1
	3 HP			1
	208V	MC304237AV		1
	230V / 460V	MC304201AV		1
	5 HP			1
	208V	MC304229AV		1
	230V / 460V	MC304203AV		1
	7.5 HP			1
	208V	MC304608AV		1
	230V / 460V	MC304208AV		1
	10 HP			1
	208V	MC304549AV		1
	230V / 460V	MC304210AV		1
	15 HP			1
	208V	MC304615AV		1
	230V / 460V	MC304212AV		1
3	Mounts			
	1 - 1.5 HP	JP009100AV		4
	2 - 5 HP	IS041600AV		4
	7.5 - 15 HP	BA106100AV	BA106100AV	4
4	Baseplate			
	1 - 1.5 HP	BA000200AV		1
	2 - 3 HP	BA000301AV		1
	5 HP	BA000401AV		1
	7.5 - 15 HP	BA060101AV	BA060101AV	1

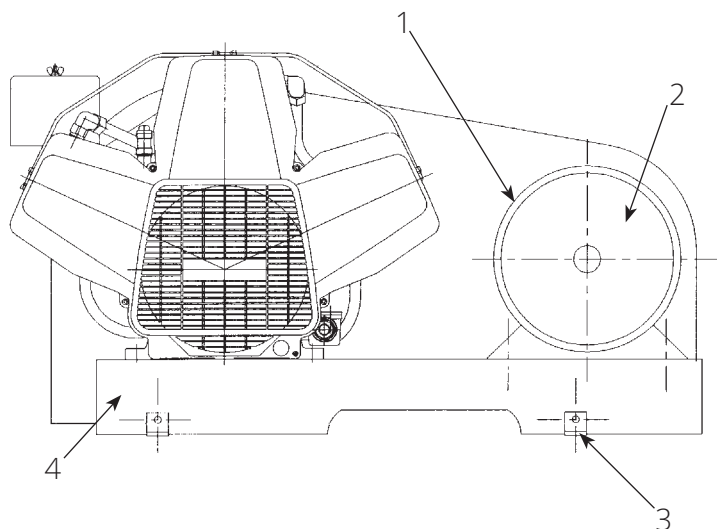

[illegible]

Applicable to Non-OEM Customers in the U.S. & Canada Only

The limited warranty below supersedes any other documentation provided. In the event of a conflict between these terms and conditions and any other document provided, the terms and conditions below shall control.

Warranty and Remedies.

(a) General. Powerex warrants each Compressor System, Vacuum System, Vacuum Pump, Compressor Air-End, or Powerex branded Accessory (collectively “Products”, individually each a “Product”) to be free from defects in material and workmanship (“Defects”) at the date of shipment. This warranty shall apply only to Products that are purchased and used in the United States of America and in Canada. EXCEPT AS SET FORTH BELOW, NO OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL EXIST IN CONNECTION WITH THE SALE OR USE OF SUCH PRODUCTS. TO THE EXTENT PERMITTED BY LAW, ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED. All warranty claims must be made in writing and delivered to Powerex in accordance with the procedures set forth on its website (www.powerexinc.com), or such claim shall be barred. Upon timely receipt of a warranty claim, Powerex shall inspect the Product claimed to have a Defect, and Powerex shall repair, or, at its option, replace, free of charge, any Product which it determines to have had a Defect ; provided, however, that if circumstances are such as to preclude the remedying of Defect by repair or replacement, Powerex shall, upon return of the Product, refund to buyer any part of the purchase price of such Products paid to Powerex. Freight for returning Products to Powerex for inspection shall be paid by buyer. The warranties and remedies herein are the sole and exclusive remedy for any breach of warranty or for any other claim based on any Defect, or non-performance of the Products, whether based upon contract, warranty or negligence.

(b) (i) Standard Period of Warranty – Parts and Labor. The purchase of any system includes our standard warranty. Powerex warrants and represents all Products shall be free from Defects for the first eighteen (18) months from the date of shipment by Powerex, or twelve (12) months from the documented date of startup, or five thousand (5,000) hours of use, whichever occurs first. During such warranty period, Powerex shall be fully liable for all Defects in the Products (the “Product Defects”), i.e., all costs of repair or replacement, which may include “in and out” charges, so long as the Products are located in the United States or Canada, and the Products are reasonably located and accessible by service personnel for removal. “In and out” charges include the costs of removing a Product from buyer’s equipment for repair or replacement.

(ii) Premium Period of Warranty – Parts and Labor. In order to be eligible for premium warranty coverage, a premium warranty for each system must be purchased when order is placed. Powerex warrants and represents all Products shall be free from Defects for the first thirty (30) months from the date of shipment by Powerex, or twenty-four (24) months from the documented date of startup, or seven thousand five hundred (7,500) hours of use, whichever occurs first. During such warranty period, Powerex shall be fully liable for all Defects in the Products (the “Product Defects”), i.e., all costs of repair or replacement, which may include “in and out” charges, so long as the Products are located in the United States or Canada, and the Products are reasonably located and accessible by service personnel for removal. “In and out” charges include the costs of removing a Product from buyer’s equipment for repair or replacement.

(c) Additional Period of Warranty – Parts Only (No Labor). In addition to the above, Powerex warrants each Powerex branded Compressor Air-End and Vacuum Pump shall be free of Defects for a period of forty-two (42) months from the date of shipment by Powerex, or thirty-six (36) months from the documented date of startup, or ten thousand (10,000) hours of use, whichever occurs first. Supplier’s repair or replacement of any Product shall not extend the period of any warranty of any Product. This warranty applies to the exchange of part(s) found to be defective by an Authorized Powerex Service Representative only.

(d) Replacement Pumps – Parts Only (No Labor). For any replacement Air-End or Vacuum Pumps installed on a Powerex manufactured system or unit after any initial warranty period has expired or where another warranty does not apply for any reason, Powerex warrants that the Air-End or Vacuum Pumps shall be free of Defects

for a period of thirty-six (36) months from the date of shipment by Powerex or ten thousand (10,000) hours of use, whichever comes first. For any replacement Air-End or Vacuum Pumps installed on a system that was not manufactured by Powerex after any initial warranty period has expired or where another warranty does not apply for any reason, Powerex warrants that the Air-End or Vacuum Pumps shall be free of Defects for the first twelve (12) months from the date of shipment by Powerex. Supplier's repair or replacement of any Product shall not extend the period of any warranty of any Product. This warranty applies to the exchange of part(s) found to be defective by an Authorized Powerex Service Representative only.

(e) Replacement Motors – Parts Only (No Labor). For any replacement motor installed on a Powerex manufactured system or unit after any initial warranty period has expired or where another warranty does not apply for any reason, Powerex warrants that the replacement motor shall be free of Defects for the first twelve (12) months from the date of shipment by Powerex. For any replacement motor installed on a system or unit that was not manufactured by Powerex after any initial warranty period has expired or where another warranty does not apply for any reason, Powerex warrants that the replacement motor shall be free of Defects for the first ninety (90) days from the date of shipment by Powerex. Supplier's repair or replacement of any Product shall not extend the period of any warranty of any Product. This warranty applies to the exchange of part(s) found to be defective by an Authorized Powerex Service Representative only.

(f) Replacement Parts – Parts Only (No Labor). For other replacement parts besides motors, Air-End or Vacuum Pumps installed on a Powerex manufactured system or unit after any initial warranty period has expired or where another warranty does not apply for any reason, Powerex warrants that such replacement parts will be free from Defects for the first twelve (12) months from the date of shipment by Powerex. For other replacement parts besides motors, Air-End or Vacuum Pumps installed on a system or unit that was not manufactured by Powerex after any initial warranty period has expired or where another warranty does not apply for any reason, Powerex makes no warranties. Supplier's repair or replacement of any Product shall not extend the period of any warranty of any Product. This warranty applies to the exchange of part(s) found to be defective by an Authorized Powerex Service Representative only.

(g) Coverage. The warranty provided herein applies to Powerex manufactured units or systems only.

(h) Exceptions. Notwithstanding anything to the contrary herein, Powerex shall have no warranty obligations with respect to Products:

- (i)** That have not been installed in accordance with Powerex's written specifications and instructions;
 - (ii)** That have not been maintained in accordance with Powerex's written instructions;
 - (iii)** That have been materially modified without the prior written approval of Powerex; or
 - (iv)** That experience failures resulting from operation, either intentional or otherwise, in excess of rated capacities or in an otherwise improper manner.
- (i)** The warranty provided herein shall not apply to:
- (i)** any defects arising from corrosion, abrasion, use of insoluble lubricants, or negligent attendance to or faulty operation of the Products;
 - (ii)** ordinary wear and tear of the Products; or
 - (iii)** defects arising from abnormal conditions of temperature, dirt or corrosive matter;
 - (iv)** any OEM component which is shipped by Powerex with the original manufacturer's warranty, which shall be the sole applicable warranty for such component.

Limitation of Liability. NOTWITHSTANDING ANYTHING TO THE CONTRARY HEREIN, TO THE EXTENT ALLOWABLE UNDER APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL POWEREX BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, PUNITIVE, SPECULATIVE OR INDIRECT LOSSES OR DAMAGES WHATSOEVER ARISING OUT OF OR IN ANY WAY RELATED TO ANY OF THE PRODUCTS OR GOODS SOLD OR AGREED TO BE SOLD BY POWEREX TO

BUYER. TO THE EXTENT ALLOWABLE UNDER APPLICABLE LAW, POWEREX'S LIABILITY IN ALL EVENTS IS LIMITED TO, AND SHALL NOT EXCEED, THE PURCHASE PRICE PAID.

Warranty Disclaimer. Powerex has made a diligent effort to illustrate and describe the Products in its literature, including its Price Book, accurately; however, such illustrations and descriptions are for the sole purpose of identification, and do not express or imply a warranty that the Products are merchantable, or fit for a particular purpose, or that the Products will necessarily conform to the illustrations or descriptions.

Product Suitability. Many jurisdictions have codes and regulations governing sales, construction, installation, and/or use of Products for certain purposes, which may vary from those in neighboring areas. While Powerex attempts to assure that its Products comply with such codes, it cannot guarantee compliance, and cannot be responsible for how the product is installed or used. Before purchase and use of a Product, please review the Product applications, and national and local codes and regulations, and be sure that the Product, installation, and use will comply with them.

Claims. Any non-warranty claims pertaining to the Products must be filed with Powerex within 6 months of the invoice date, or they will not be honored. Prices, discounts, and terms are subject to change without notice or as stipulated in specific Product quotations. Powerex shall not be liable for any delay or failure arising out of acts of the public enemy, fire, flood, or any disaster, labor trouble, riot or disorder, delay in the supply of materials or any other cause, whether similar or dissimilar, beyond the control of Company. All shipments are carefully inspected and counted before leaving the factory. Please inspect carefully any receipt of Products noting any discrepancy or damage on the carrier's freight bill at the time of delivery. Discrepancies or damage which obviously occurred in transit are the carrier's responsibility and related claims should be made promptly directly to the carrier. Returned Products will not be accepted without prior written authorization by Powerex and deductions from invoices for shortage or damage claims will not be allowed. **UNLESS OTHERWISE AGREED TO IN WRITING, THE TERMS AND CONDITIONS CONTAINED IN THIS LIMITED WARRANTY WILL CONTROL IN ANY TRANSACTION WITH POWEREX.** Any different or conflicting terms as may appear on any order form now or later submitted by the buyer will not control. All orders are subject to acceptance by Powerex.