



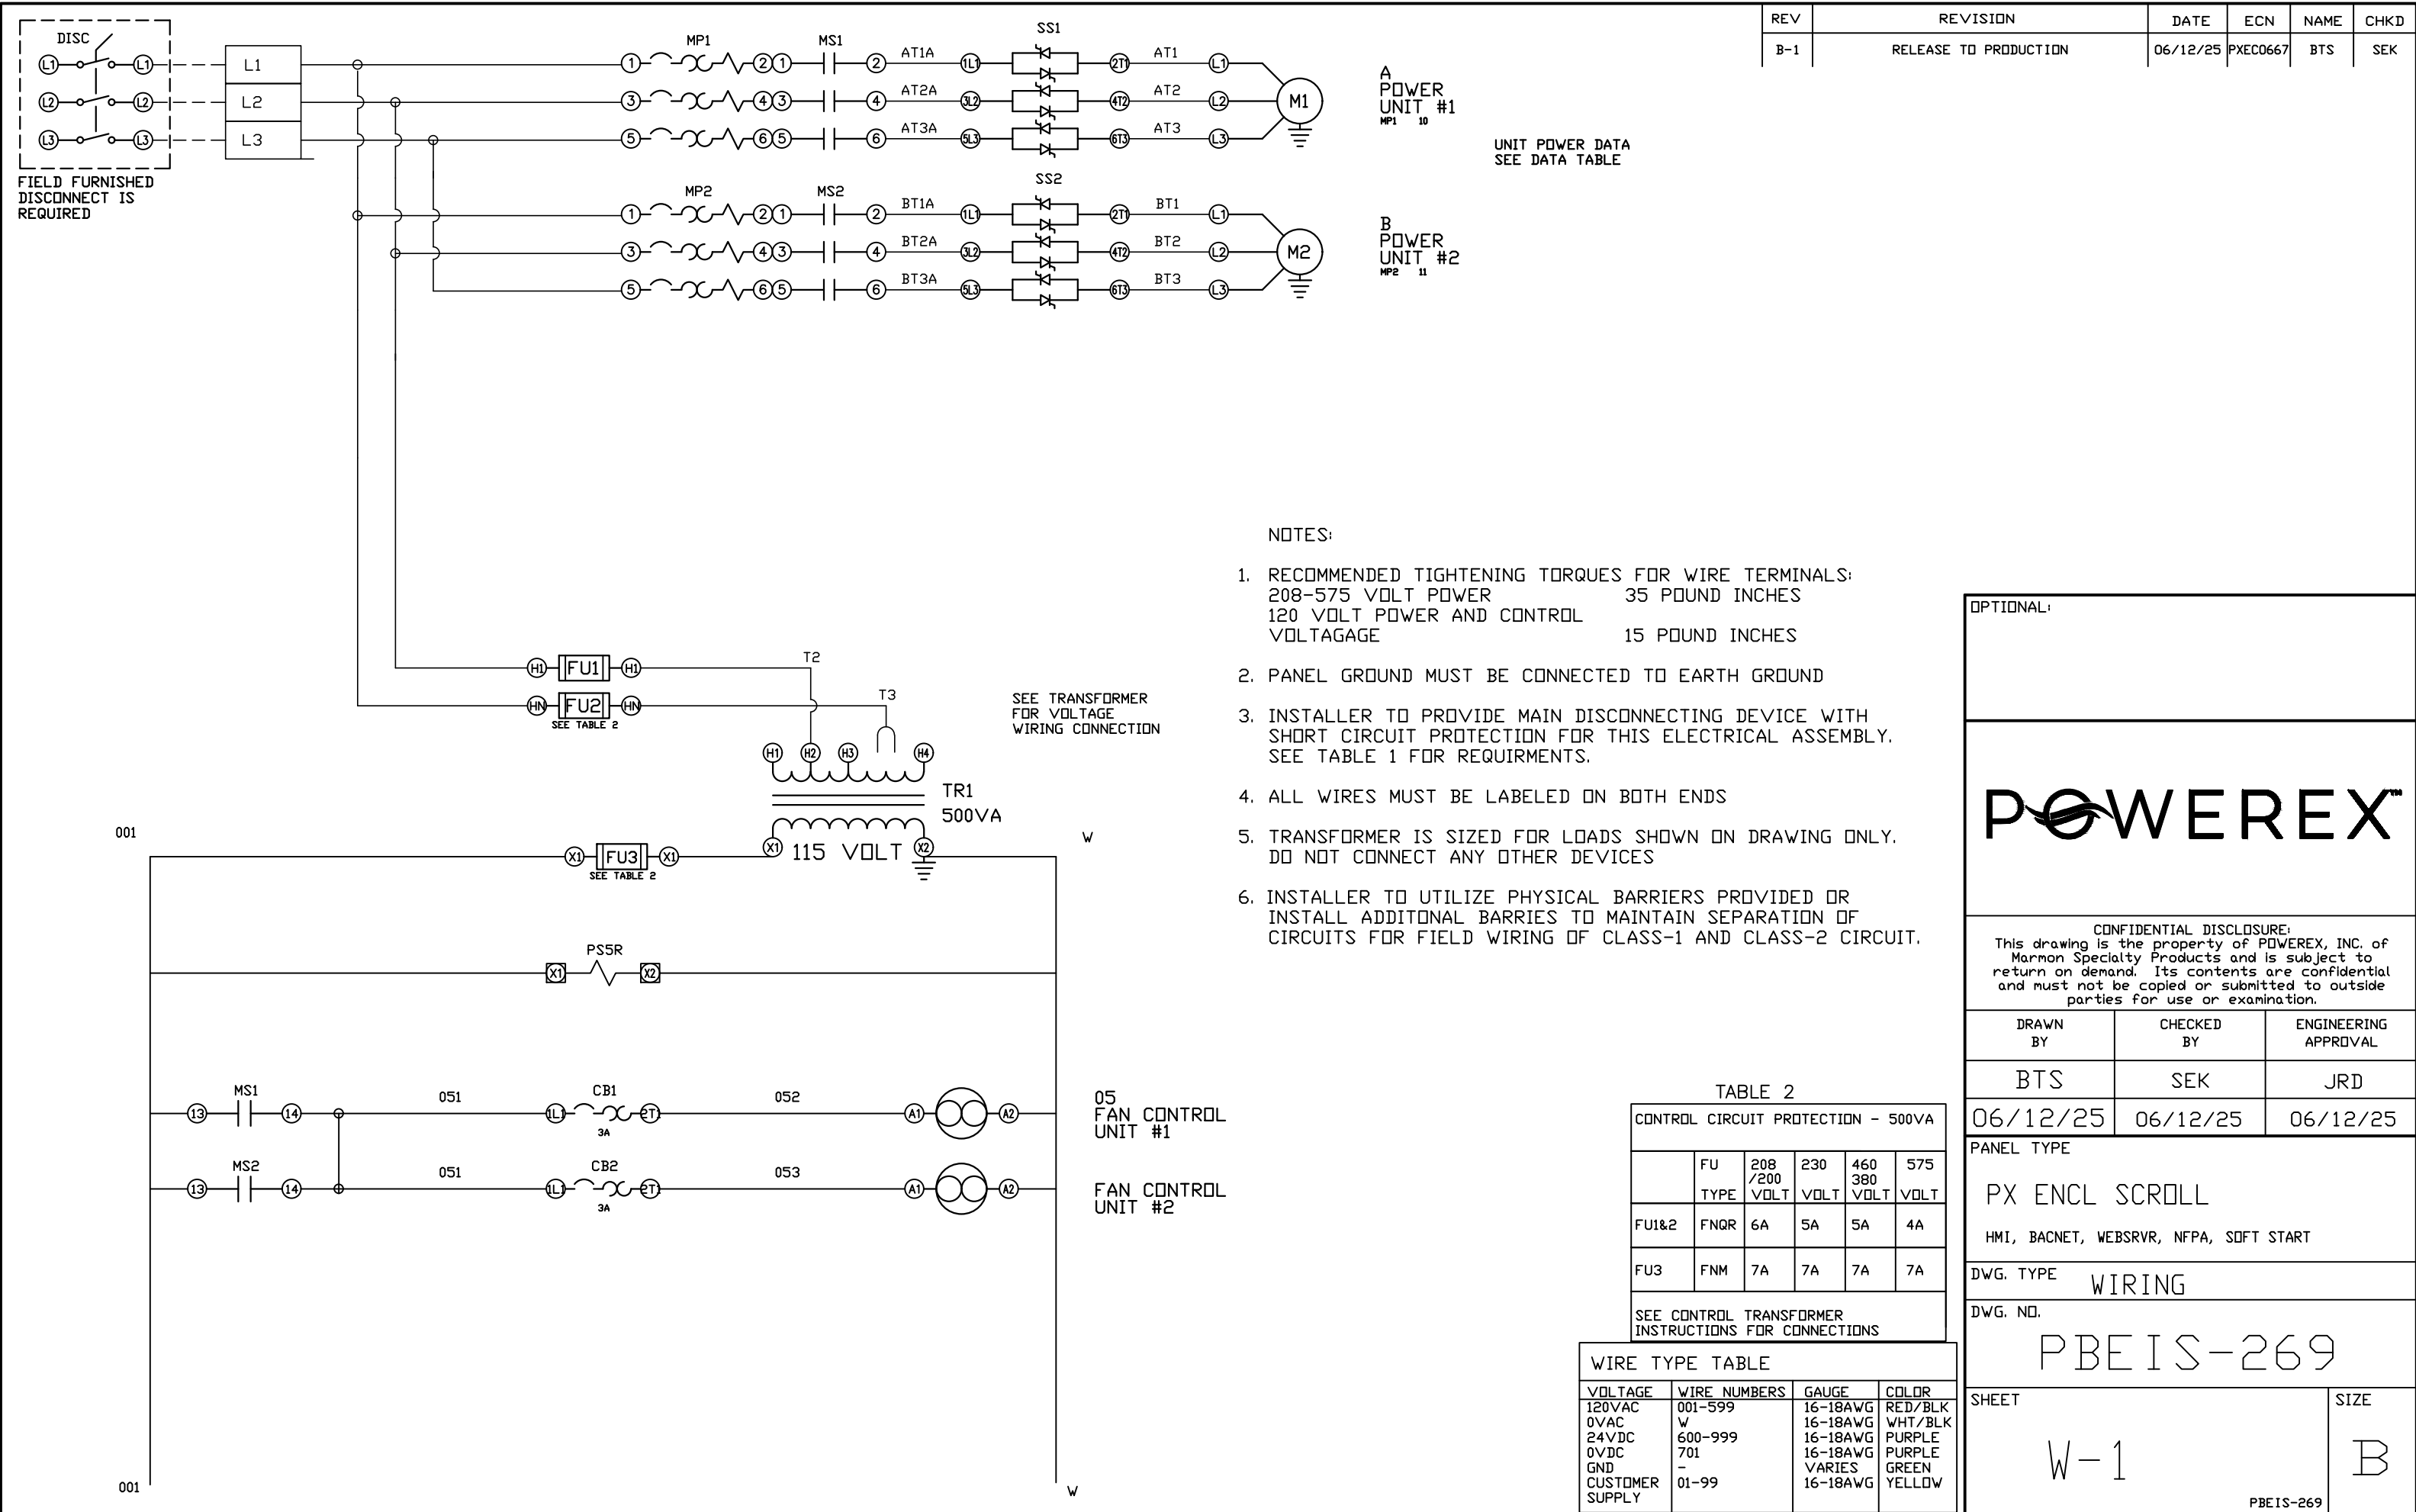

REV	REVISION	DATE	ECN	NAME	CHKD
B-1	RELEASE TO PRODUCTION	06/12/25	PXEC0667	BTS	SEK

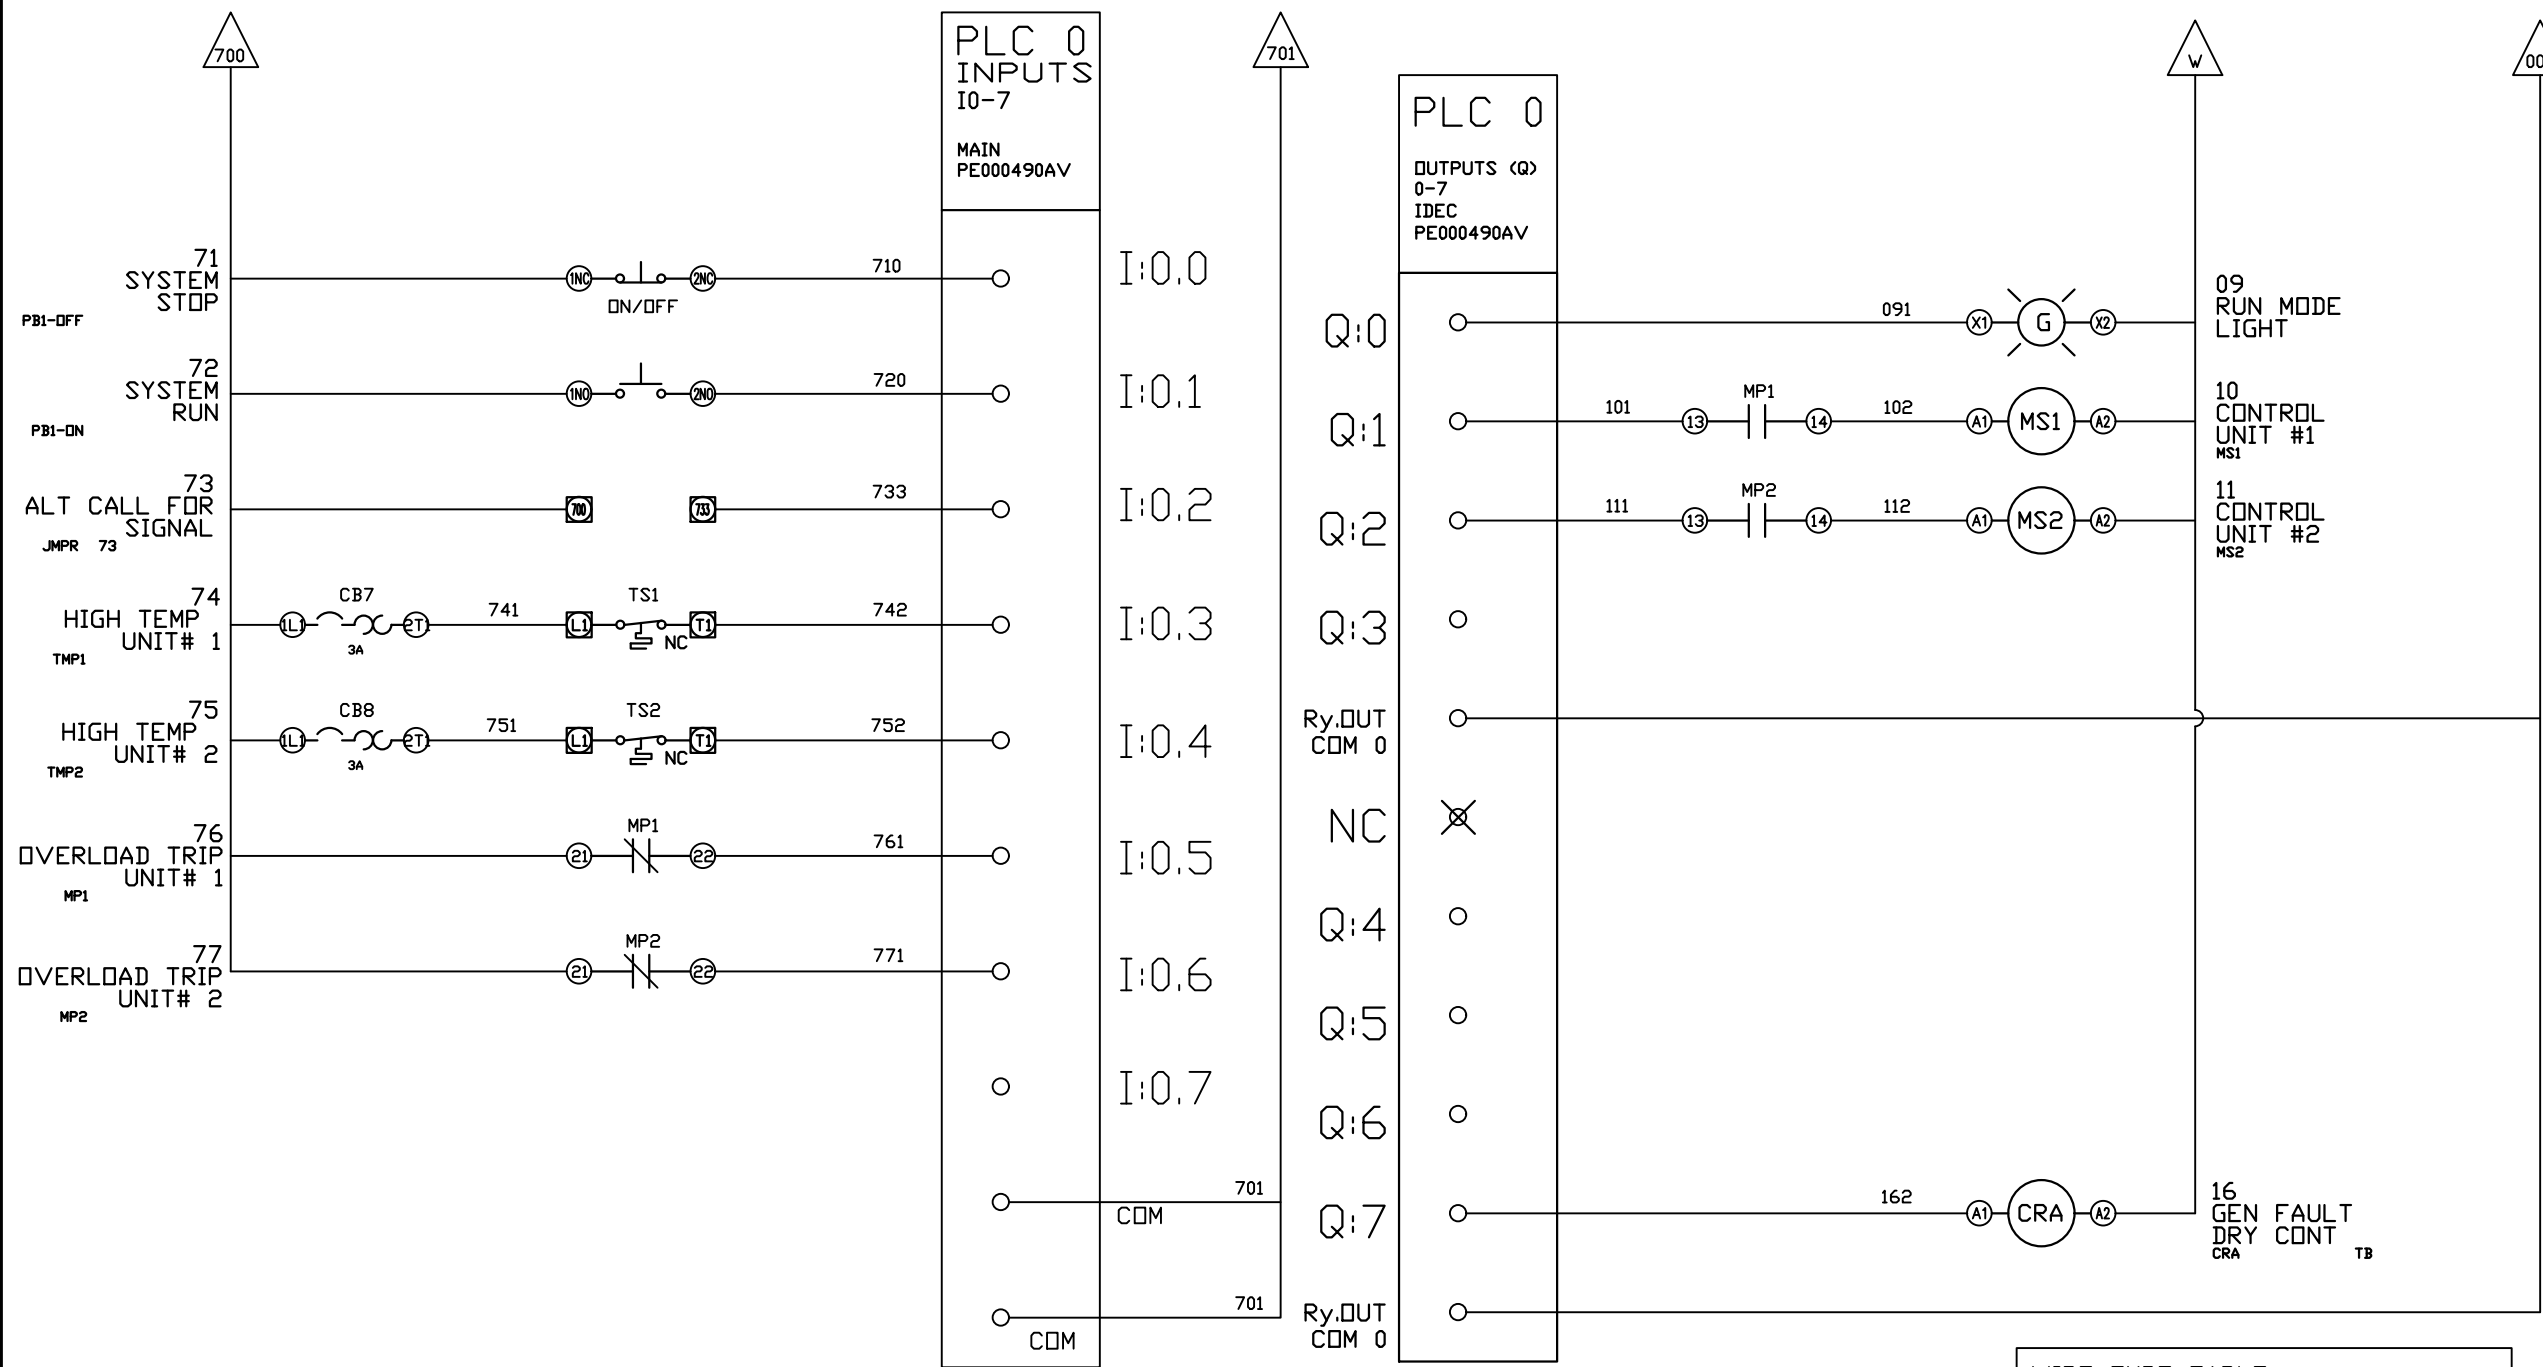

OPTIONAL:

POWEREX™

CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of Marmon Specialty Products and is subject to return on demand. Its contents are confidential and must not be copied or submitted to outside parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
BTS	SEK	JRD
06/12/25	06/12/25	06/12/25

PANEL TYPE

PX ENCL SCROLL

HMI, BACNET, WEBSVR, NFPA, SOFT START

DWG. TYPE WIRING

DWG. NO.

PBEIS-269


SHEET	SIZE
W-2	B

PBEIS-269

SET START TIME TO 3-SEC (B)

SET INITIAL VOLT SETTING TO 67% (D)

SET STOP TIME TO 60 SEC (C)

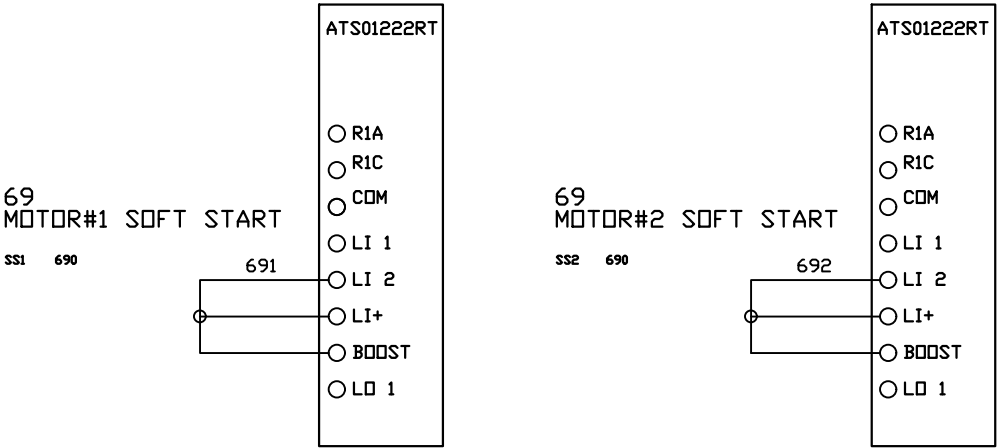

OPTIONAL:



CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of
Marmon Specialty Products and is subject to
return on demand. Its contents are confidential
and must not be copied or submitted to outside
parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
BTS	SEK	JRD
06/12/25	06/12/25	06/12/25

PANEL TYPE

PX ENCL SCROLL

HMI, BACNET, WEBSVR, NFPA, SOFT START

DWG. TYPE WIRING

DWG. NO.



PBEIS-269

SHEET	SIZE
W-4	B

PBEIS-269


REV	REVISION	DATE	ECN	NAME	CHKD
B-1	RELEASE TO PRODUCTION	06/12/25	PXEC0667	BTS	SEK

FOR ELECTRICAL ISOLATION OF PUMPS 1-2
TURN OFF CIRCUIT BREAKERS #1 ,2, 7 AND
8. TURN OFF MP1 AND MP2. THEN PLACE
LOCK OR TAG ON EACH DEVICE.

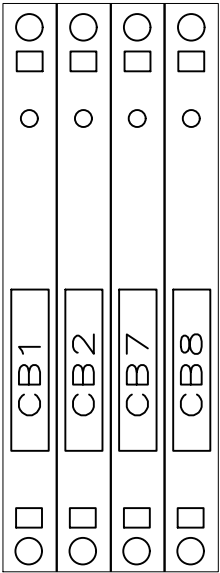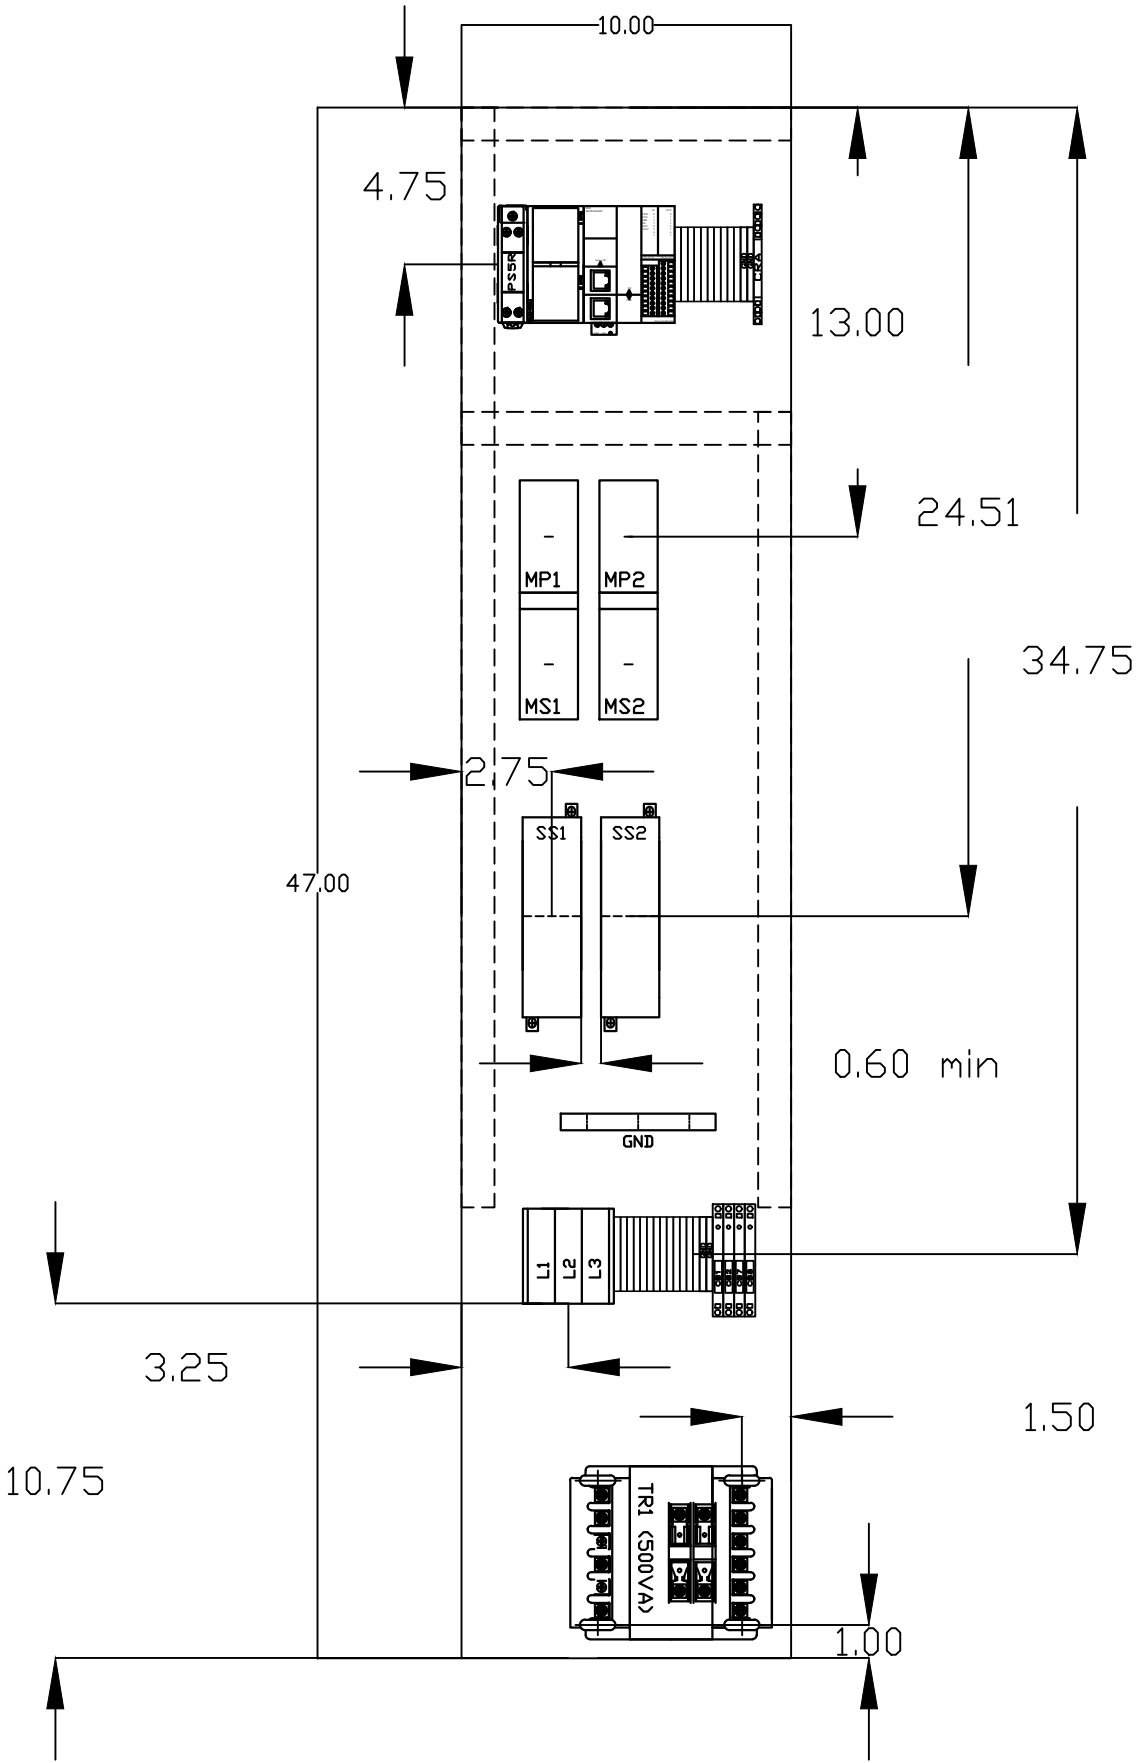


FIELD LOCATED TERMINAL BLOCKS

SIDE 1 PUMPS TEMP SWITCH
AND FAN CONNECTIONS




CONTROL PANEL TERMINAL BLOCKS

TOP TERMINAL STRIP



EXTERNAL
CONTROL
CONNECTION
(WHEN ENABLED)

BOTTOM TERMINAL STRIP

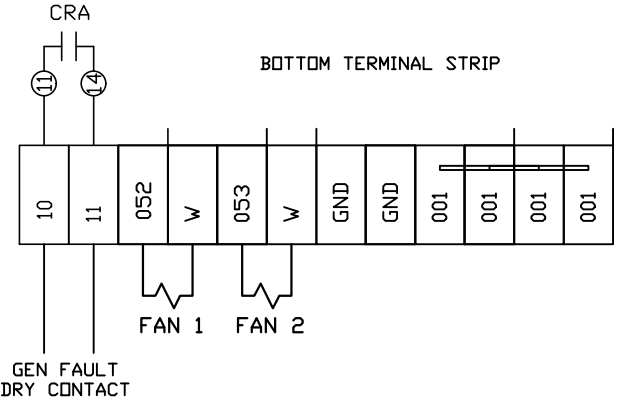

OPTIONAL:

POWEREX™

CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of
Marmion Specialty Products and is subject to
return on demand. Its contents are confidential
and must not be copied or submitted to outside
parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
BTS	SEK	JRD
06/12/25	06/12/25	06/12/25

PANEL TYPE
PX ENCL SCROLL
HMI, BACNET, WEBSVR, NFPA, SOFT START

DWG. TYPE LAYOUT

DWG. NO. PBEIS-269

SHEET LA-1
SIZE B

REV	REVISION	DATE	ECN	NAME	CHKD
B-1	RELEASE TO PRODUCTION	06/12/25	PXEC0667	BTS	SEK

TABLE 1

PANEL DATA 3Ø – 60 Hz 500VA CONTROL CIRCUIT					(B) BRANCH CIRCUIT PROTECTION – PROVIDED BY INSTALLER		
PANEL PART NUMBER	MOTOR SIZE EACH	(A) POWER (V/PH)	(A) MOTOR LOAD EACH (FLA)	PANEL LOAD TOTAL (FLA)	NONTIME DELAY FUSE	TIME-DELAY FUSE	INVERSE-TIME CIRCUIT BREAKER
PBEIS269A2AJ	10	208V/3Ø	25.4	53.2	110A	80A	100A
PBEIS269A3AJ	10	230V/3Ø	23.7	49.6	100A	70A	90A
PBEIS269A4AJ	10	460V/3Ø	11.9	24.9	50A	35A	45A
NOTE– ADJUST OVERCURRENT PROTECTION DEVICE NOT TO EXCEED 115% OF MOTOR NAMEPLATE FLA VALUE							

TABLE 1

PANEL DATA 3Ø – 60 Hz 500VA CONTROL CIRCUIT					(B) BRANCH CIRCUIT PROTECTION – PROVIDED BY INSTALLER		
PANEL PART NUMBER	MOTOR SIZE EACH	(A) POWER (V/PH)	(A) MOTOR LOAD EACH (FLA)	PANEL LOAD TOTAL (FLA)	NONTIME DELAY FUSE	TIME-DELAY FUSE	INVERSE-TIME CIRCUIT BREAKER
PBEIS26972AJ	7.5	208V/3Ø	19.2	40.8	80A	60A	70A
PBEIS26973AJ	7.5	230V/3Ø	17.7	37.6	80A	60A	70A
PBEIS26974AJ	7.5	460V/3Ø	8.87	18.8	40A	30A	35A
NOTE– ADJUST OVERCURRENT PROTECTION DEVICE NOT TO EXCEED 115% OF MOTOR NAMEPLATE FLA VALUE							

OPTIONAL:

POWEREX™

CONFIDENTIAL DISCLOSURE:
This drawing is the property of POWEREX, INC. of
Marmon Specialty Products and is subject to
return on demand. Its contents are confidential
and must not be copied or submitted to outside
parties for use or examination.

DRAWN BY	CHECKED BY	ENGINEERING APPROVAL
BTS	SEK	JRD
06/12/25	06/12/25	06/12/25

PANEL TYPE	
PX ENCL SCROLL	
HMI, BACNET, WEBSVR, NFPA, SOFT START	
DWG. TYPE DATA TABLE	
DWG. NO. PBEIS-269	

SHEET	SIZE
D-1	B
PBEIS-269	