
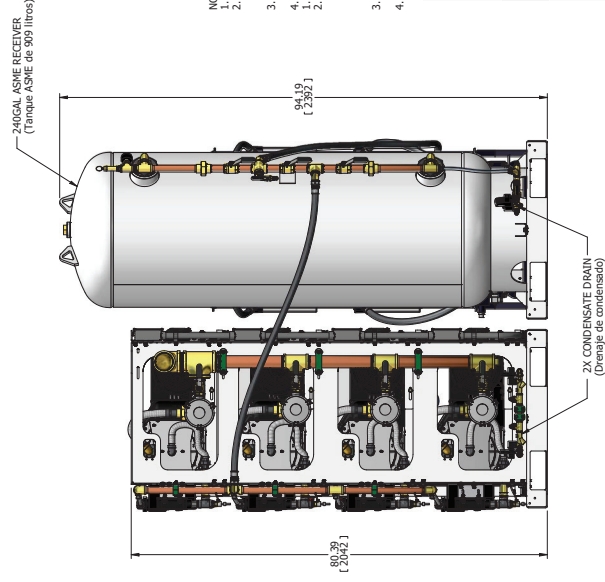
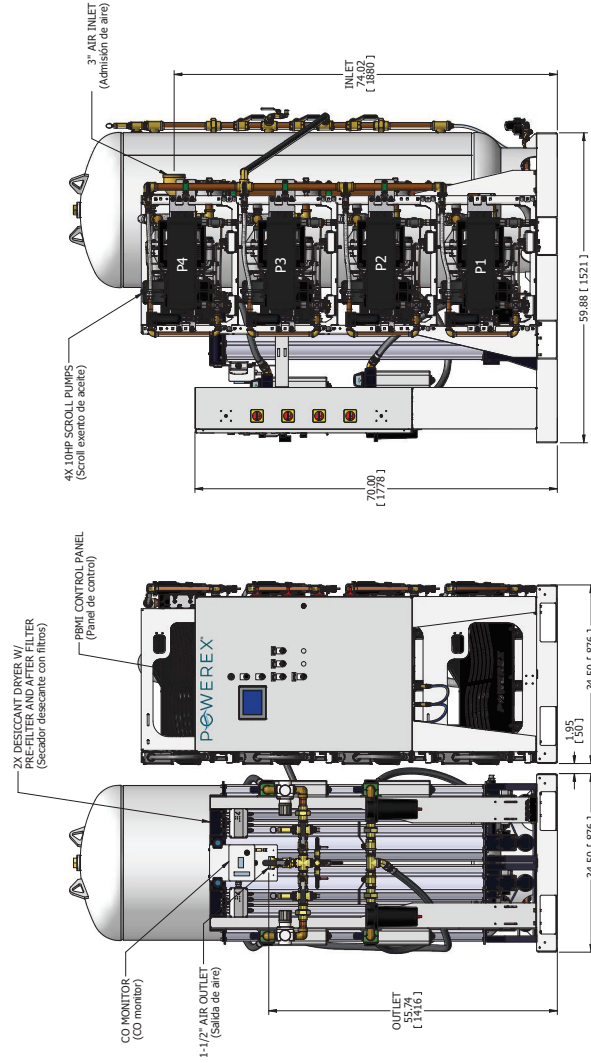


10HP MED OPEN SCROLL QUADPLEX 240GAL DUPLEX DESICCANT

REVISION NOTES		ECN
DESCRIPTION		
PRODUCTION RELEASE		PNE0318

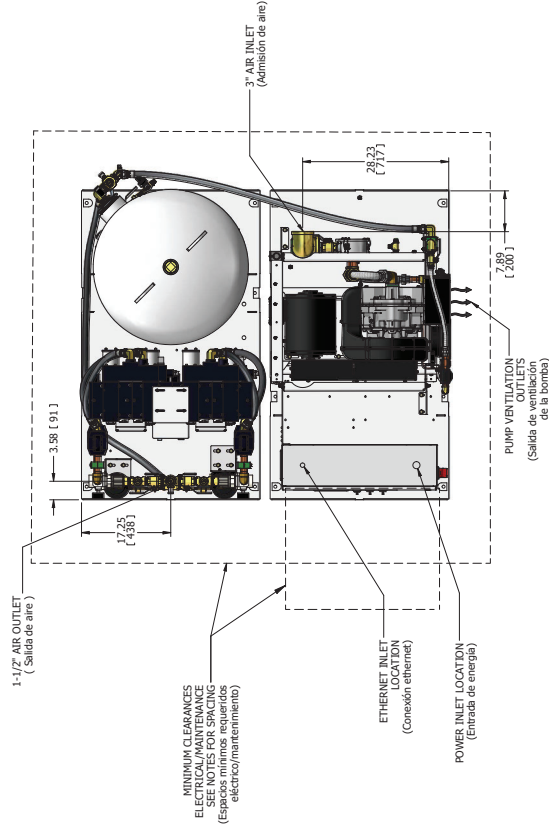


- NOTES:
1. APPROXIMATE WEIGHT: 331 LBS
 2. A MINIMUM OF 2" CLEARANCE IS RECOMMENDED AROUND THE ENTIRE UNIT. CLEARANCE FOR CONTROL PANEL SHALL BE 18" MINIMUM.
 3. SYSTEM DESIGNED IN COMPLIANCE WITH U.S. NFPA 99, LATEST EDITION.
 4. INLET AND OUTLET FLEX HOSES AOD 12" TO CONNECTIONS.
 5. RECOMMENDATIONS QUEL EL ESPACIO LIBRE ALREDEDOR DEL SISTEMA DEBE SER COMO MÍNIMO 24" (600 mm). EL ESPACIO LIBRE PARA EL TAPERO DE 18" (457 mm) DE SEGURIDAD DE LA OSHA NEC.
 6. EL SISTEMA ESTÁ DISEÑADO DE ACUERDO CON LA ÚLTIMA EDICIÓN DE LA NFPA 99.
 7. PARA MÁS INFORMACIÓN, ENTRADA Y SALIDA ALIMENTACIÓN, VER LA ESPECIFICACIÓN.

	ISO 9001:2015 CERTIFIED ISO 9001:2015 CERTIFIED ISO 9001:2015 CERTIFIED	
	ISO 14001:2015 CERTIFIED ISO 14001:2015 CERTIFIED ISO 14001:2015 CERTIFIED	
	ISO 45001:2018 CERTIFIED ISO 45001:2018 CERTIFIED ISO 45001:2018 CERTIFIED	
	ISO 50001:2018 CERTIFIED ISO 50001:2018 CERTIFIED ISO 50001:2018 CERTIFIED	
	ISO 27001:2017 CERTIFIED ISO 27001:2017 CERTIFIED ISO 27001:2017 CERTIFIED	
	ISO 22301:2017 CERTIFIED ISO 22301:2017 CERTIFIED ISO 22301:2017 CERTIFIED	
	ISO 26262:2018 CERTIFIED ISO 26262:2018 CERTIFIED ISO 26262:2018 CERTIFIED	
	ISO 27701:2022 CERTIFIED ISO 27701:2022 CERTIFIED ISO 27701:2022 CERTIFIED	
	ISO 27002:2017 CERTIFIED ISO 27002:2017 CERTIFIED ISO 27002:2017 CERTIFIED	
	ISO 27005:2018 CERTIFIED ISO 27005:2018 CERTIFIED ISO 27005:2018 CERTIFIED	

MSQ10C6xP5

10HP MED OPEN SCROLL QUADPLEX 240GAL DUPLEX DESICCANT

REVISION NOTES	REV
DESCRIPTION	PREC33.B
PRODUCTION RELEASE	

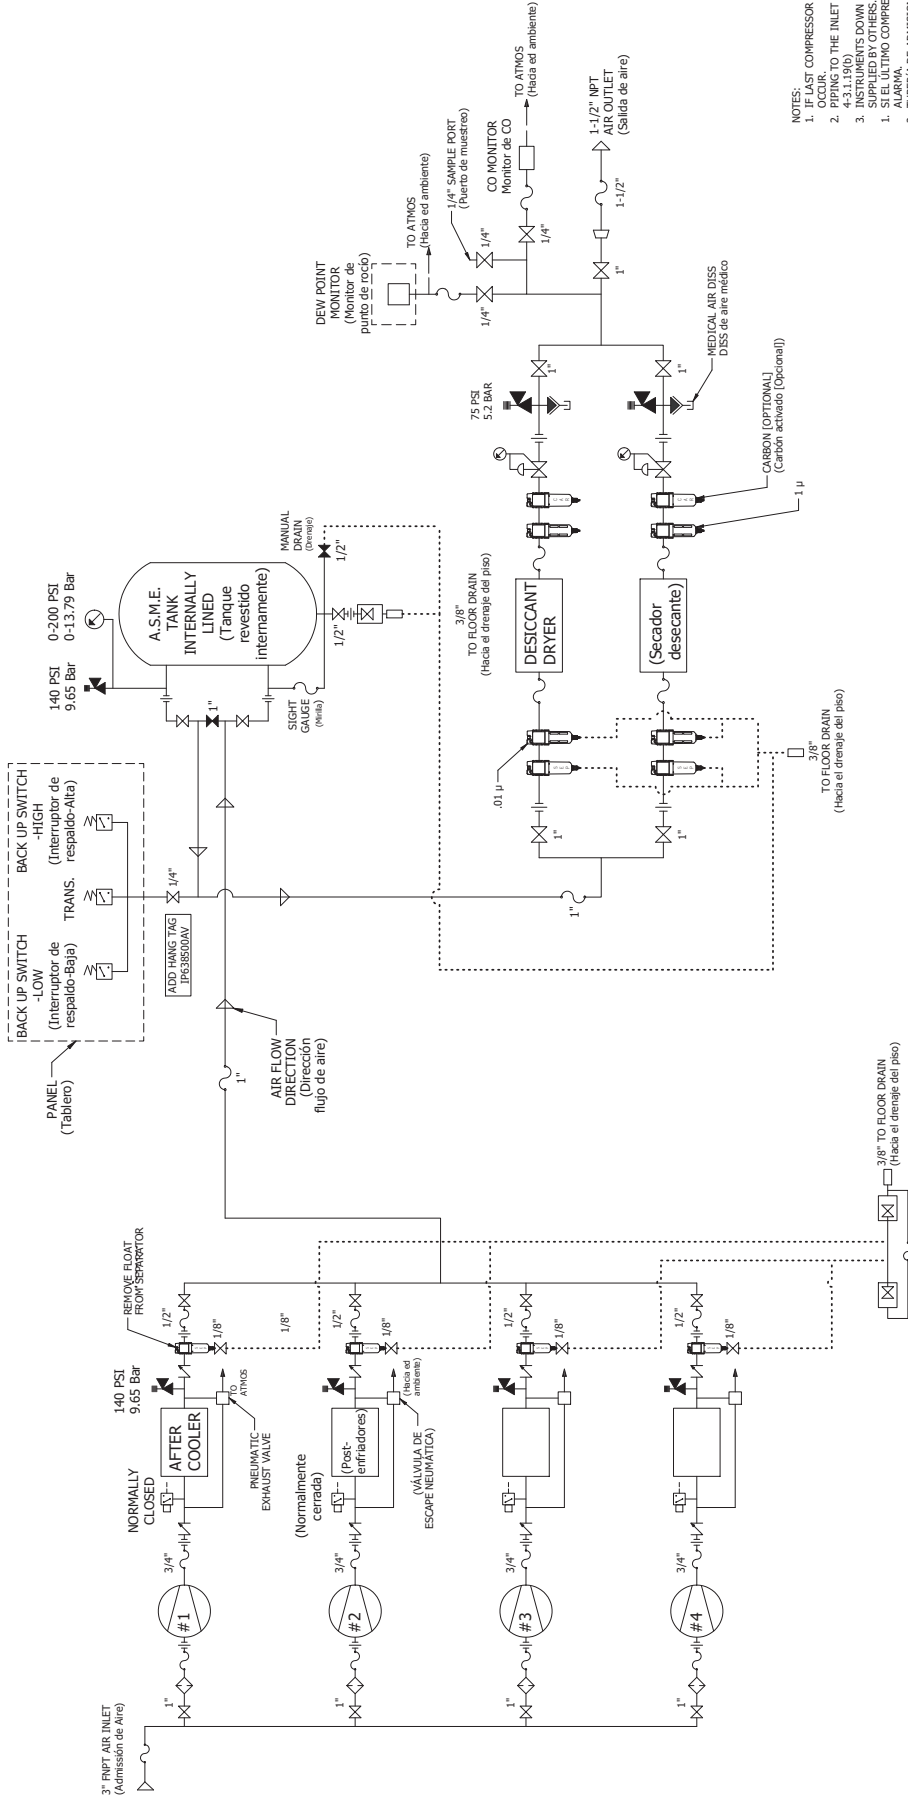

- NOTES:
1. IF LAST COMPRESSOR PLEX IS ENERGIZED ALARM WILL SOUND. (See Note 1 on PLEX 10C6xP5)
 2. PIPING TO THE INLET BY OTHERS AND TO BE PER NFPA99 4-3.1.19(b)
 3. INSTRUMENTS DOWN STREAM OF SOURCE VALVE TO BE SUPPLIED BY OTHERS:
1. THE LAST COMPRESSOR SE ACTIVA, SE PRODUCIRÁ UNA ALARMA.
2. TUBERÍA DE ADMISION POR OTROS Y CUMPLIR CON LA NFPA 99 4-3.1.19 (b).
3. SUPLENISTOS DEAN INSTRUMENTOS POR OTROS.
- ACCESORIOS RECOMENDADOS DE LA VALVULA DE CORTE DE AEROSOL PARA APLICACIONES MEDICAS Y OTROS.

LEGEND (Leyenda)	
	COMPRESSOR PUMP (Compresor de Aire)
	INTAKE FILTER (Filtro admisión)
	FILTER/SEPARATOR (Filtro/Separador)
	AIR LINE (Tubería de Aire)
	BALL VALVE (Válvula bola)
	RELIEF VALVE (Válvula de seguridad)
	CHECK VALVE (Válvula Chequeo)
	DEMAND VALVE (Válvula de demanda)
	CONDENSATE LINE (Línea de condensado)
	FLEX HOSE (Manguera flexible)
	UNION (Unión)
	GAUGE (Manómetro)
	REGULATOR W/ GAUGE (Regulador con Manómetro)
	TEMPERATURE SWITCH (Interruptor temperatura)
	PRESSURE SWITCH/TRANSDUCER (Interruptor/transmisor presión)
	ELECTRIC AUTO DRAIN (Electroválvula de Drenaje)

DO NOT SCALE DRAWING FOR CONSIDERATIONS	DO NOT SCALE DRAWING FOR CONSIDERATIONS
SHEET 2 OF 2	SCALE 1:1
DATE	REVISION DATE
07/18/25	07/18/25
POWEREX	POWEREX
MSQ10C6xP5	MSQ10C6xP5
DESICCANT	DESICCANT

POWEREX