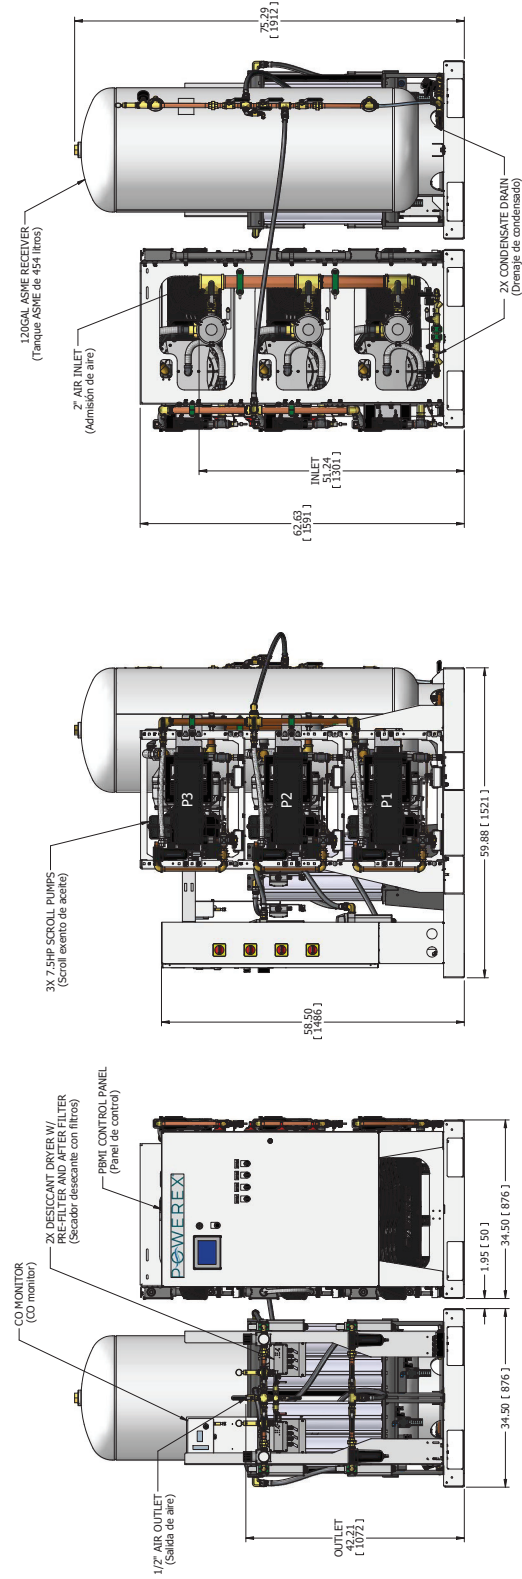
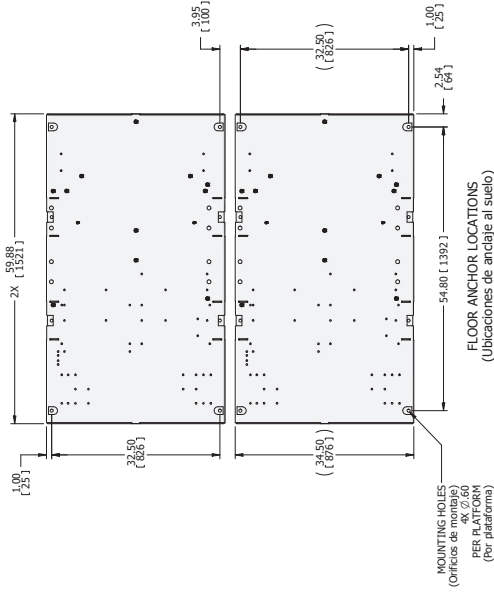
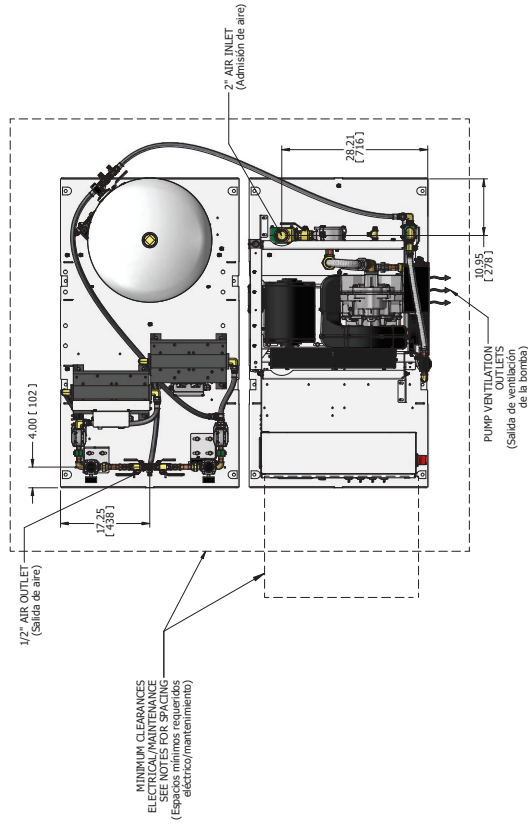


7.5HP MED OPEN SCROLL TRIPLEX 120GAL DUPLEX DESICCANT

REVISION NOTESREVISIONSREVISIONS


- NOTES:**
1. APPROXIMATE WEIGHT: 2312 LBS
 2. A MINIMUM OF 24" CLEARANCE IS RECOMMENDED AROUND THE ENTIRE UNIT. CLEARANCE FOR CONTROLS PANEL SHALL BE 18" MINIMUM.
 3. SYSTEM DESIGNED IN COMPLIANCE WITH U.S. NFPA 99, LATEST EDITION.
 4. INLET AND OUTLET FLEX HOSES ADD 12" TO CONNECTIONS
 5. RECOMMENDATIONS FOR THE SPACE LIBRE ALREDEDOR DEL SISTEMA DEBE SER COMO MÍNIMO 24" (600 mm). EL ESPACIO LIBRE SERÁ EL VALLEJO DE CONTROL PARA LA SEGURIDAD DE LOS OPERARIOS.
 6. LOS REQUERIMIENTOS DE SEGURIDAD DE LOS OPERARIOS.
 7. EL SISTEMA ESTÁ DISEÑADO DE ACUERDO CON LA ÚLTIMA EDICIÓN DE LA NFPA 99.
 8. EL SISTEMA DEBE SER CONECTADO A LA ENTRADA Y SALIDA DE AIRE EN LA SALA DE CONDICIONAMIENTO DE AIRE.

	STUDY LEVEL TO DRAWN CHECKED BY DATE	SOLID EDGE DRAWING INCH (mm) SCALE 1:1	SHEET 1 OF 2 SCALE 1:1 DRAWING FOR DIMENSIONS	PROJECT NO. PROJECT NAME PROJECT LOCATION PROJECT DATE	DESIGNER Kunal Sreethan 07/17/25	REVISION DATE 07/17/25	REVISION B	SIZE D
THIS DRAWING IS THE PROPERTY OF POWEREX. IT IS TO BE USED ONLY FOR THE PROJECT AND SITE SPECIFICALLY IDENTIFIED HEREON. IT IS NOT TO BE REPRODUCED OR COPIED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF POWEREX.				POWEREX 751 887 751 887 751 887				
7.5HP MED OPEN SCROLL TRIPLEX 120CAL DUPLX				COMMENTS / REMARKS MS707C*P5				

MST07C4xP5

7.5HP MED OPEN SCROLL TRIPLEX 120GAL DUPLEX DESICCANT

REVISION NOTES	REV	PEC0318
DESCRIPTION		
PRODUCTION RELEASE		

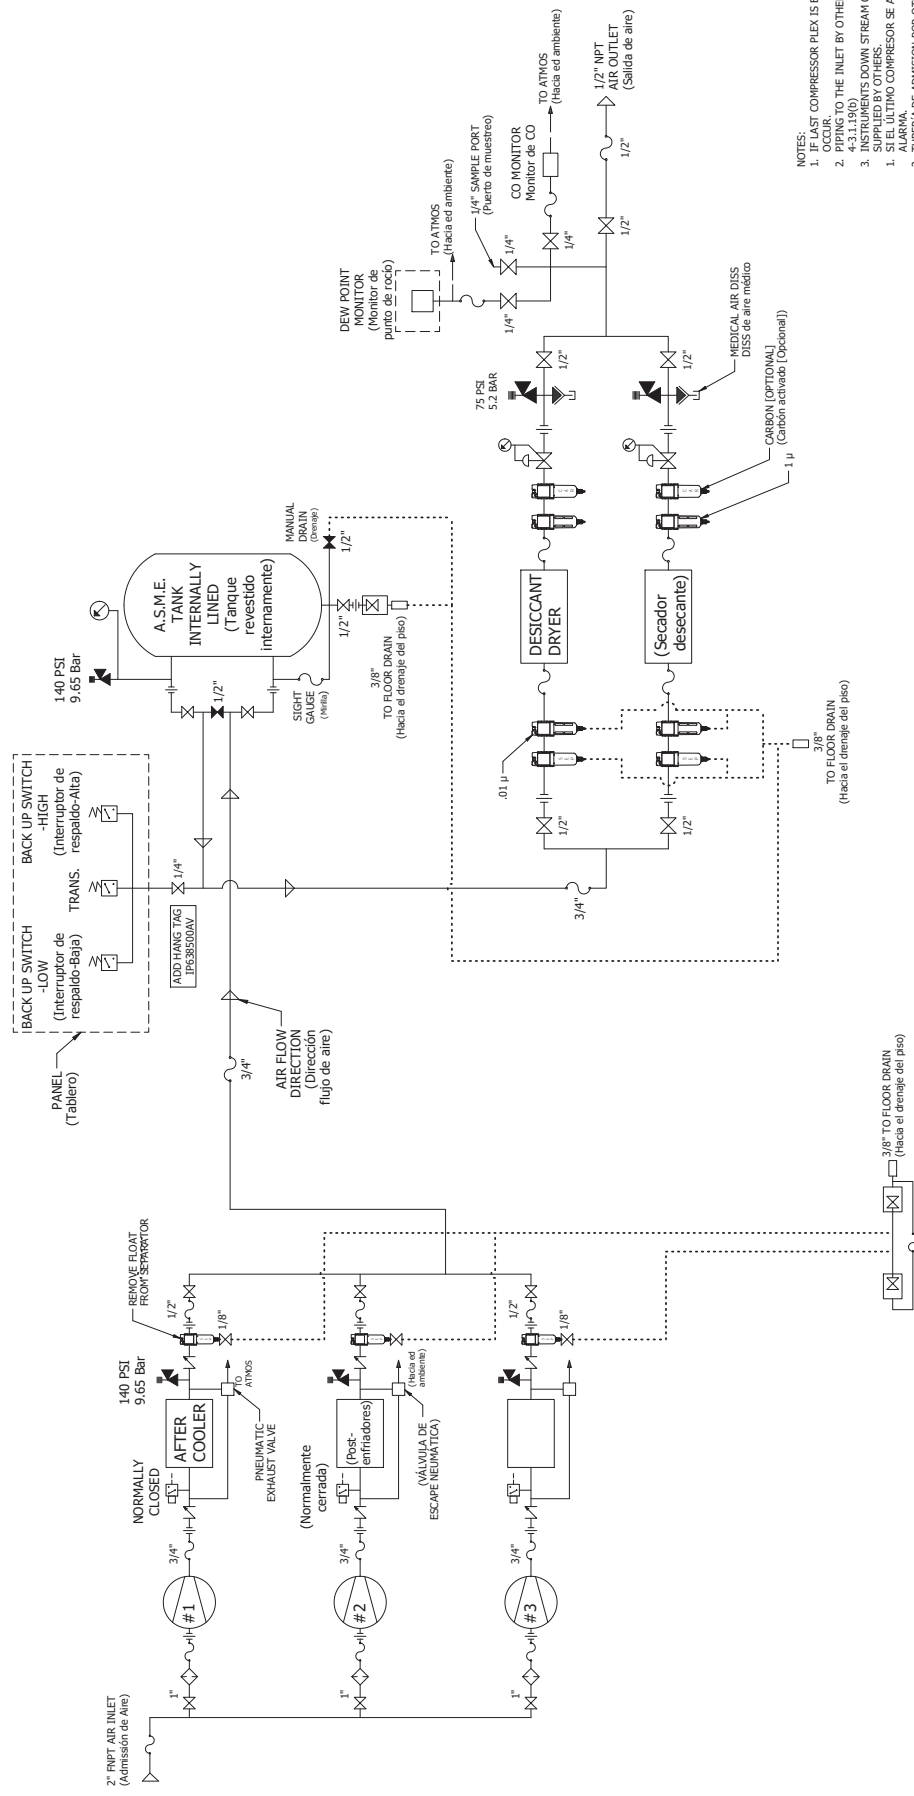

- NOTES:
1. IF LAST COMPRESSOR PLEX IS ENERGIZED ALARM WILL SOUND.
 2. PIPING TO THE INLET BY OTHERS AND TO BE PER NFPA99 4-3.1.19(b).
 3. INSTRUMENTS DOWN STREAM OF SOURCE VALVE TO BE SUPPLIED BY OTHERS.
 1. IF LAST COMPRESSOR SE ACTIVA, SE PRODUCIRÁ UNA ALARMA.
 2. TUBERIA DE ADMISION POR OTROS Y CUMPLIR CON LA NFPA 99 4-3.1.19 (b).
 3. SUMINISTRO SEAN INSTALADOS POR OTROS.
- ACCESORIOS PARA ABAJO DE LA VALVULA DE CORTE DE ADMISION PARA OTROS Y CUMPLIR CON LA NFPA 99 4-3.1.19 (b).

LEGEND (Leyenda)	
COMPRESSOR PUMP (Compresor de Aire)	AIR LINE (Tubería de Aire)
INTAKE FILTER (Filtro admisión)	CONDENSATE LINE (Línea de condensado)
FILTER/SEPARATOR (Filtro/Separador)	FLEX HOSE (Manguera flexible)
GAUGE (Manómetro)	UNION (Unión)
BALL VALVE (Válvula bola)	RELIEF VALVE (Válvula de seguridad)
CHECK VALVE (Válvula Cheque)	DEMAND VALVE (Válvula de demanda)
REGULATOR w/ GAUGE (Regulador con Manómetro)	TEMPERATURE SWITCH (Interruptor temperatura)
PRESSURE SWITCH/TRANSDUCER (Interruptor/transductor presión)	ELECTRIC AUTO DRAIN (Electroválvula de Drenaje)

DO NOT SCALE DRAWING FOR CONSIDERATIONS	DO NOT SCALE DRAWING FOR CONSIDERATIONS
SHEET 2 OF 2	SCALE 1:1
DATE	07/17/25
DESIGNED BY	Kumar Snehani
PROJECT NO.	761887
PROJECT NAME	TRIPLEX 120GAL DUPLEX
COMPANY	POWEREX
REVISION	B
DATE	

